

TC-WE625/WE725/ WE825S

SERVICE MANUAL



Photo: TC-WE825S

US Model

TC-WE625/WE825S

Canadian Model

TC-WE625

AEP Model

UK Model


TC-WE725/WE825S

E Model

Australian Model

Chinese Model

TC-WE625

Dolby noise reduction extension manufactured under license from Dolby Laboratories Licensing Corporation.
HX Pro originated by Bang & Olufsen. "DOLBY", the double-D symbol  and "HX PRO" are trademarks of Dolby Laboratories Licensing Corporation.

Model Name Using Similar Mechanism		TC-WE505/WE605S/WE705S
Tape Transport Mechanism Type	DECK A	TC-WE625 : TCM-190RB12CL TC-WE725/WE825S : TCM-190RB13C
	DECK B	TC-WE625 : TCM-190RB12CL TC-WE725/WE825S : TCM-190RB11C

SPECIFICATIONS

System

Recording system
4-track 2-channel stereo

Fast-winding time (approx.)
90 sec. (with Sony C-60 cassette)

High-speed fast-winding time (approx.) (TC-WE825S and TC-WE725 only)
45 sec. (with Sony C-60 cassette)

Bias
AC bias

Signal-to-noise ratio (at peak level and weighted with Dolby NR off)
Type I tape, Sony Type I (NORMAL): 55 dB
Type II tape, Sony Type II (HIGH): 57 dB
Type IV tape, Sony Type IV (METAL): 58 dB

S/N ratio improvement (approximate values)
With Dolby B NR on: 5 dB at 1 kHz, 10 dB at 5 kHz
With Dolby C NR on: 15 dB at 500 Hz, 20 dB at 1 kHz
With Dolby S NR on (TC-WE825S only): 10 dB at 100 Hz, 24 dB at 1 kHz

Harmonic distortion
0.4% (with Type I tape, Sony Type I (NORMAL):
160 nWb/m 315 Hz, 3rd H.D.)
1.8% (with Type IV tape, Sony Type IV (METAL):
250 nWb/m 315 Hz, 3rd H.D.)

Frequency response (Dolby NR off)

Tape type	
Type I tape, Sony Type I (NORMAL)	30-16,000 Hz (± 3 dB, IEC), 20-17,000 Hz (± 6 dB)
Type II tape, Sony Type II (HIGH)	30-17,000 Hz (± 3 dB, IEC), 20-18,000 Hz (± 6 dB)
Type IV tape, Sony Type IV (METAL)	30-19,000 Hz (± 3 dB, IEC), 20-20,000 Hz (± 6 dB), 30-13,000 Hz (± 3 dB, -4 dB recording)

– Continued on next page –

STEREO CASSETTE DECK



SONY®

Wow and flutter

± 0.13% W. Peak (IEC)
0.07% W. RMS (NAB)
± 0.18% W. Peak (DIN)

Variable pitch range (approx.)

–30 to +30%

Inputs

Line inputs (phono jacks)

Sensitivity : 0.16 V
Input impedance : 47 kilohms

Outputs

Line outputs (phono jacks)

Rated output level : 0.5 V at a load impedance of
47 kilohms
Load impedance : Over 10 kilohms

Headphones (stereo phono jack)

Output level : 0.25 mW at a load impedance of
32 ohms

General

Power requirements

Where purchased	Power requirements
US, Canadian	120 V AC, 60 Hz
AEP, UK, Chinese	220 - 230 V AC, 50/60 Hz
Australian	240 V AC, 50/60 Hz
Singapore, Malaysia	120/220/230 - 240 V AC, 50/60 Hz

Power consumption

30 W

Dimensions (approx.) (w/h/d)

Model for UK and Australian :
430 × 120 × 310 mm (w/h/d)
(17 × 4 3/4 × 12 1/4 in.)
Model for other countries :
430 × 120 × 290 mm (w/h/d)
including projecting parts and controls

Mass (approx.)

4.3 kg (9 lbs 8 oz)

Supplied accessories

Audio connecting cords (2 phono plugs - 2 phono
plugs) (2)
CONTROL A1 cord (supplied for Canadian models
only) (1)

*Design and specifications are subject to change without
notice.*

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:
Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers’ instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

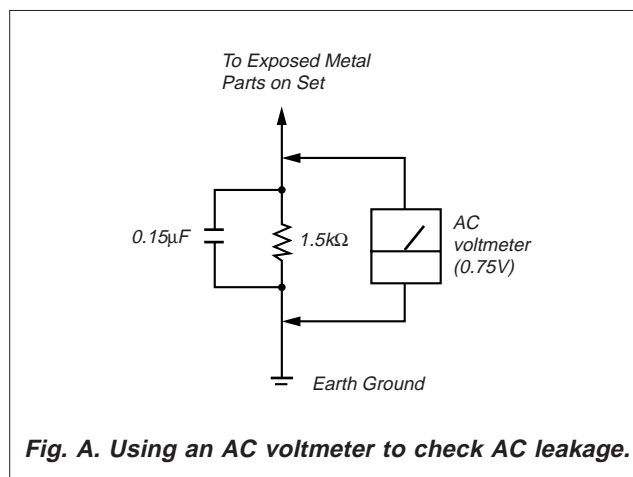


Fig. A. Using an AC voltmeter to check AC leakage.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE \triangle SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

MODEL IDENTIFICATION

–Back panel–



Part No.	Model
3-021-228-0π	TC-WE625 : US model
3-021-228-1π	TC-WE625 : CND model
3-021-228-2π	TC-WE625 : AUS model
3-021-228-3π	TC-WE625 : SP, MY model
3-021-228-4π	TC-WE625 : CH model
3-021-242-0π	TC-WE725 : AEP model
3-021-242-1π	TC-WE725 : UK model
3-021-243-0π	TC-WE825S : AEP model
3-021-243-1π	TC-WE825S : UK model
3-021-243-3π	TC-WE825S : US model

- Abbreviation
 - CND : Canadian model
 - AUS : Austrarian model
 - SP : Singapore model
 - MY : Malaysia model
 - CH : Chinese model

TABLE OF CONTENTS

1. GENERAL

- 1-1. Location of Controls 4

2. DISASSEMBLY

- 2-1. Front Panel Assy 5
 2-2. Mechanism Deck 5
 2-3. Fitting Base 6
 2-4. Capstan Motor, Reel Motor 6
 2-5. Head Deck Assy 7

3. MECHANICAL ADJUSTMENTS 8

4. ELECTRICAL ADJUSTMENTS 8

5. DIAGRAMS

- 5-1. IC Pin Description 12
 5-2. Circuit Boards Location 14
 5-3. Printed Wiring Boards –Main Section– 15
 5-4. Schematic Diagram –Main Section (1/4)– 17
 5-5. Schematic Diagram –Main Section (2/4)– 19
 5-6. Schematic Diagram –Main Section (3/4)– 21
 5-7. Schematic Diagram –Main Section (4/4)– 23
 5-8. Printed Wiring Boards –Power Section– 25
 5-9. Schematic Diagram –Power Section– 26
 5-10. Printed Wiring Boards –Panel Section– 27
 5-11. Schematic Diagram –Panel Section– 29
 5-12. Printed Wiring Boards –Deck A Section– 31
 5-13. Schematic Diagram –Deck A Section– 32
 5-14. Printed Wiring Boards –Deck B Section– 33
 5-15. Schematic Diagram –Deck B Section– 34
 5-16. Printed Wiring Board
 –DOLBY-S Section (TC-WE825S only)– 35
 5-17. Schematic Diagram
 –DOLBY-S Section (TC-WE825S only)– 35


6. EXPLODED VIEWS

- 6-1. Case Section 38
 6-2. Chassis Section 39
 6-3. Cassette Holder Section 40
 6-4. Front Panel Section 41
 6-5. Tape Mechanism Section 1 42
 6-6. Tape Mechanism Section 2 43

7. ELECTRICAL PARTS LIST 44

SECTION 1 GENERAL

1-1. LOCATION OF CONTROLS

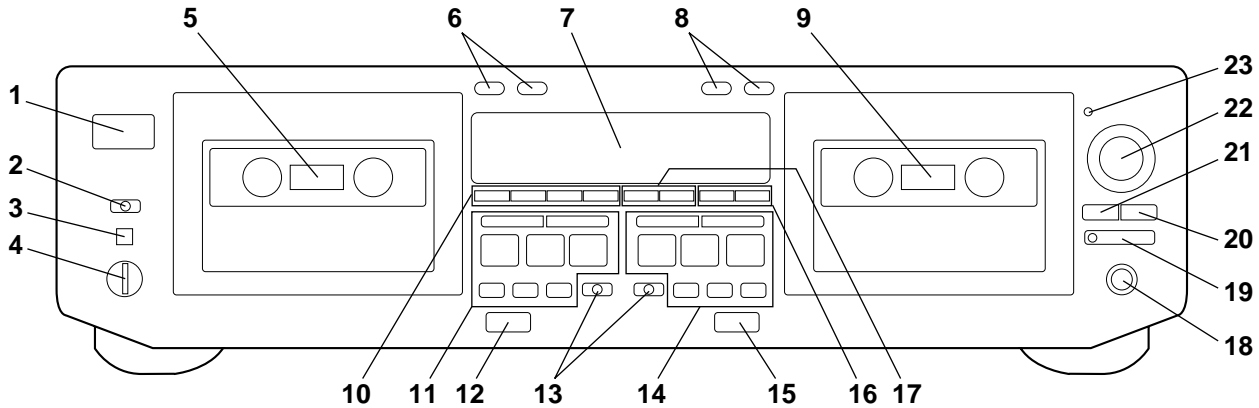

1. I/⏻ (Power) button (US, Canadian)
Ⓜ (Power) button (EXCEPT US, Canadian)
2. DIRECTION MODE switch
3. PITCH CONTROL (⏮ ON/⏭ OFF) switch (TC-WE725/WE825S)
4. PITCH CONTROL knob (TC-WE725/WE825S)
5. Cassette holder (Deck A)
6. COUNTER A buttons (Deck A)
RESET button
MEMORY button
7. Display window
8. COUNTER B buttons (Deck B)
RESET button
MEMORY button
9. Cassette holder (Deck B)
10. RMS buttons
RMS/START button
SET button
CHECK button
DISPLAY button
11. Tape operation buttons (Deck A)
◀◀ (AMS), RMS - button
▶▶ (AMS), RMS + button
■ CLEAR (Stop) button
◁ BACK (Reverse play) button
▷ FRONT (Forward play) button
⏸ PAUSE button
○ REC MUTING button
● REC button
12. ≡ (Eject) button (Deck A)
13. DOLBY NR switches
ON, OFF, FILTER switch
B, C, S switch ("S" use for TC-WE825S)
14. Tape operation buttons (Deck B)
◀◀ (AMS) button
▶▶ (AMS) button
■ (Stop) button
◁ (Reverse play) button
▷ (Forward play) button
⏸ PAUSE button
○ REC MUTING button
● REC button
15. ≡ (Eject) button (Deck B)
16. START (DECK B ■) buttons
A+B REC button
HIGH/NORMAL, DUBBING A→B button
17. AUTO CAL (START ■) buttons
DECK A button
DECK B button
18. PHONES jack
19. SYNCHRO button and indicator
20. ARL button
21. FADER button
22. REC LEVEL knob
23. AUTO indicator

SECTION 2 DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.


CASE

Unscrew the five case attachment screws M3 × 8 and remove the case.

2-1. FRONT PANEL ASSY


POWER VOLTAGE SELECTOR 1 - 2 (Singapore, Malaysia)

FRONT PANEL ASSY 1 - 17

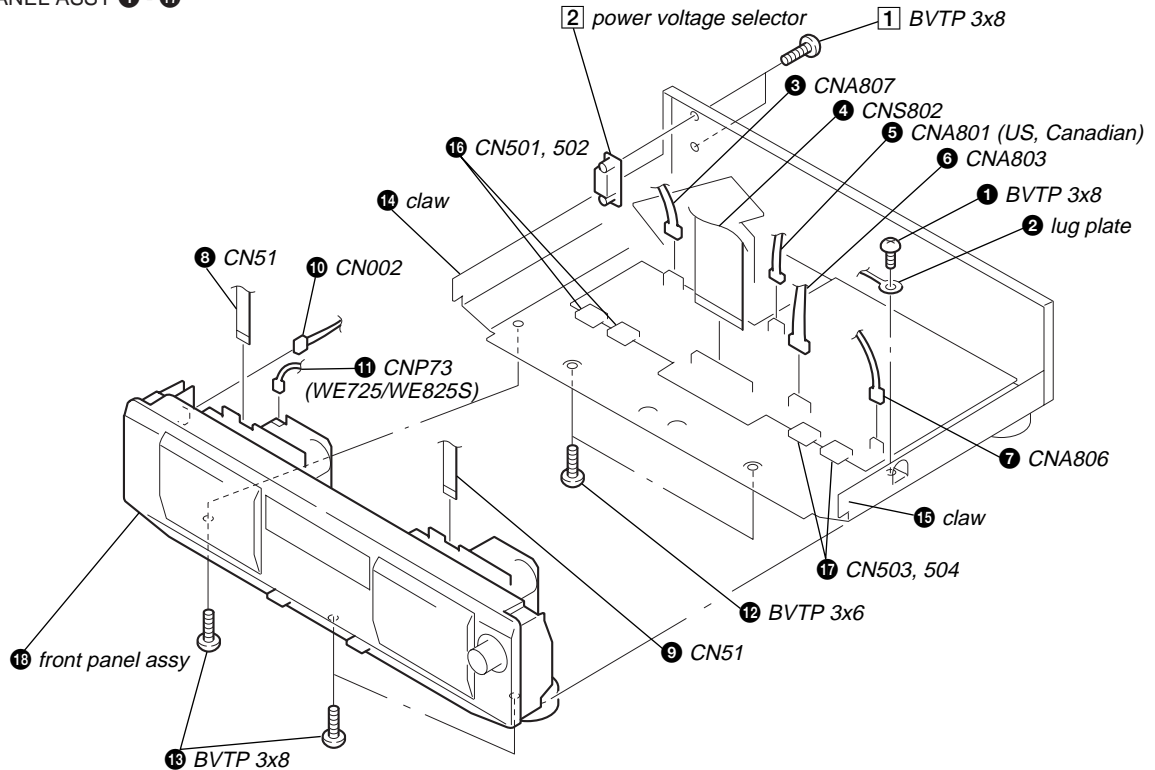


2-2. MECHANISM DECK


1 Press the EJECT button.

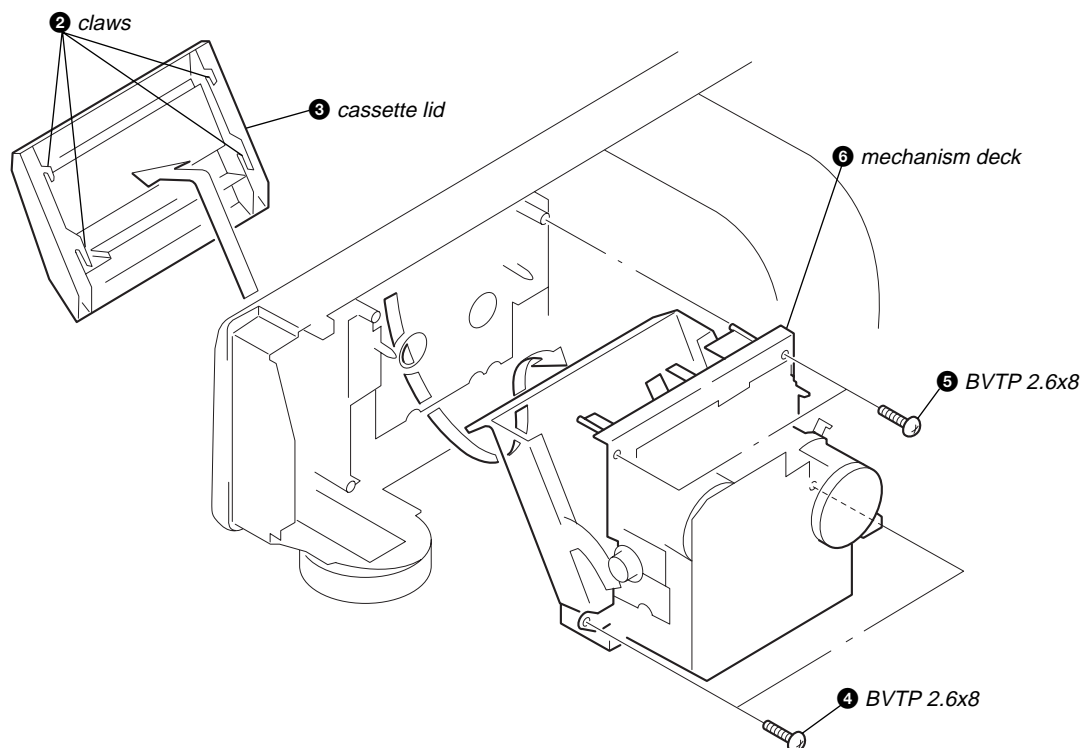


2-3. FITTING BASE

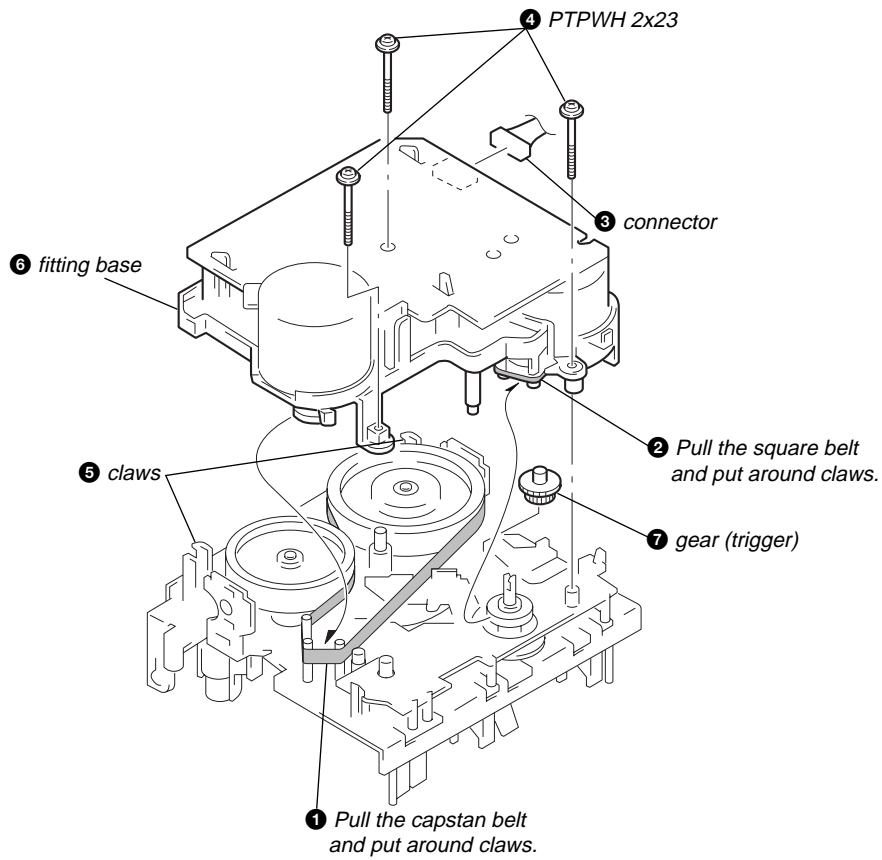

2-4. CAPSTAN MOTOR, REEL MOTOR

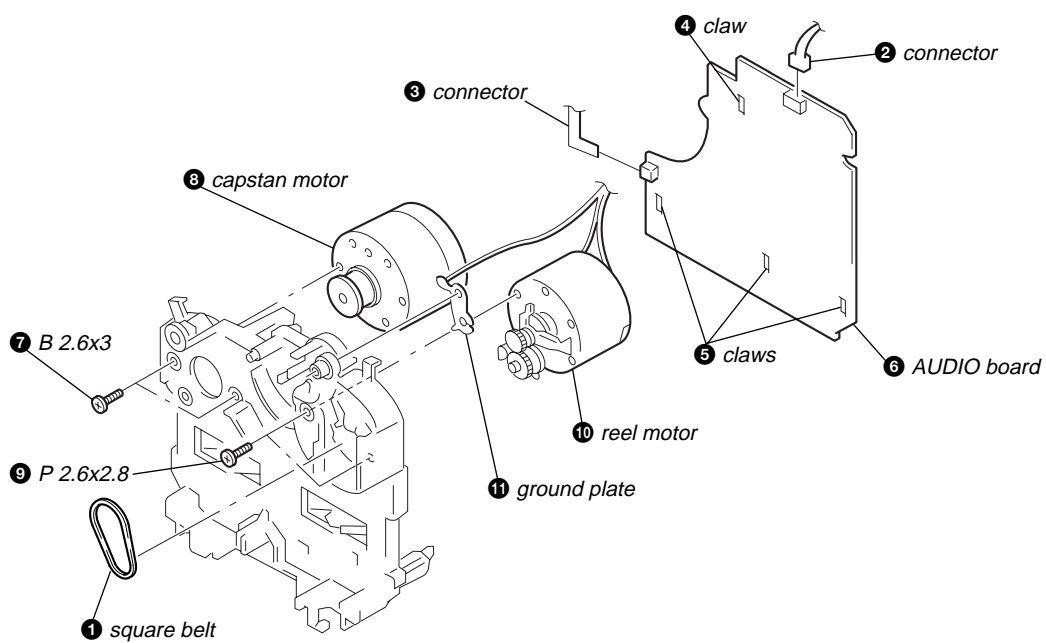

2-5. HEAD DECK ASSY

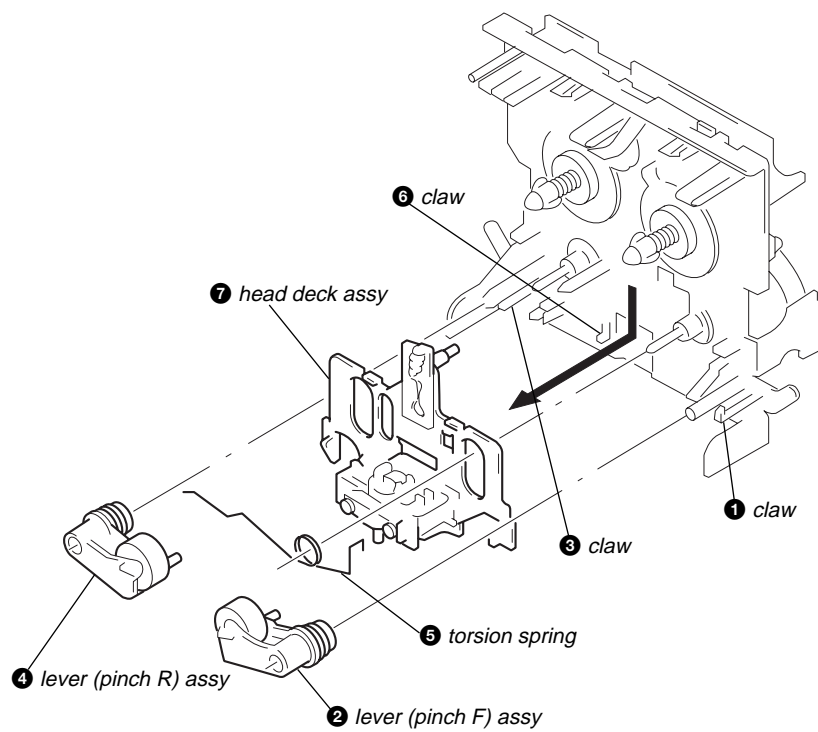

SECTION 3 MECHANICAL ADJUSTMENTS

PRECAUTION

- Clean the following parts with a denatured alcohol-moistened swab :

record/playback/erase head	pinch roller
rubber belts	capstan
idlers	
- Demagnetize the record/playback head with a head demagnetizer.
- Do not use a magnetized screwdriver for the adjustment.
- After the adjustments, apply suitable locking compound to the parts adjusted.
- The adjustments should be performed with the rated power supply voltage unless otherwise noted.

Torque Measurement

Mode	Torque meter	Meter reading
Forward	CQ-102C	30 to 65 g • cm (0.42 to 0.90 oz • inch)
Forward back tension	CQ-102C	DECK A : 1 to 6 g • cm (0.014 to 0.083 oz • inch) DECK B : 2 to 9 g • cm (0.028 to 0.125 oz • inch)
Reverse	CQ-102RC	30 to 65 g • cm (0.42 to 0.90 oz • inch)
Reverse back tension	CQ-102RC	1 to 6 g • cm (0.014 to 0.083 oz • inch)
FF/REW	CQ-201B	70 to 120 g • cm (0.97 to 1.67 oz • inch)


SECTION 4 ELECTRICAL ADJUSTMENTS

PRECAUTION

- The adjustment should be performed in the publication.
(Be sure to make playback adjustment at first.)
- The adjustments and measurement should be performed for both L-CH and R-CH.
 - Switch position

DOLBY NR switch	: OFF
DIRECTION MODE switch	: \longleftrightarrow
 - Standard record position :
Deliver the standard input signal level to input jack and set the REC LEVEL control to obtain the standard output signal level as follows.

– Record Mode –

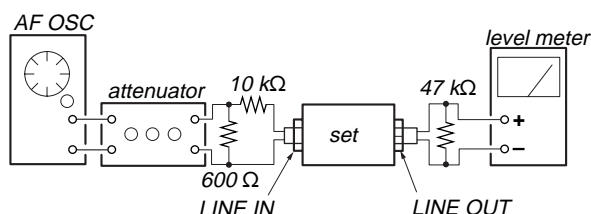

Standard Input Level

Input terminal	LINE IN
source impedance	10 kΩ
input signal level	0.5 V (–3.8 dB)

Standard Output Level

Output terminal	LINE OUT
load impedance	47 kΩ
output signal level	0.5 V (–3.8 dB)

Test Tape

Tape	Contents	Use
P-4-A100	10 kHz, –10 dB	Azimuth Adjustment
WS-48B	3 kHz, 0 dB	Tape Speed Adjustment
P-4-L300	315 Hz, 0 dB	PB Level Adjustment

0 dB = 0.775 V

Test Mode


- Turn ON power switch pressing “REC MUTING” switch of deck A and B at the same time.
At first, all the fluorescent indicator light up, then the system returns to normal display. (However, “0. 00” is not displayed on the counter.)
- To release the test mode, turn OFF the power switch.

Record/Playback Head Azimuth Adjustment


DECK A **DECK B**

Procedure:


1. Forward Playback Mode

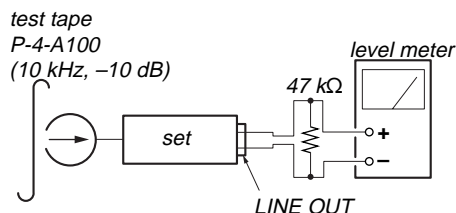

2. Turn the adjustment screw for the maximum output levels. If these levels do not match, turn the adjustment screw until both of output levels match together within 1 dB.

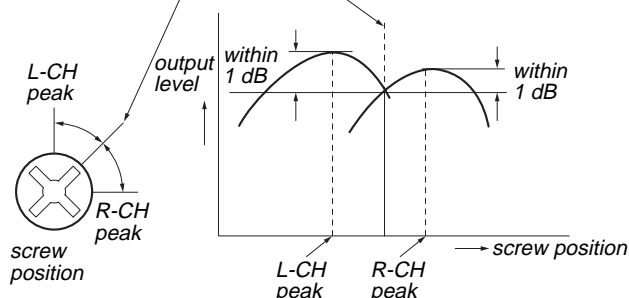


3. Playback Mode

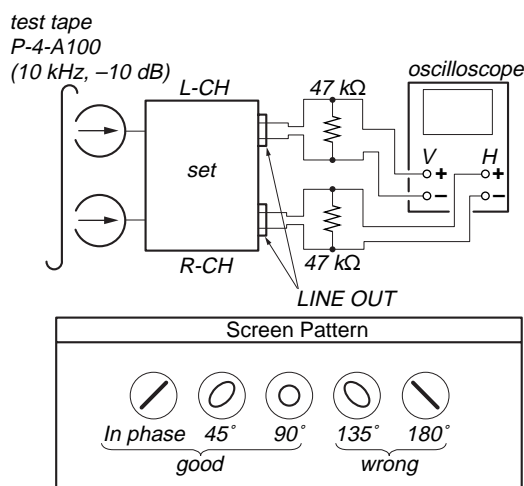

4. Change the reverse playback mode and repeat the steps 1 to 3.
5. After the adjustment, lock the adjustment screws with suitable locking compound.

Adjustment Location: –record/playback head–

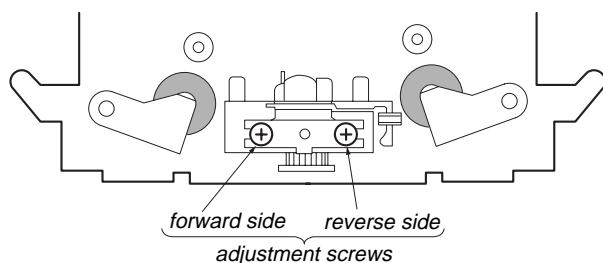


Tape Speed Adjustment

DECK A **DECK B**

Procedure:

–Forward Playback Mode–

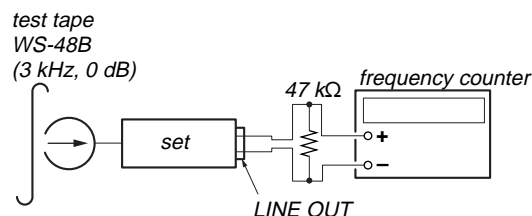

(High speed adjustment)

1. Set to test mode. (Refer to page 8.)
2. Set to FWD playback mode.
3. Twice pressing the HIGH/NORMAL switch.
4. Adjust RV72 so that the frequency counter reading becomes $6,000 \pm 20$ Hz.
5. Release test mode after adjustment is completed.

(Normal speed adjustment)

1. Set to FWD playback mode.
2. Adjust RV71 so that the frequency counter reading becomes $3,000 \pm 10$ Hz.

(Pitch control adjustment) (TC-WE725/WE825S only)

1. Push the PITCH CONTROL switch.
2. Set RV902 to mechanical center.
3. Set to FWD playback mode.
4. Adjust RV601 so that the frequency counter reading becomes $3,000 \pm 10$ Hz.

Frequency difference between the beginning and the end of the tape should be within $\pm 3\%$.

Frequency difference between the deck A and deck B the beginning of the tape should be within $\pm 1.5\%$.


Adjustment Location: AUDIO board, MAIN board
(See page 11.)

Playback Level Adjustment

DECK A **DECK B**

Procedure:

–Forward Playback Mode–

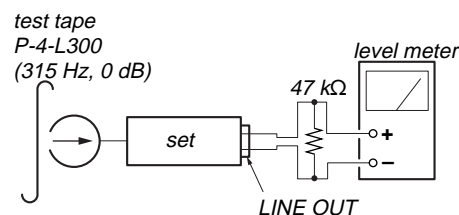

Adjust RV11 (L-CH) and RV21 (R-CH) so the level meter reading becomes the adjustment limits below.

Adjustment Value:

LINE OUT level : -7.7 ± 0.5 dB (0.301 to 0.338 V)

Level difference between channels : within 0.5 dB

Confirm that the LINE OUT level does not change in playback mode while changing the mode from playback to stop several times.


Adjustment Location: AUDIO board (See page 11.)

Bias Consumption Current Adjustment

DECK A **DECK B**

This adjustment should be performed when replacing the head assy or the bias oscillator transformer (T81, T91).

Procedure:

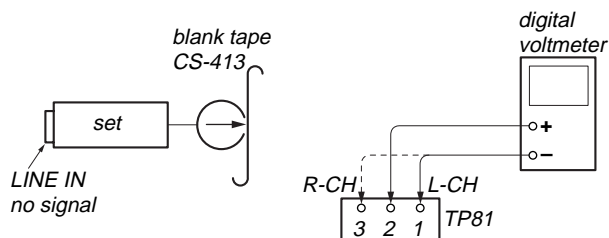

1. Connect the digital voltmeter to test point TP81.
2. Set RV81 (L-CH), RV91 (R-CH) to mechanical center.
3. Set to FWD record mode.
4. Adjust T81 (L-CH), T91 (R-CH) so that the digital voltmeter reading becomes minimum.

Adjustment Value: Maximum 220 mV

Adjustment Location: AUDIO board (See page 11.)

Record Bias Adjustment


DECK A **DECK B**

Setting:


REC LEVEL control : standard record position (See page 8.)

Procedure:

1. Record Mode

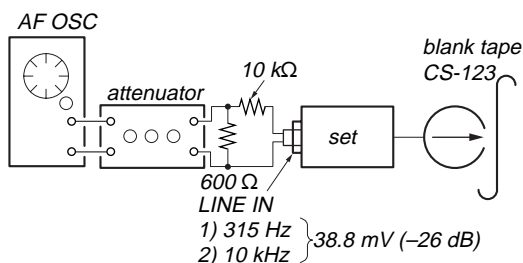

2. Playback Mode

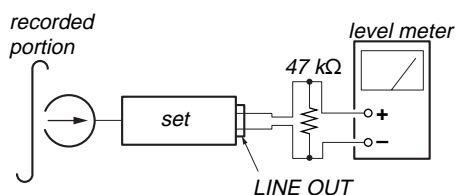

Confirm that the 10 kHz playback output is 0 ± 0.5 dB relative to the 315 Hz output. If necessary, adjust RV81 (L-CH), RV91 (R-CH) and repeat the steps given above.

Adjustment Location: AUDIO board (See page 11.)

Record Level Adjustment


DECK A **DECK B**

Setting:


REC LEVEL control : standard record position (See page 8.)

Procedure:

1. Record Mode

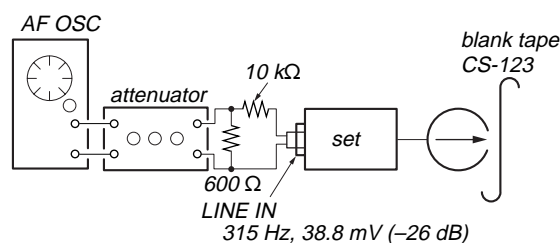

2. Playback Mode

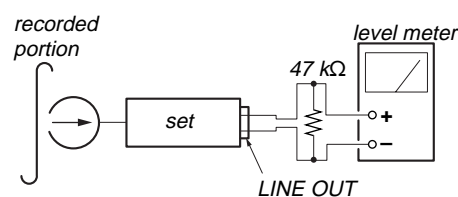

Confirm playback the tape recorded become adjustment level as follows.

If necessary, adjust Deck A : RV102 (L-CH), RV202 (R-CH) and Deck B : RV101 (L-CH), RV201 (R-CH) and repeat the steps 1 and 2.


Adjustment Value:

LINE OUT level : -26 ± 0.5 dB (36.7 to 41.1 mV)


Adjustment Location: MAIN board (See page 11.)

Adjustment Location:

—audio board (component side)—

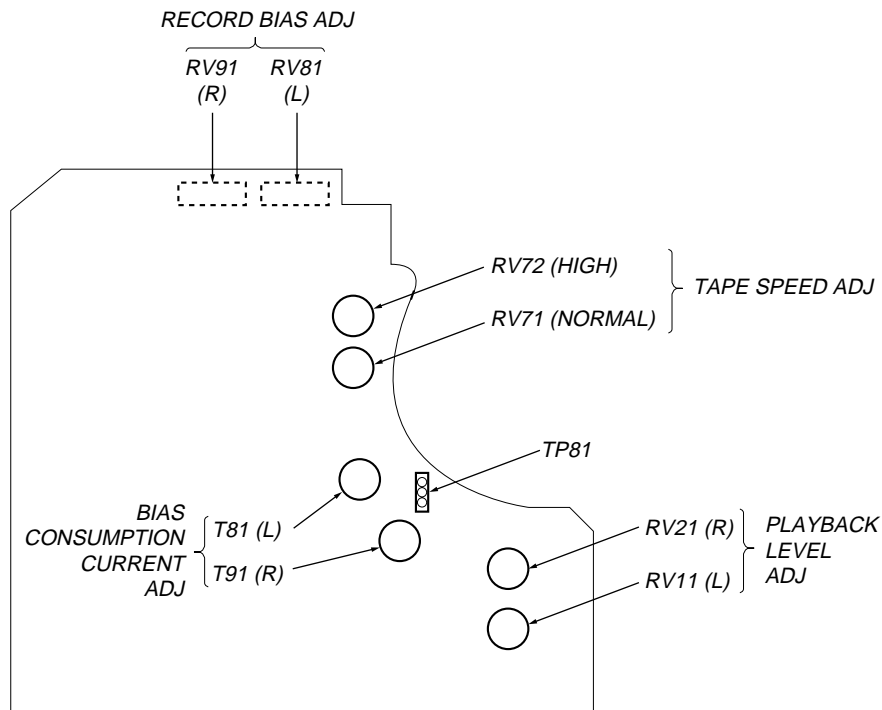

—main board (component side)—

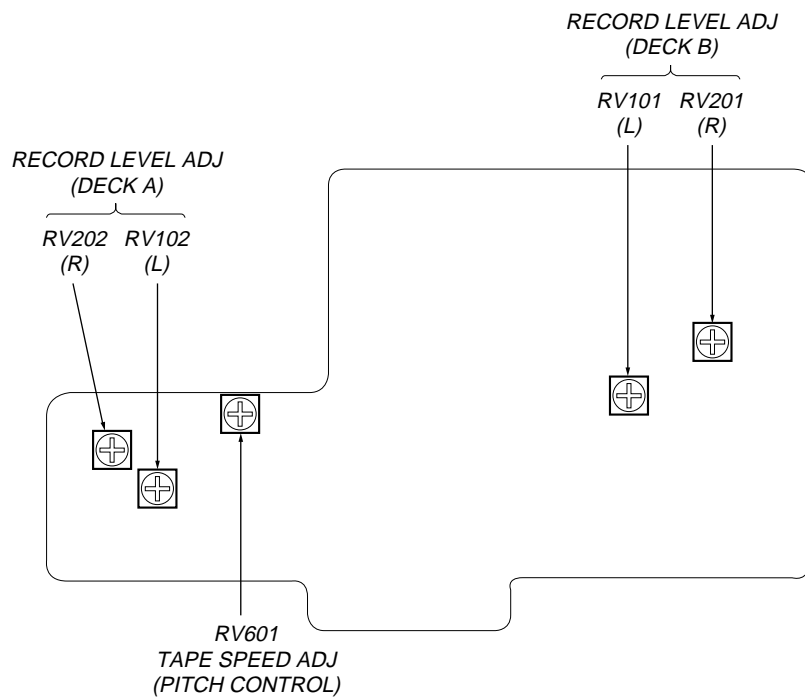

SECTION 5 DIAGRAMS


5-1. IC PIN DESCRIPTION

• IC801 CXP82432A-006Q (SYSTEM CONTROLLER)

Pin No.	Pin Name	I/O	Pin Description
1	T-REEL (A)	I	Take-up reel rotation detection input (DECK A)
2	S-REEL (B)	I	Supply reel rotation detection input (DECK B)
3	T-REEL (B)	I	Take-up reel rotation detection input (DECK B)
4	SIRCS IN	I	Sircs signal input
5	POWER IN	I	Power-off detection input
6	VOL OUT	O	Record level control output (PWM)
7	A/B SEL	I	Playback A/B selector input “L” : A, “H” : B
8	CONTROL-A IN	I	Control A signal input
9	CONTRL-A OUT	O	Control A signal output
10	REC MUTE (A)	O	Recording mute output (DECK A) “L” : Mute ON
11	REC CAL 0 (A)	O	Recording CAL-0 output for auto calibration. (DECK A)
12	REC CAL 1 (A)	O	Recording CAL-1 output for auto calibration. (DECK A)
13	GP CAL 0 (A)	O	GEQ CAL-0 output for auto calibration. (DECK A)
14	GP CAL 1 (A)	O	GEQ CAL-1 output for auto calibration. (DECK A)
15	REC/PB	O	Record/playback dolby NR mode selector output “L” : Playback
16	REC MUTE (B)	O	Recording mute output (DECK B) “L” : Mute ON
17	AMS IN	I	AMS signal input “L” : Music present
18	CAL/ÖFF/Š	O	Audio selector “H” : CAL, “Open” : Dolby off, “L” : Dolby S
19	C/B/ÖÖ	O	Dolby selector “H” : C, “Open” : B, “L” : Dolby off
20	REC CAL 0 (B)	O	Recording CAL-0 output for auto calibration. (DECK B)
21	REC CAL 1 (B)	O	Recording CAL-1 output for auto calibration. (DECK B)
22	GP CAL 0 (B)	O	GEQ CAL-0 output for auto calibration. (DECK B)
23	GP CAL 1 (B)	O	GEQ CAL-1 output for auto calibration. (DECK B)
24	POWER OUT	O	Power hold output
25	RECEQ HIGH/NORM	O	REC EQ high/normal select output “L” : Normal
26	PASS/MÜTE/DOLBY	O	Audio selector “H” : Pass, “Open” : Mute, “L” : Dolby
27	BS/AMS/ÖÖ	O	AMS amp selector “H” : BS, “Open” : AMS, “L” : OFF
28	EX IN 0	I	Expander control input (0)
29	EX IN 1	I	Expander control input (1)
30	EXP CTRL 0	O	Expander control output (0)
31	EXP CTRL 1	O	Expander control output (1)
32	A/D IN 0	I	Expander A/D input (0)
33	A/D IN 1	I	Expander A/D input (1)
34	KEY 5	I	Key 5 input (A/D converter)
35	VOL IN	I	Record volume input (A/D converter)
36	TEST/PITCH/VER	I	Test mode/pitch control/version input
37	CD SYNC LED	O	CD SYNCHRO LED driver “L” : ON
38	RESET	I	System reset input
39	EXTAL	I	System clock oscillator input (10 MHz)
40	XTAL	O	System clock oscillator output (10 MHz)
41	VSS	—	Ground
42	TX	—	Connected to ground.
43	TEX	—	Connected to ground.
44	ARL LED	O	ARL LED driver “H” : ON
45	PITCH ON/OFF	O	Pitch control ON/OFF output “L” : ON
46	AVREF	I	Reference voltage input for A/D converter.
47	AVSS	—	Ground for A/D converter.
48	LINE MUTE	O	Line mute ON/OFF control output “L” : Mute ON
49	OSC H/L	O	OSC frequency H/L select output for auto calibration.
50	OSC ON/OFF	O	OSC ON/OFF select output for auto calibration.
51	BIAS CAL 0 (B)	O	EQ bias CAL-0 output for auto calibration. (DECK B)

Pin No.	Pin Name	I/O	Pin Description
52	BIAS CAL 1 (B)	O	EQ bias CAL-1 output for auto calibration. (DECK B)
53	BIAS CAL 2 (B)	O	EQ bias CAL-2 output for auto calibration. (DECK B)
54	BIAS CAL 3 (B)	O	EQ bias CAL-3 output for auto calibration. (DECK B)
55	BIAS CAL 0 (A)	O	EQ bias CAL-0 output for auto calibration. (DECK A)
56	BIAS CAL 1 (A)	O	EQ bias CAL-1 output for auto calibration. (DECK A)
57	BIAS CAL 2 (A)	O	EQ bias CAL-2 output for auto calibration. (DECK A)
58	BIAS CAL 3 (A)	O	EQ bias CAL-3 output for auto calibration. (DECK A)
59	CAP.M (B)	O	Capstan motor driver output (DECK B) "H" : ON
60	CAP.M (A)	O	Capstan motor driver output (DECK A) "H" : ON
61	CAP.M H/L	O	Capstan motor high/normal select output "L" : ON
62 – 77	P16 – P1	O	Fluorescent indicator tube segment driver
78 – 85	G1 – G8	O	Fluorescent indicator tube grid driver
86	G6,G7	O	Fluorescent indicator tube grid driver
87	G7,G8	O	Fluorescent indicator tube grid driver
88	VFDP	—	Fluorescent indicator tube power supply (-28 V)
89	VDD	—	Power supply (+5 V)
90	N.C	—	Connected to power supply.
91	VSS	—	Ground
92	REEL (A) +	O	Reel motor (+) output (DECK A)
93	REEL (A) -	O	Reel motor (-) output (DECK A)
94	REEL (B) +	O	Reel motor (+) output (DECK B)
95	REEL (B) -	O	Reel motor (-) output (DECK B)
96	BIAS (A)	O	Bias ON/OFF output (DECK A) "H":ON
97	RELAY (A)	O	Relay record/playback selector output (DECK A) "L" : Record
98	BIAS (B)	O	Bias ON/OFF output (DECK B) "H" : ON
99	RELAY (B)	O	Relay record/playback selector output (DECK B) "L" : Record
100	S-REEL (A)	I	Supply reel rotation detection input (DECK A)

5-2. CIRCUIT BOARDS LOCATION

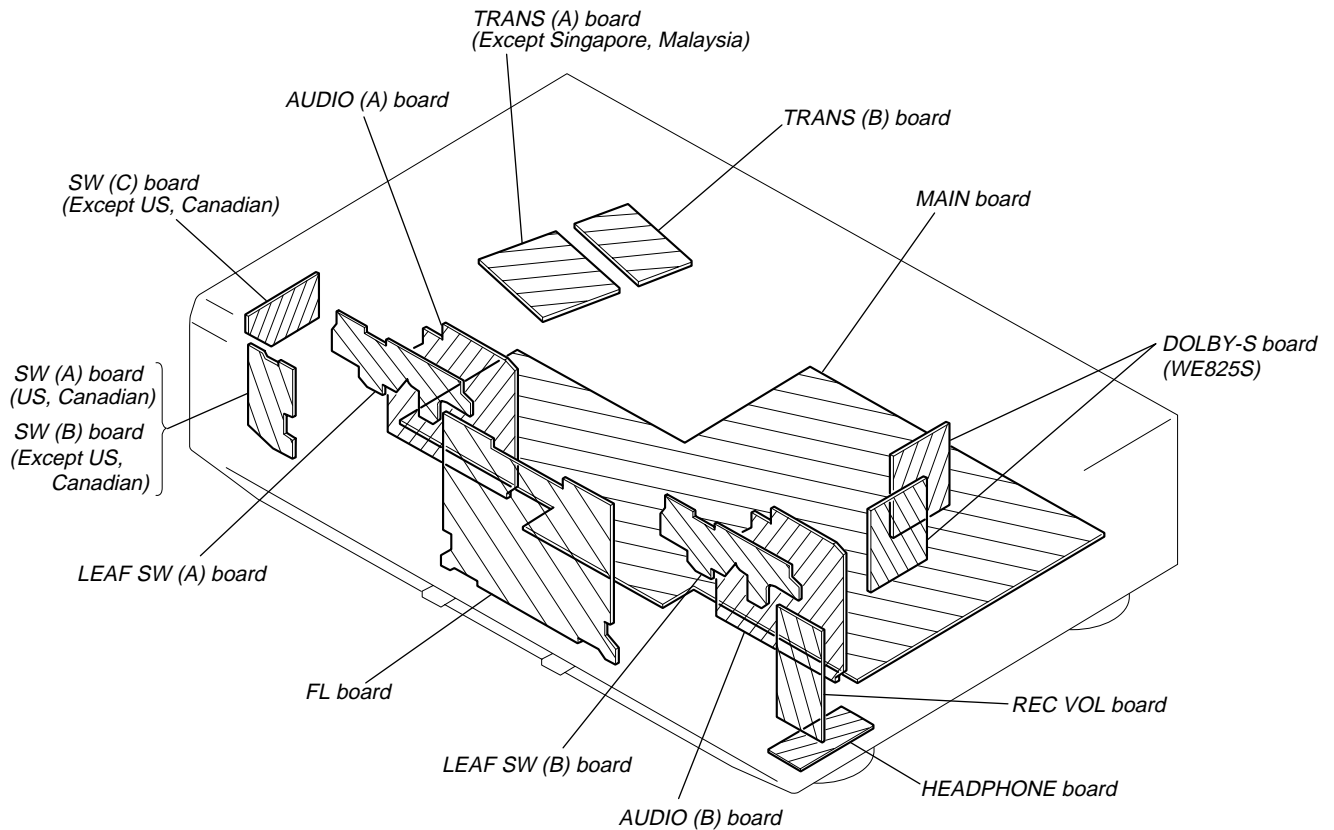

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

• **For printed wiring boards.**

- : parts extracted from the component side.
- : Through hole.
- : Pattern from the side which enables seeing.
(The other layers' patterns are not indicated.)

: Chip transistor of abbreviation (E, C, B)

• **For schematic diagrams.**

- All capacitors are in μF unless otherwise noted. pF : μpF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4\text{ W}$ or less unless otherwise specified.
- % : indicates tolerance.
- Δ : internal component.
- : fusible resistor.
- : panel designation.

Note:

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

Note:

Les composants identifiés par une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

- : B+ Line.
- : B- Line.
- : adjustment for repair.
- Voltage is dc with respect to ground under no-signal (detuned) condition.

no mark : PB (DECK A)
() : REC (DECK A)
< > : PB (DECK B)
[] : REC (DECK B)
<< >> : STOP
* : Impossible to measure

- Voltages are taken with a VOM (Input impedance 10 M Ω).
Voltage variations may be noted due to normal production tolerances.

• Signal path.

: PB (DECK A)
 : REC (DECK A)
 : PB (DECK B)
 : REC (DECK B)


• Abbreviation

CND : Canadian model.
AUS : Australian model.
SP : Singapore model.
MY : Malaysia model.
CH : Chinese model.




5-4. SCHEMATIC DIAGRAM — MAIN SECTION (1/4) — • Refer to page 37 for IC Block Diagrams.


• Semiconductor Location	
Ref. No.	Location
D101	E-6
D201	E-6
D401	A-4
D521	B-1
D522	B-1
D601	H-6
D602	H-6
D701	A-9
D702	A-8
D703	B-8
D704	B-8
D705	A-8
D706	A-8
D707	B-8
D708	A-5
D709	A-5
D710	A-6
D711	B-6
D712	A-8
D713	A-8
D714	C-8
D715	B-7
D716	C-8
D801	F-8
D802	F-8
D803	F-8
D804	F-8
IC501	C-2
IC502	F-1
IC504	E-12
IC561	A-1
IC601	E-10
IC701	A-6
IC801	F-7
IC802	F-6
IC803	E-6
IC804	E-5
IC805	F-4
IC806	G-12
IC807	G-12
IC808	G-3
IC809	G-4
Q101	E-2
Q201	D-1
Q202	A-3
Q401	A-4
Q451	G-13
Q452	F-11
Q453	F-12
Q461	G-2
Q462	F-3
Q463	F-3
Q501	B-3
Q502	B-1
Q503	B-1
Q601	H-6
Q602	H-6
Q603	H-6
Q604	H-7
Q605	H-6
Q606	H-7
Q607	H-7
Q621	D-13
Q701	A-7
Q702	B-6
Q703	A-8
Q704	A-8
Q705	A-7
Q706	A-8
Q707	B-8
Q708	C-8
Q801	F-8
Q802	D-7

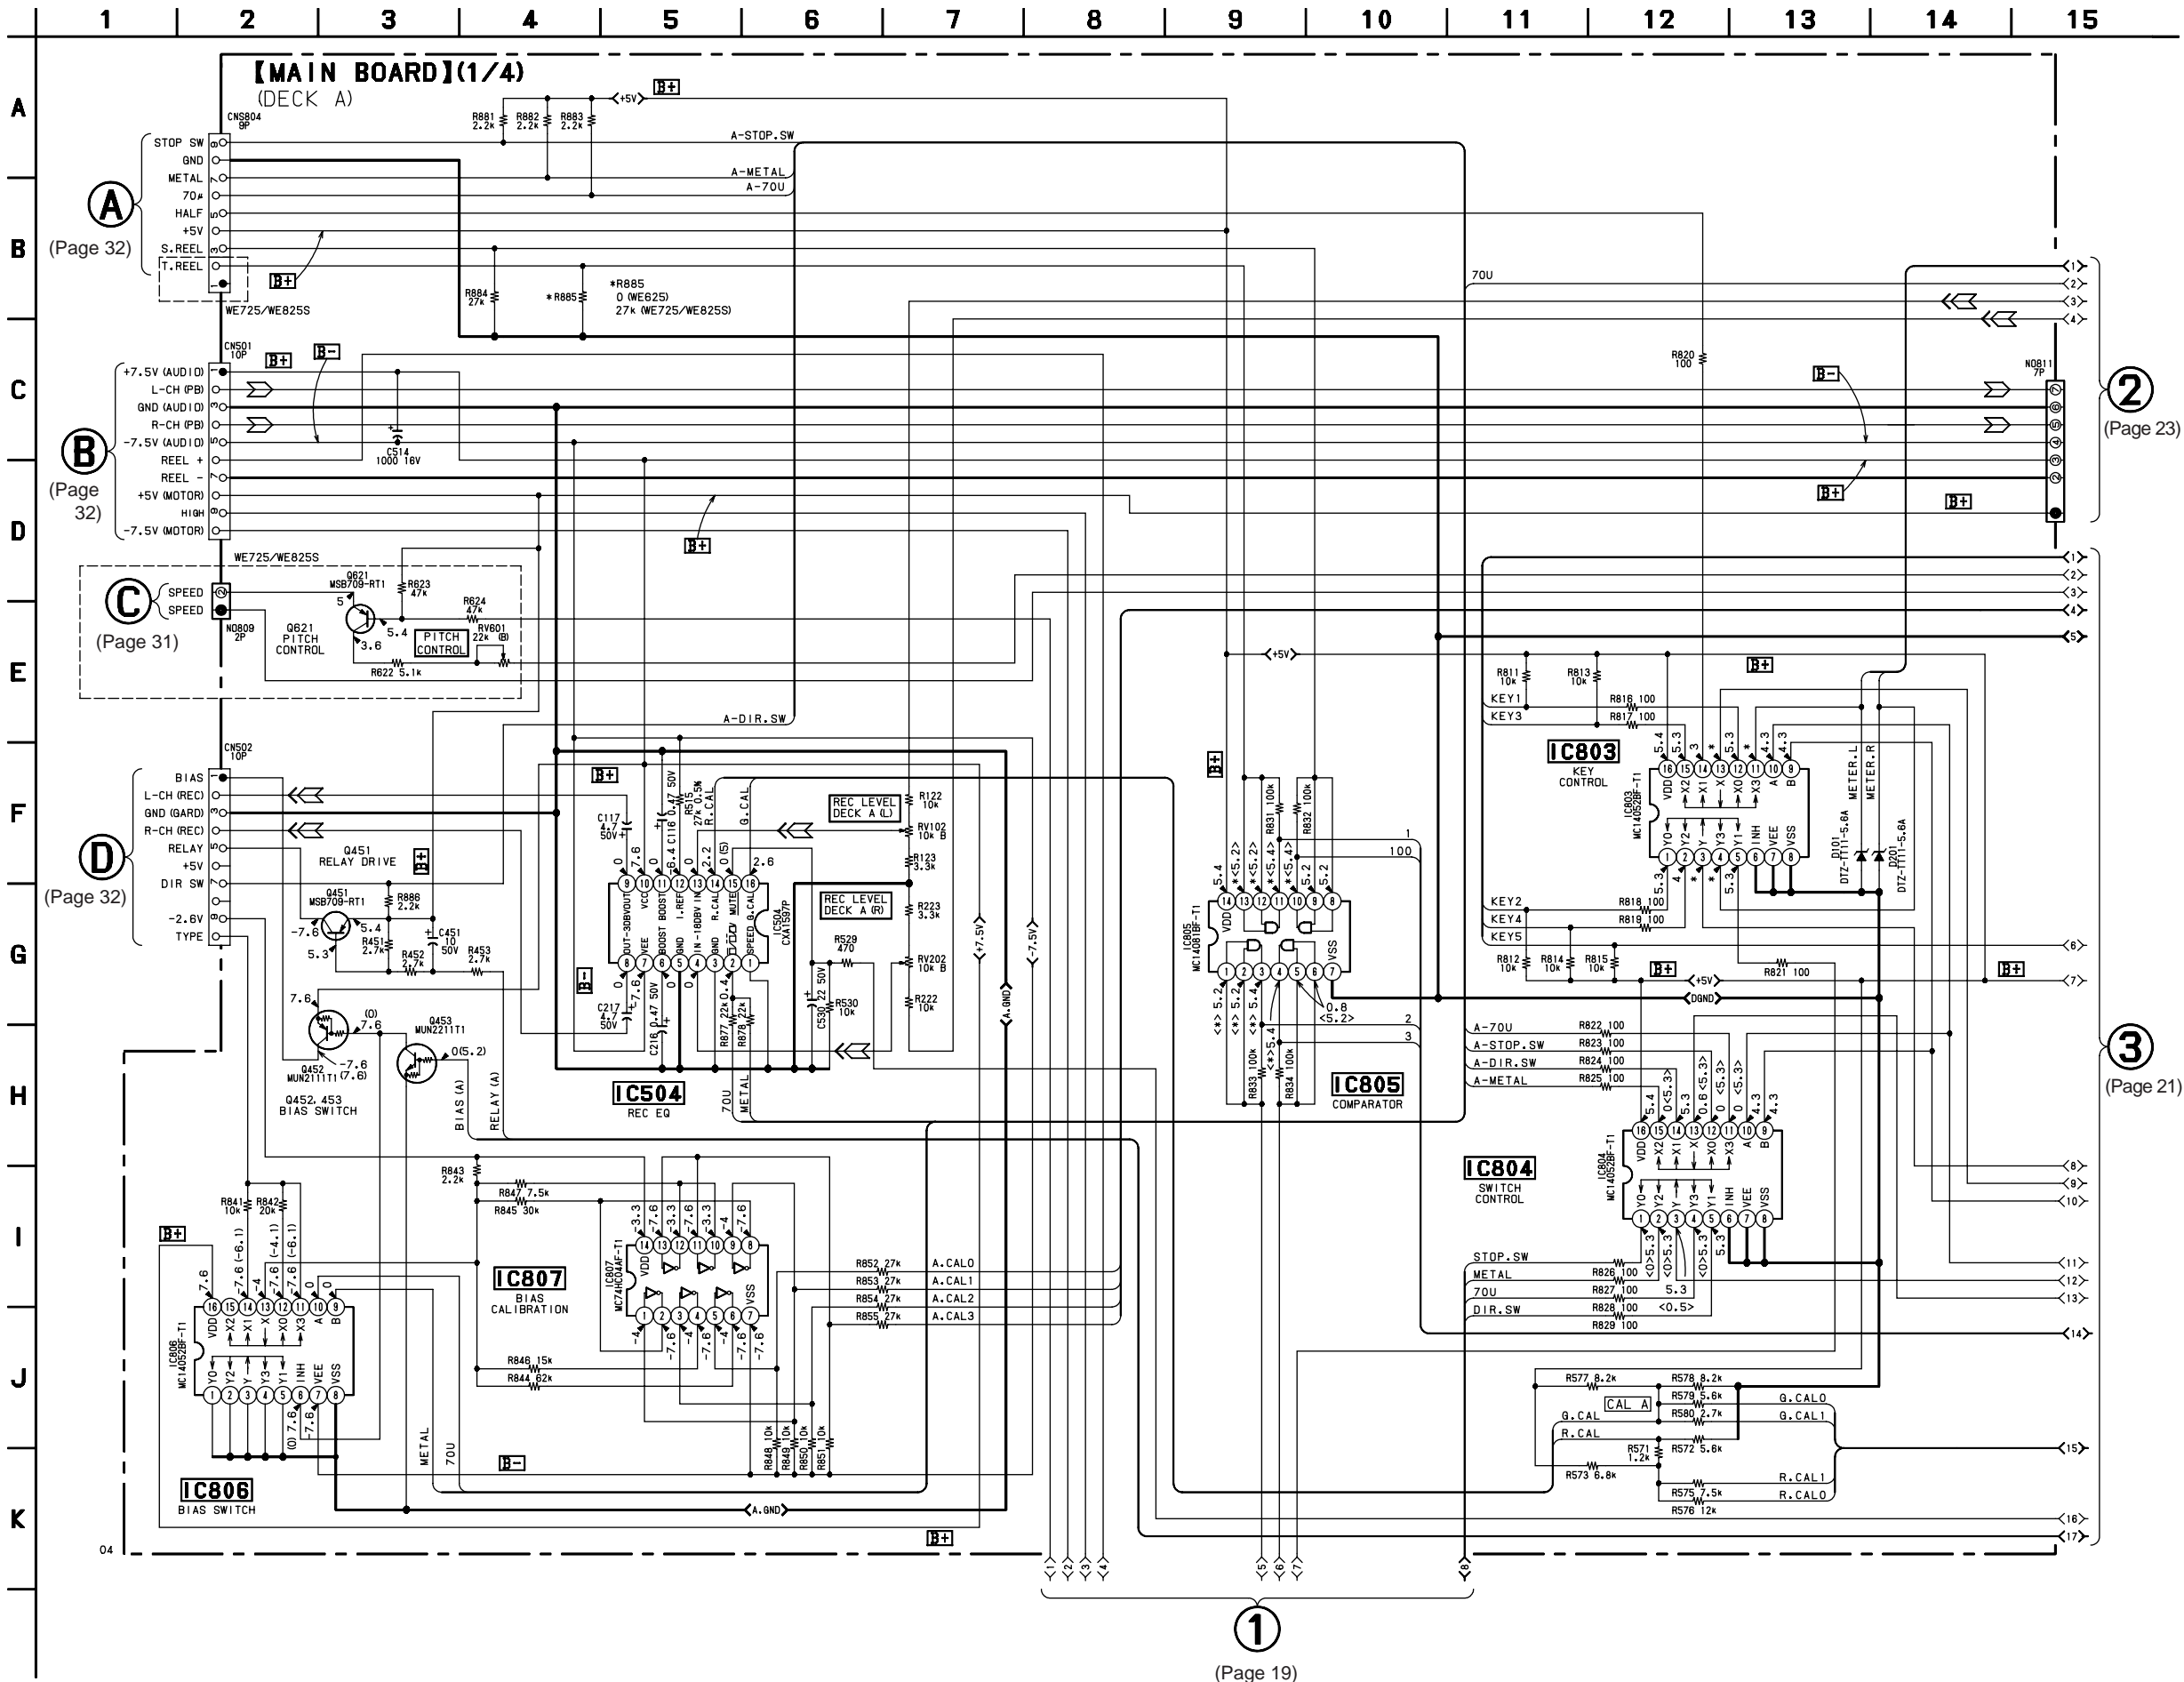


5-5. SCHEMATIC DIAGRAM — MAIN SECTION (2/4) — • Refer to page 37 for IC Block Diagrams.

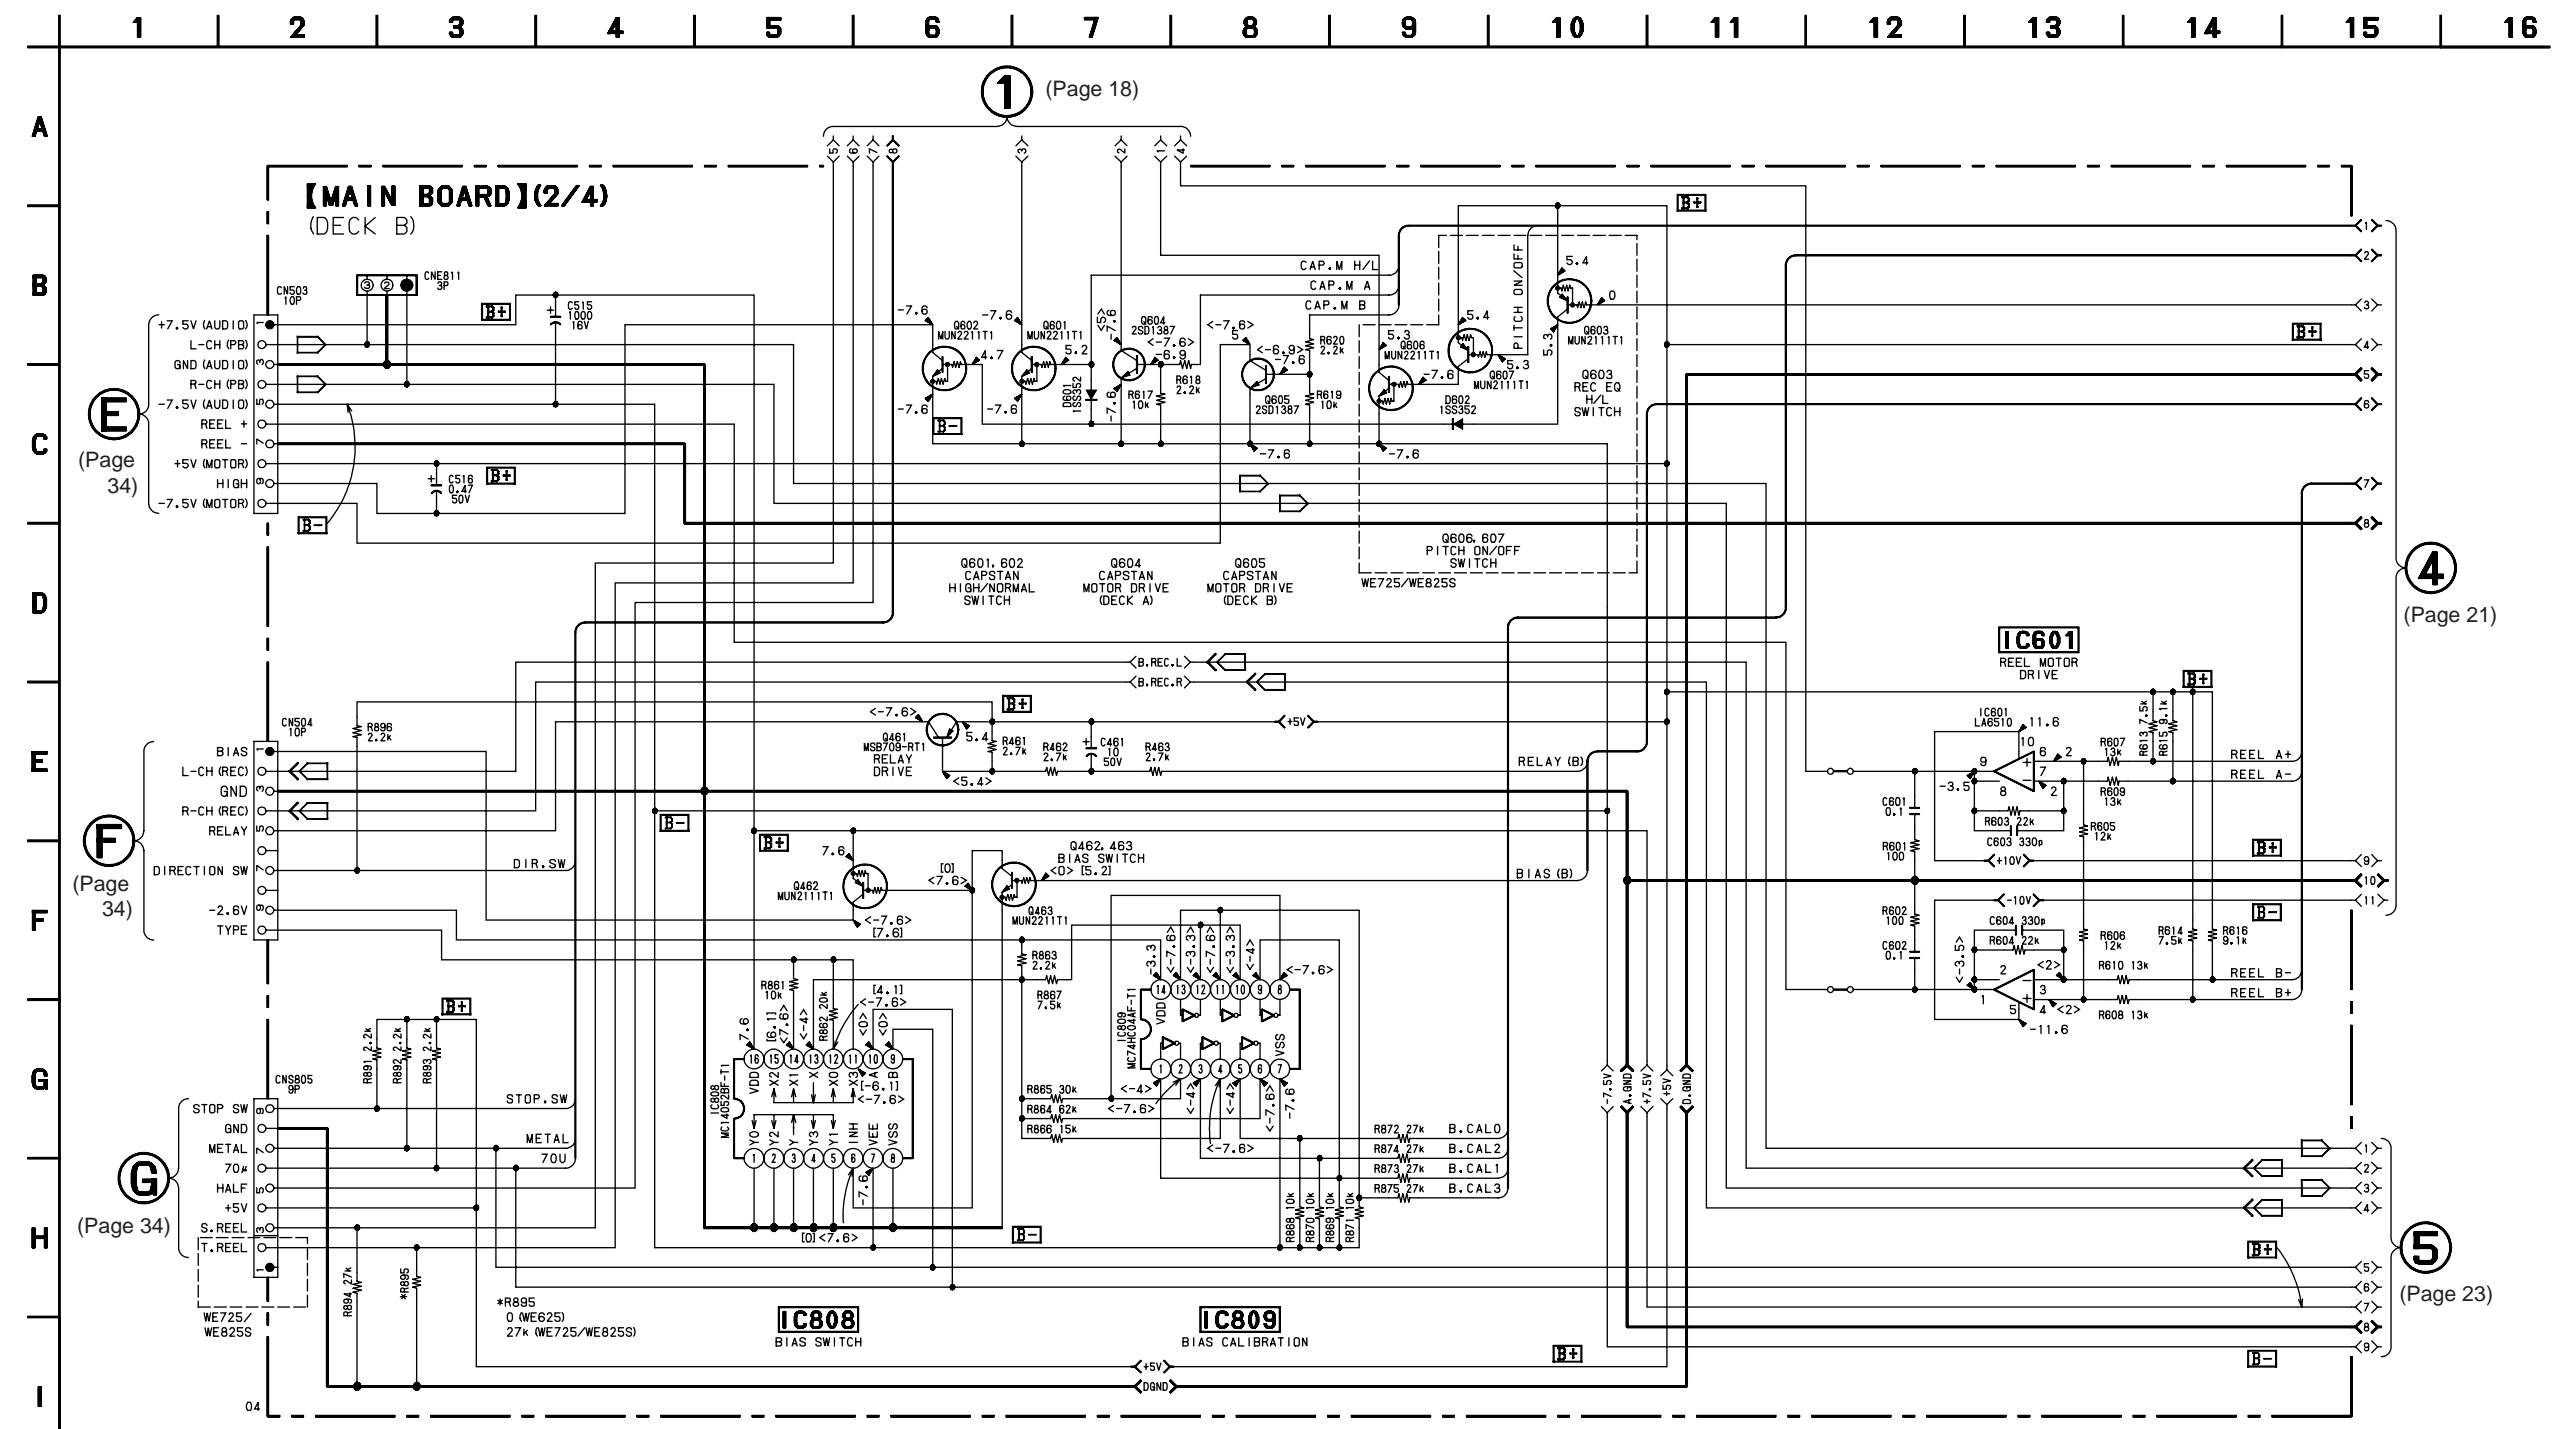


5-6. SCHEMATIC DIAGRAM — MAIN SECTION (3/4) —

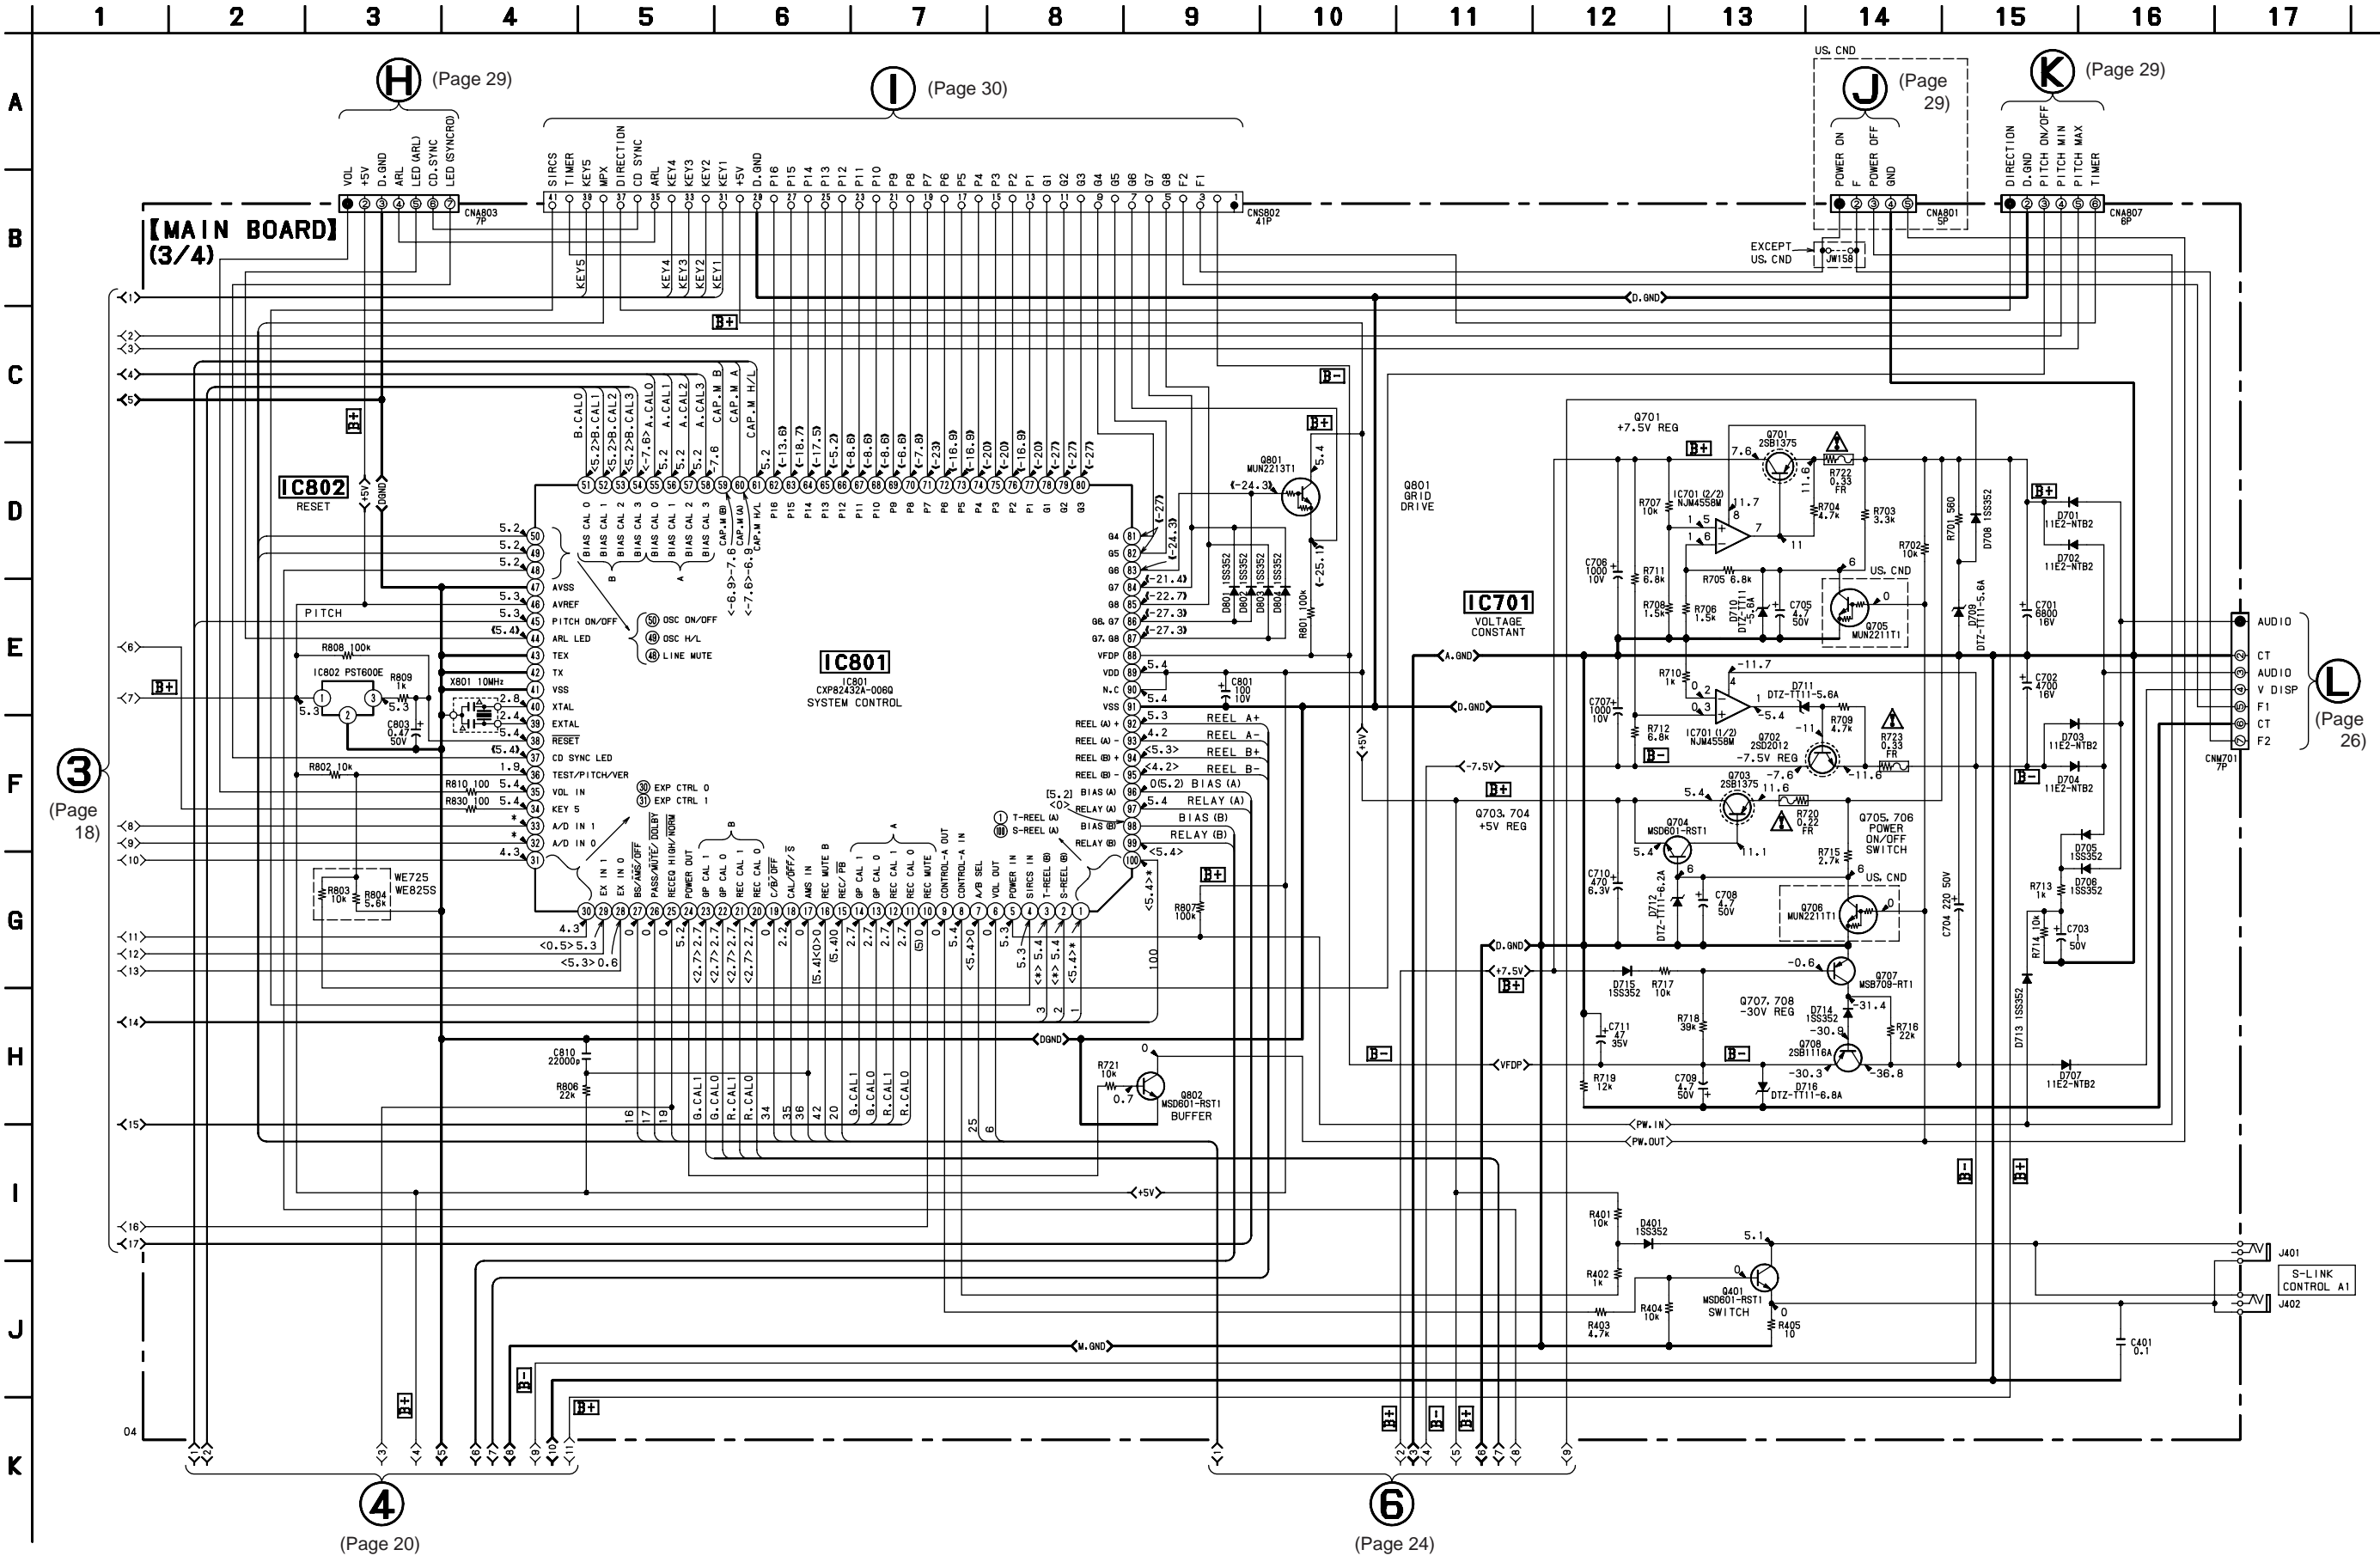


5-7. SCHEMATIC DIAGRAM — MAIN SECTION (4/4) —

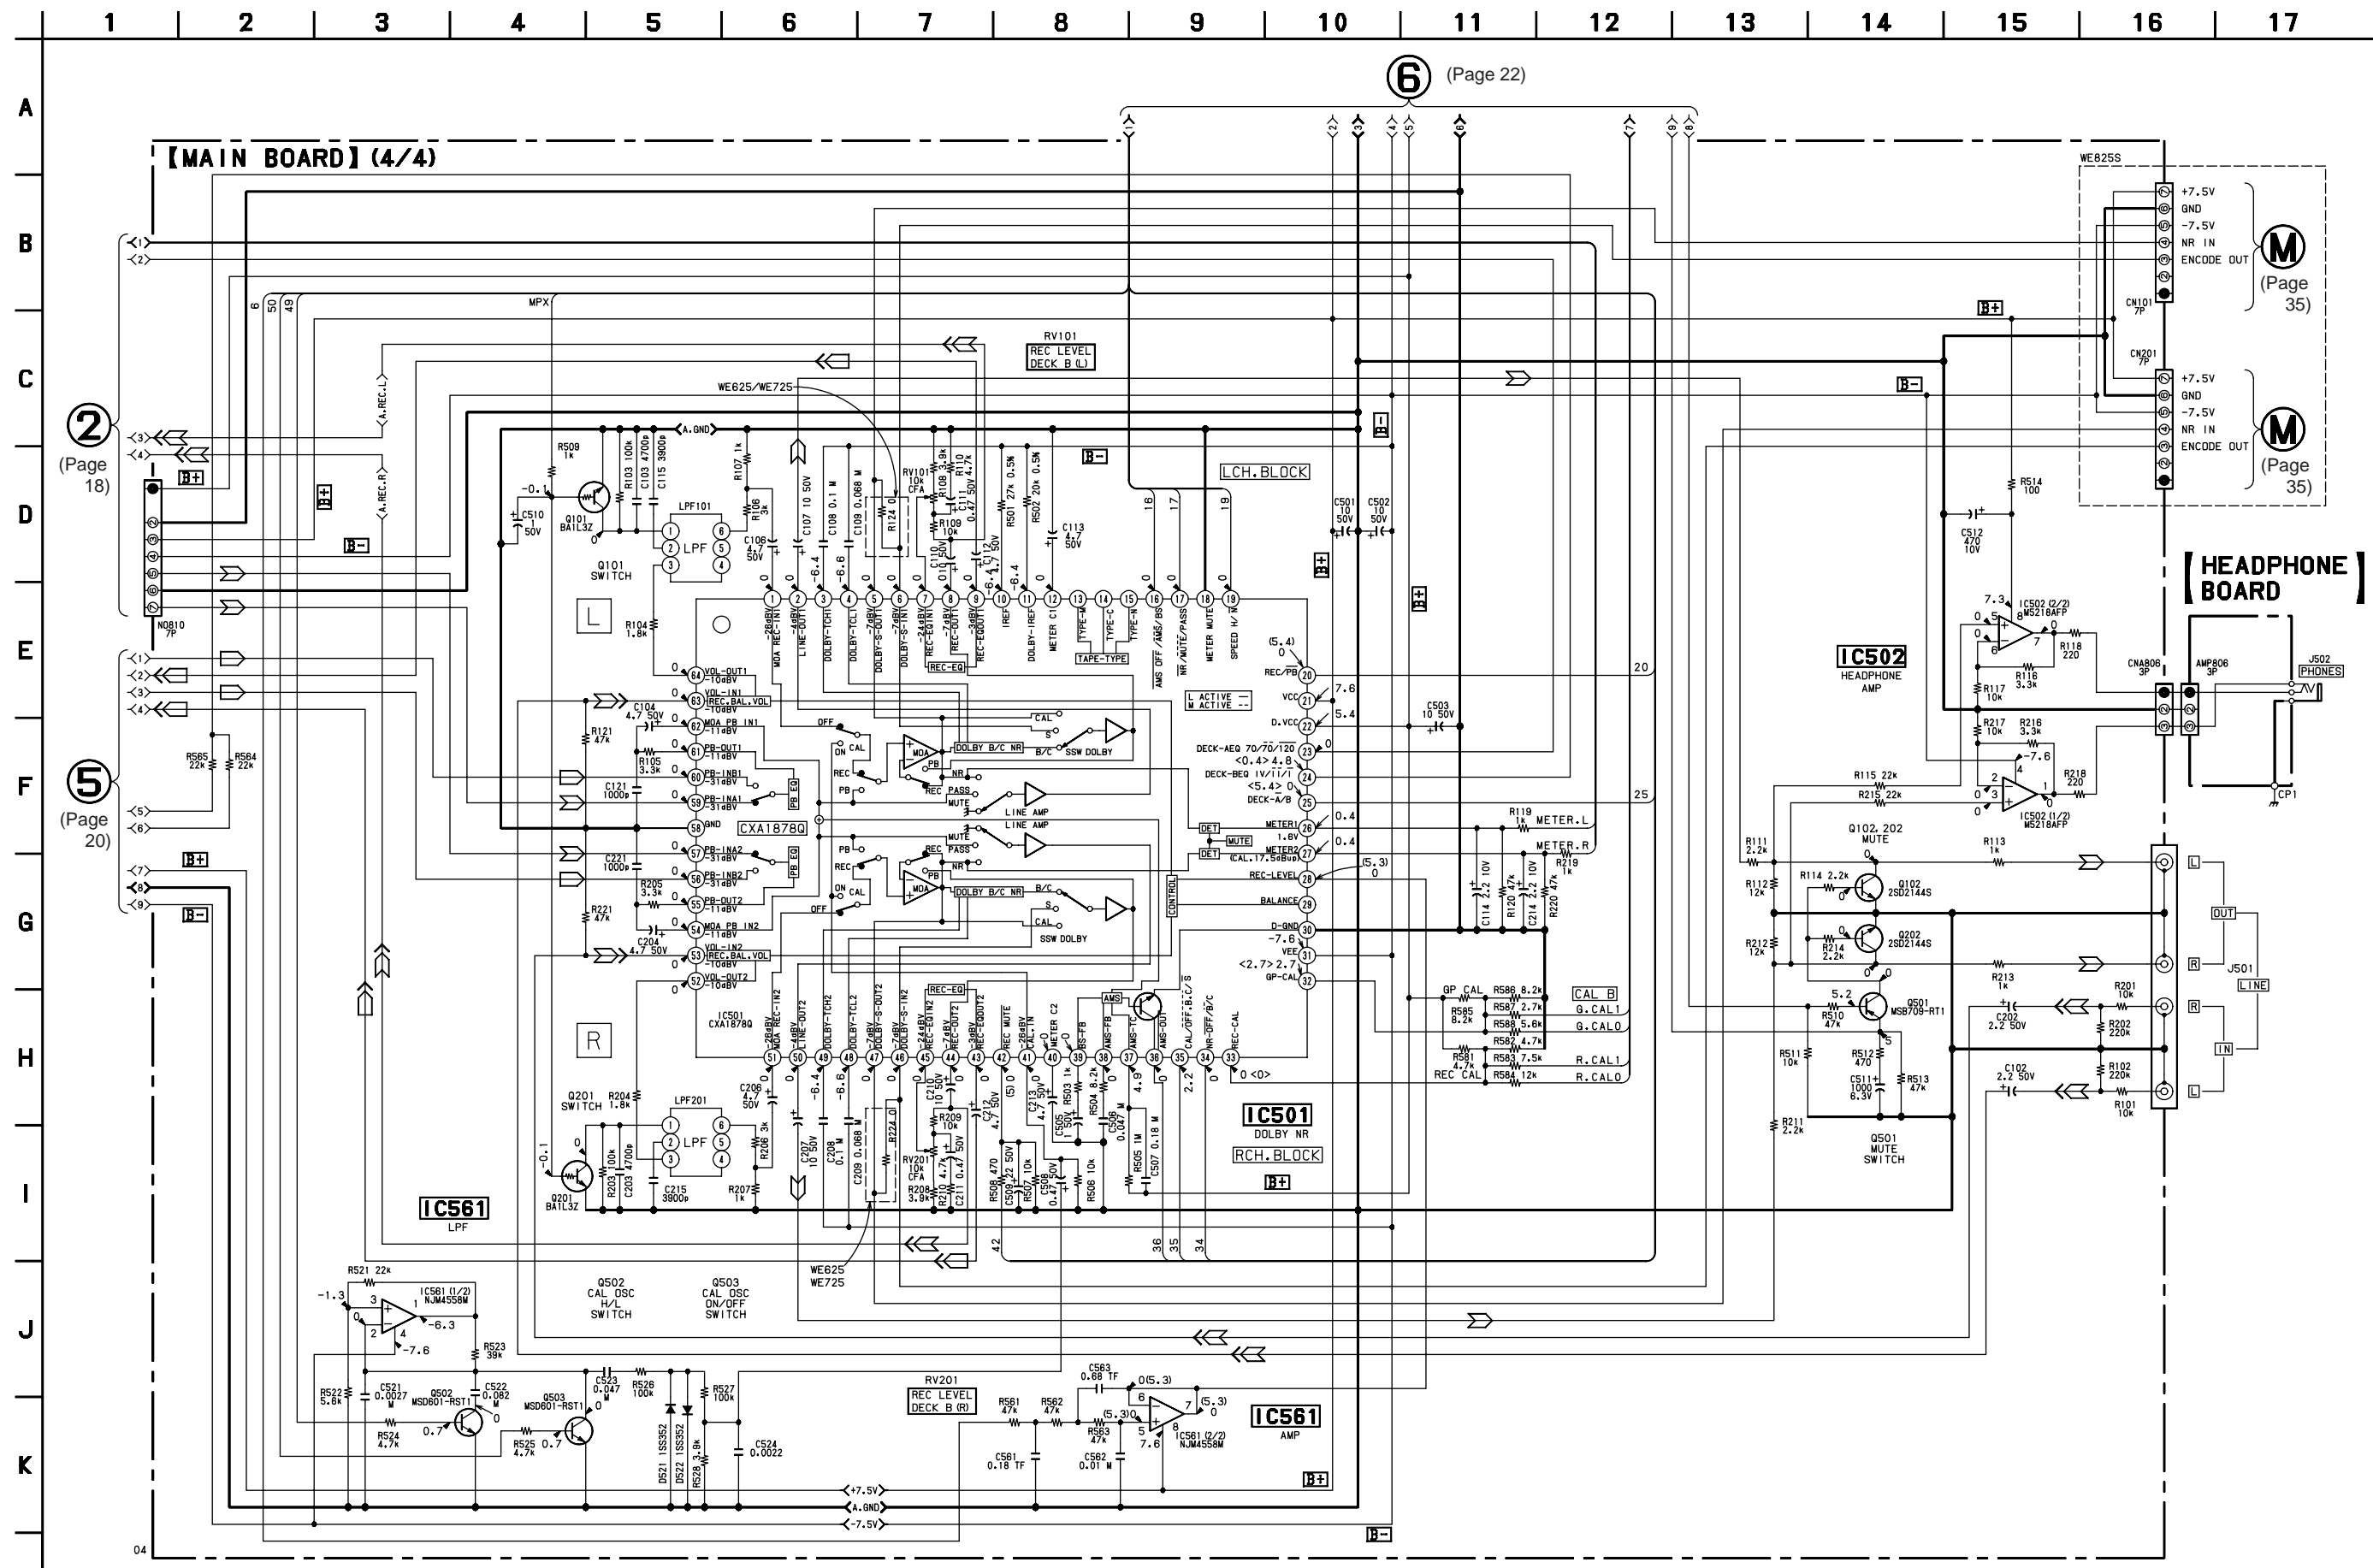

5-8. PRINTED WIRING BOARDS — POWER SECTION —

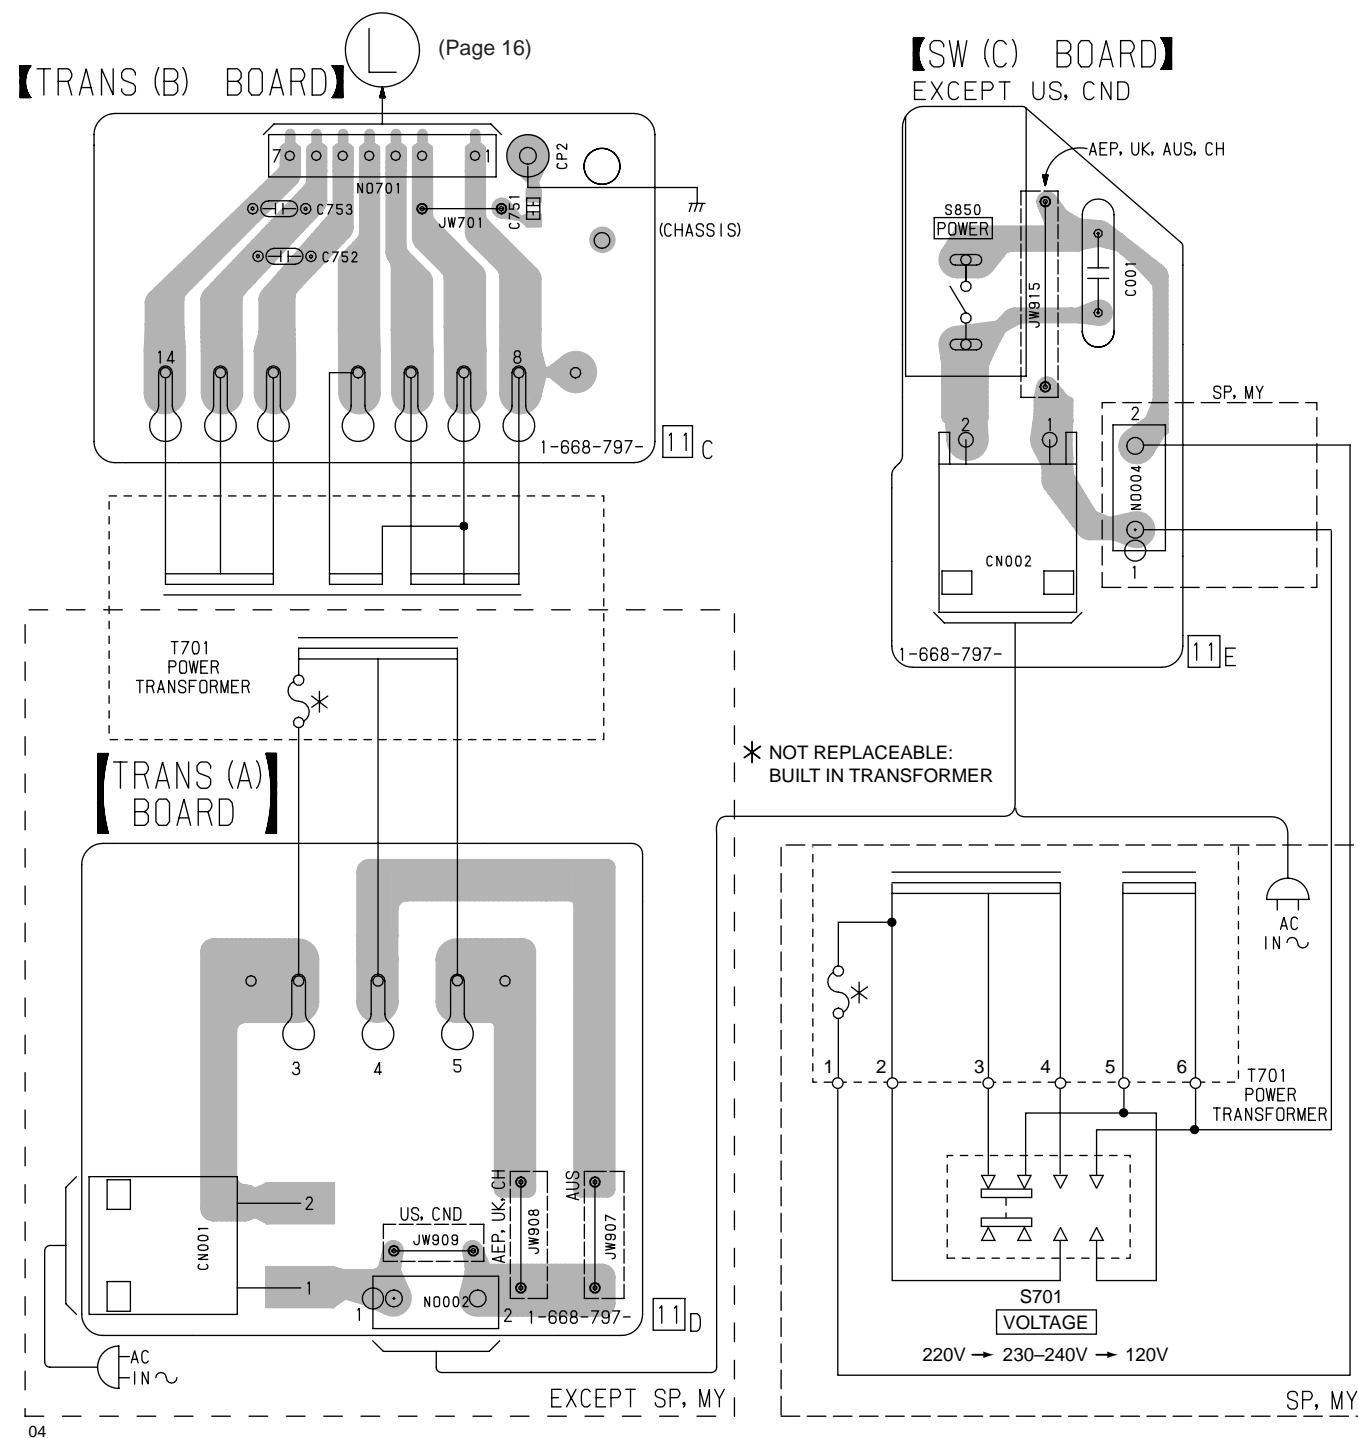


5-9. SCHEMATIC DIAGRAM — POWER SECTION —

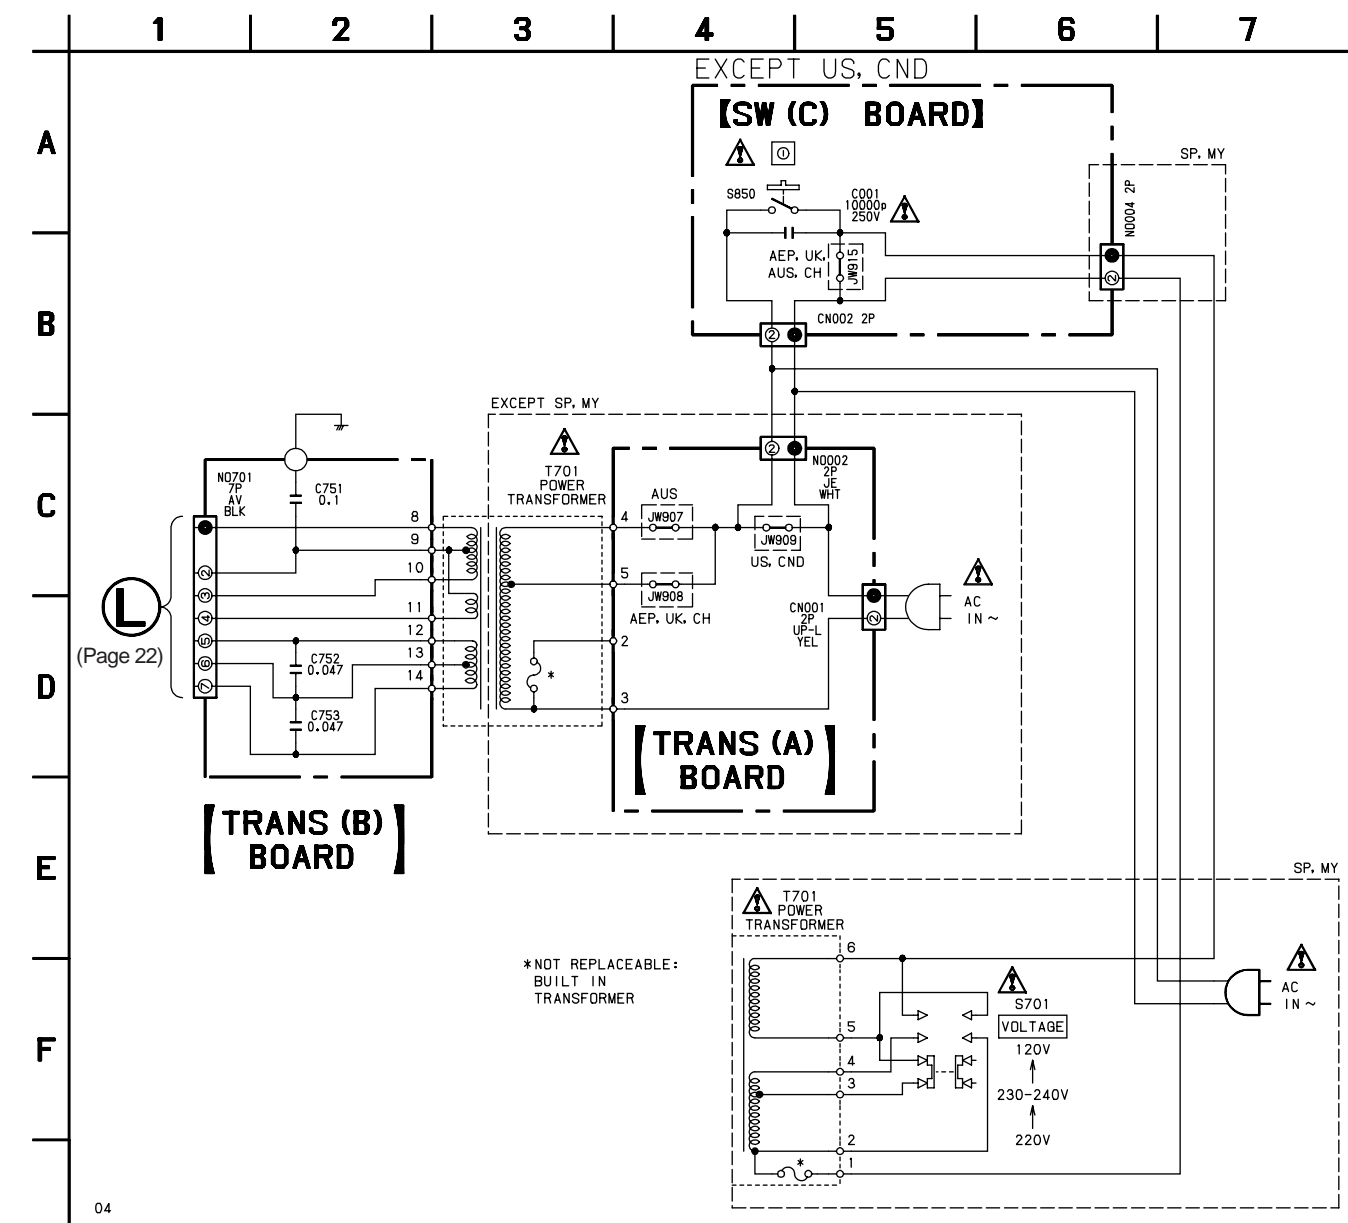


5-10. PRINTED WIRING BOARDS — PANEL SECTION —


【FL BOARD】

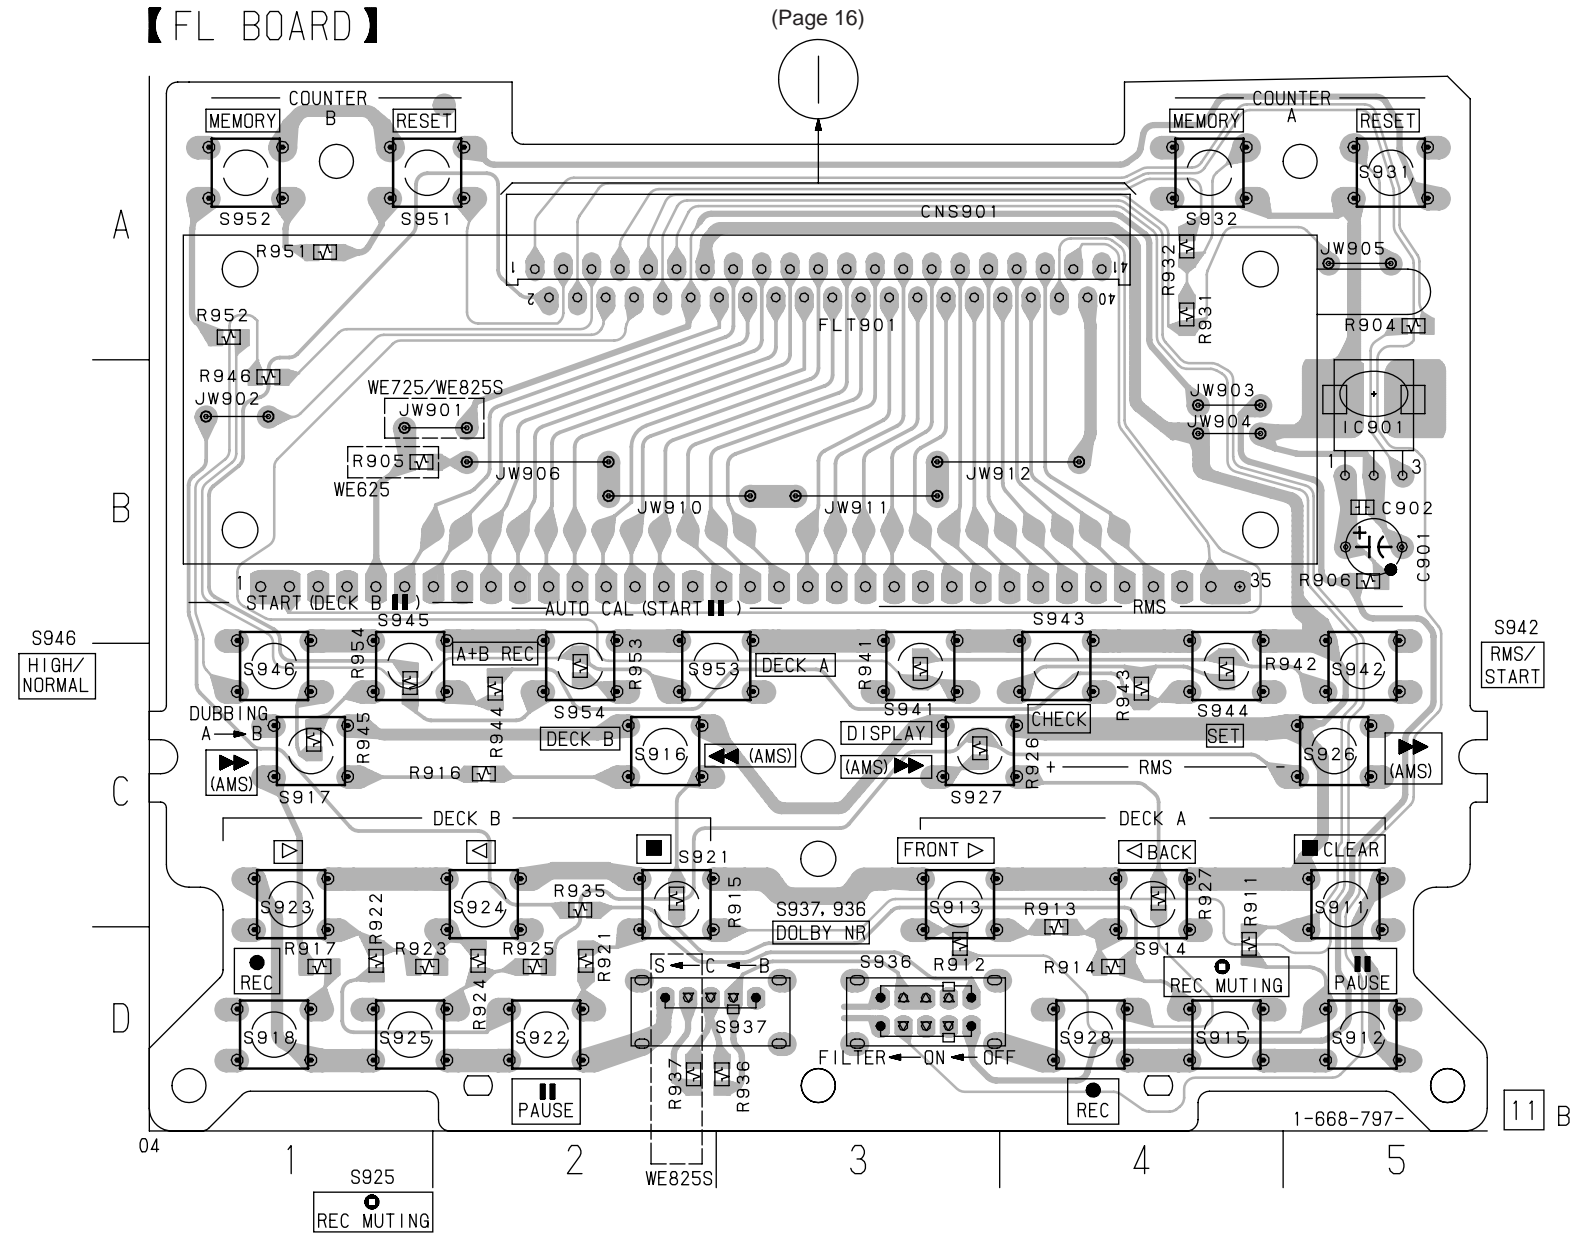


【REC VOL BOARD】

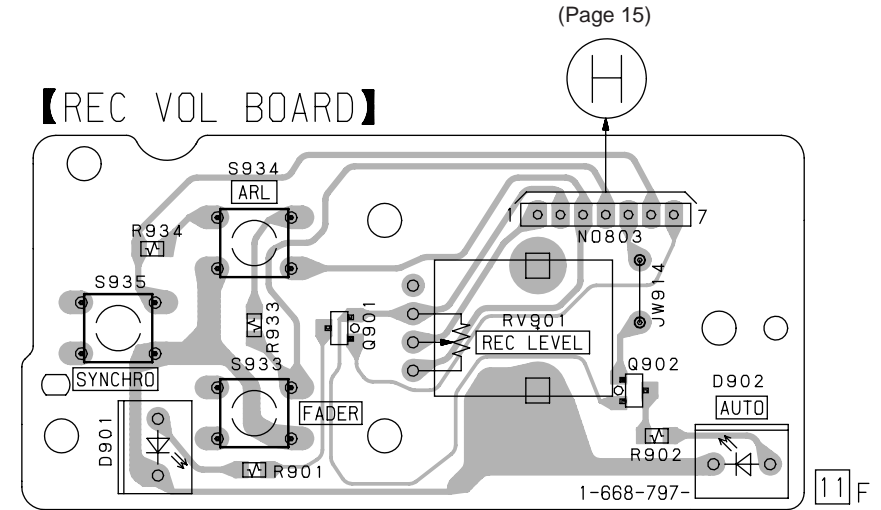


【SW (A) BOARD】US, CND

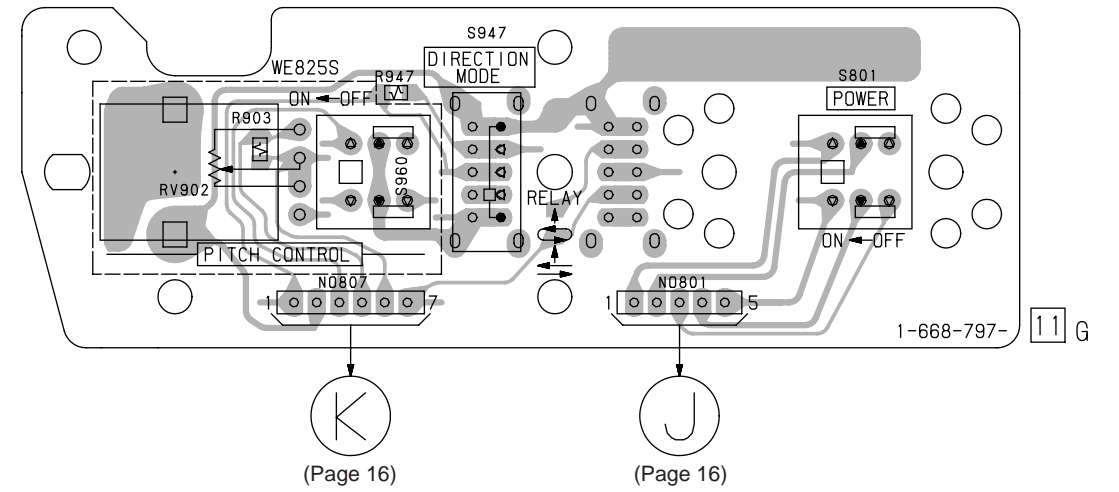


【SW (B) BOARD】EXCEPT US, CND

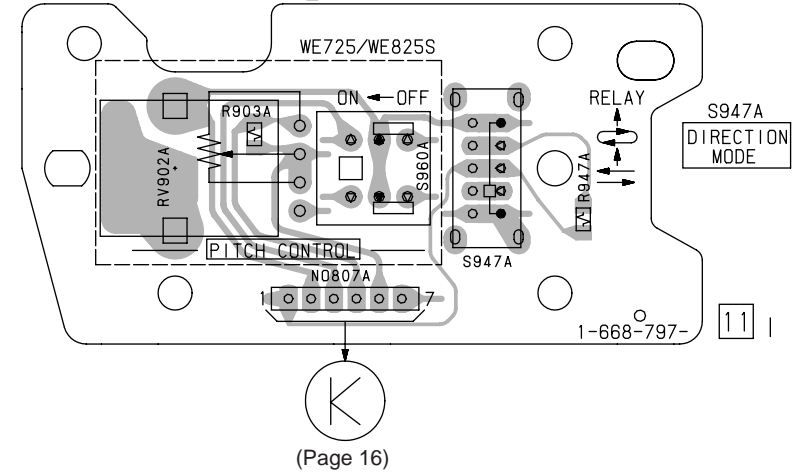


5-11. SCHEMATIC DIAGRAM — PANEL SECTION —

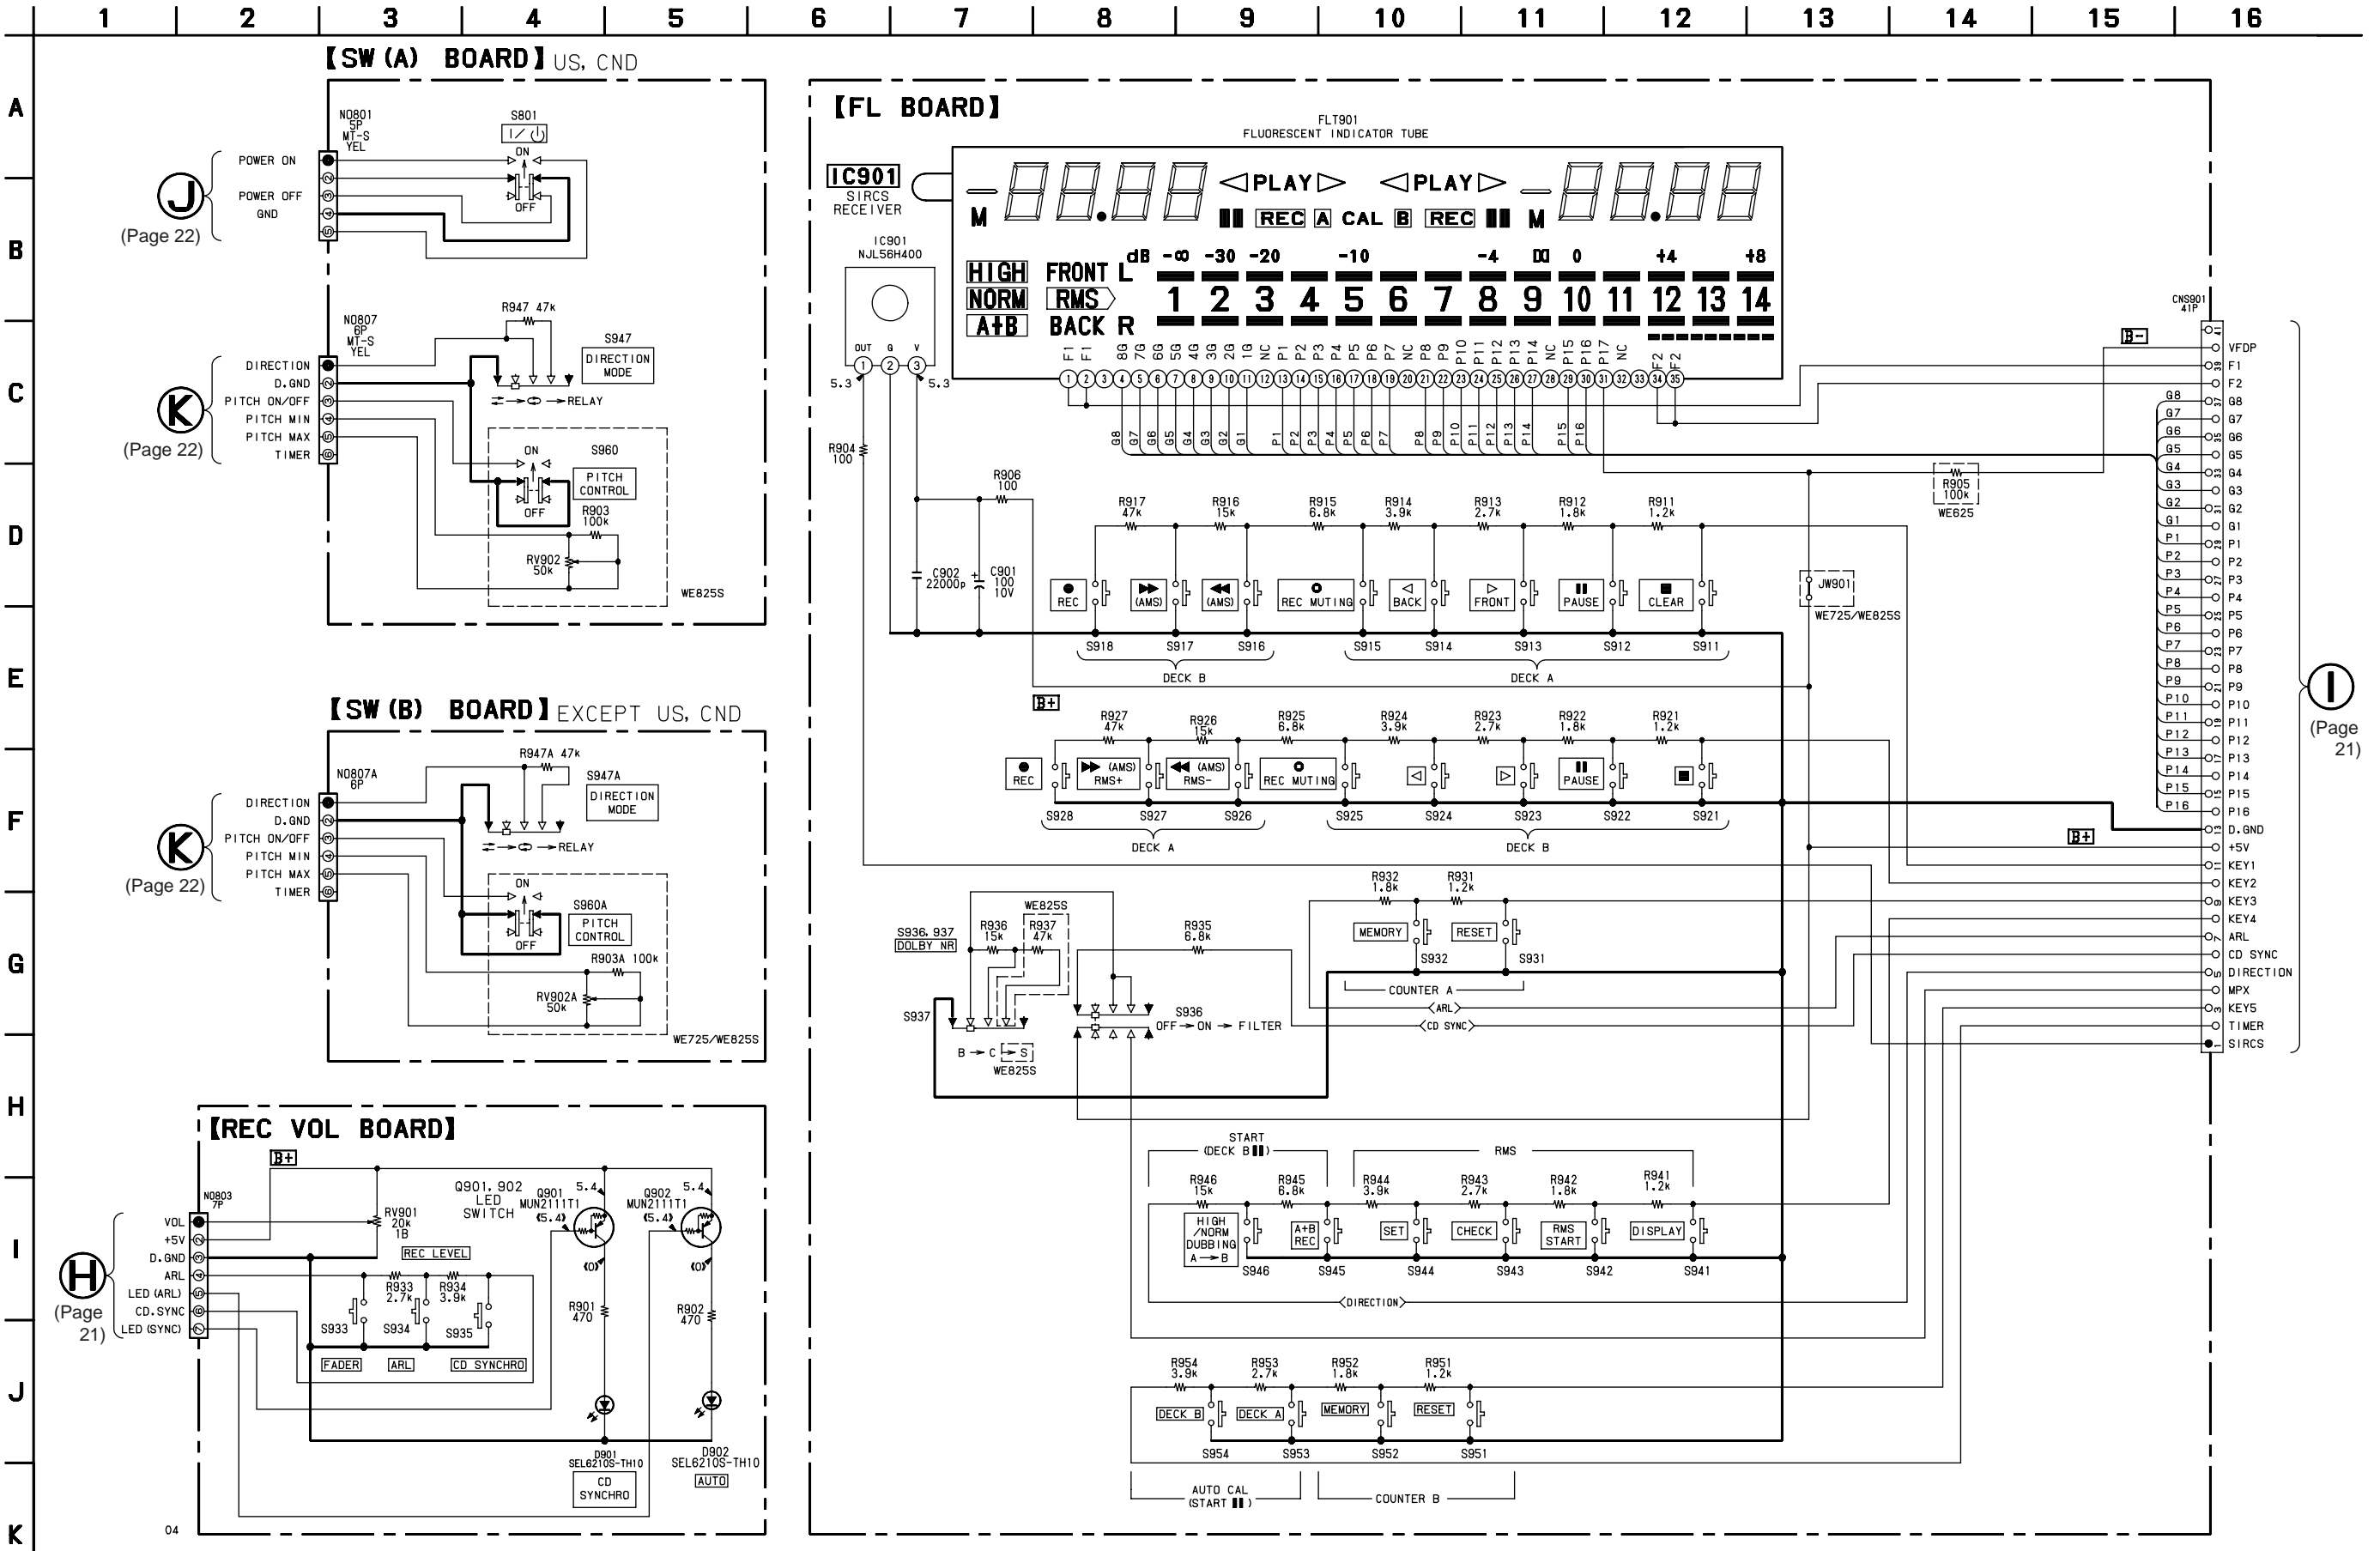




5-12. PRINTED WIRING BOARDS — DECK A SECTION —

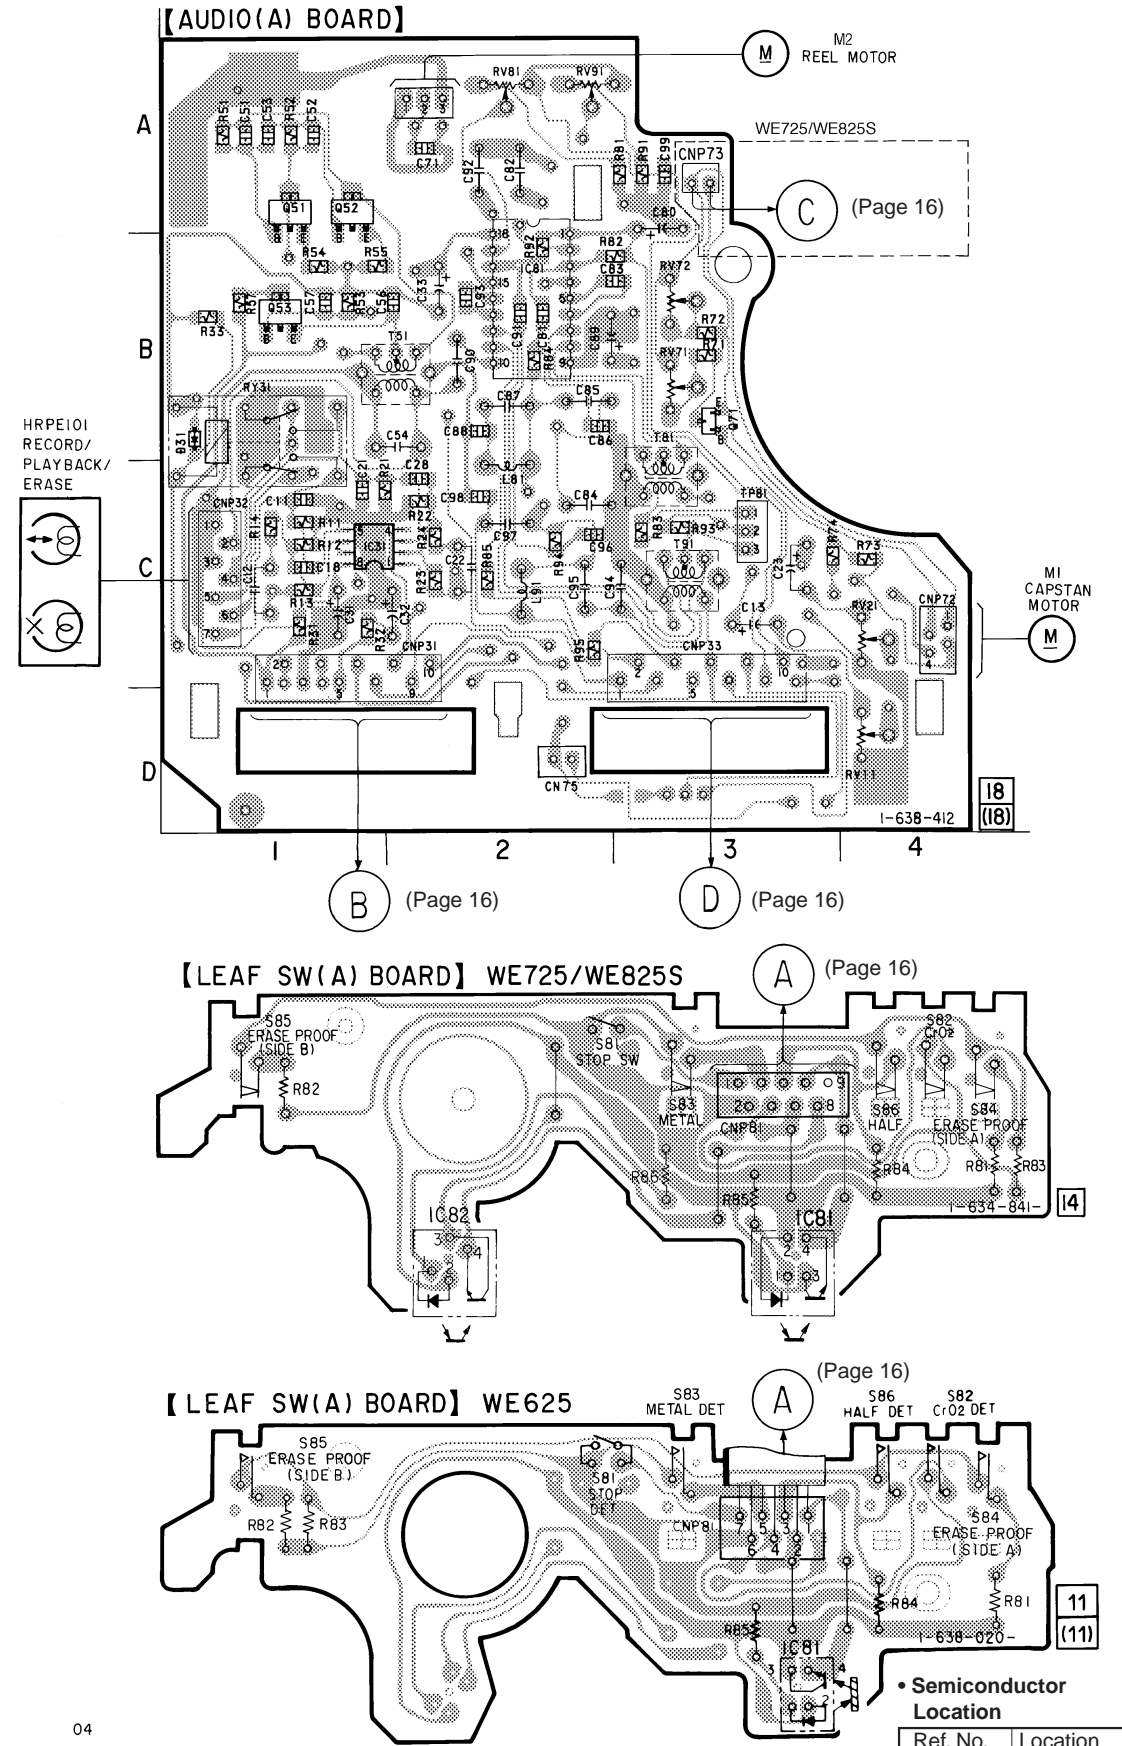

5-13. SCHEMATIC DIAGRAM — DECK A SECTION —

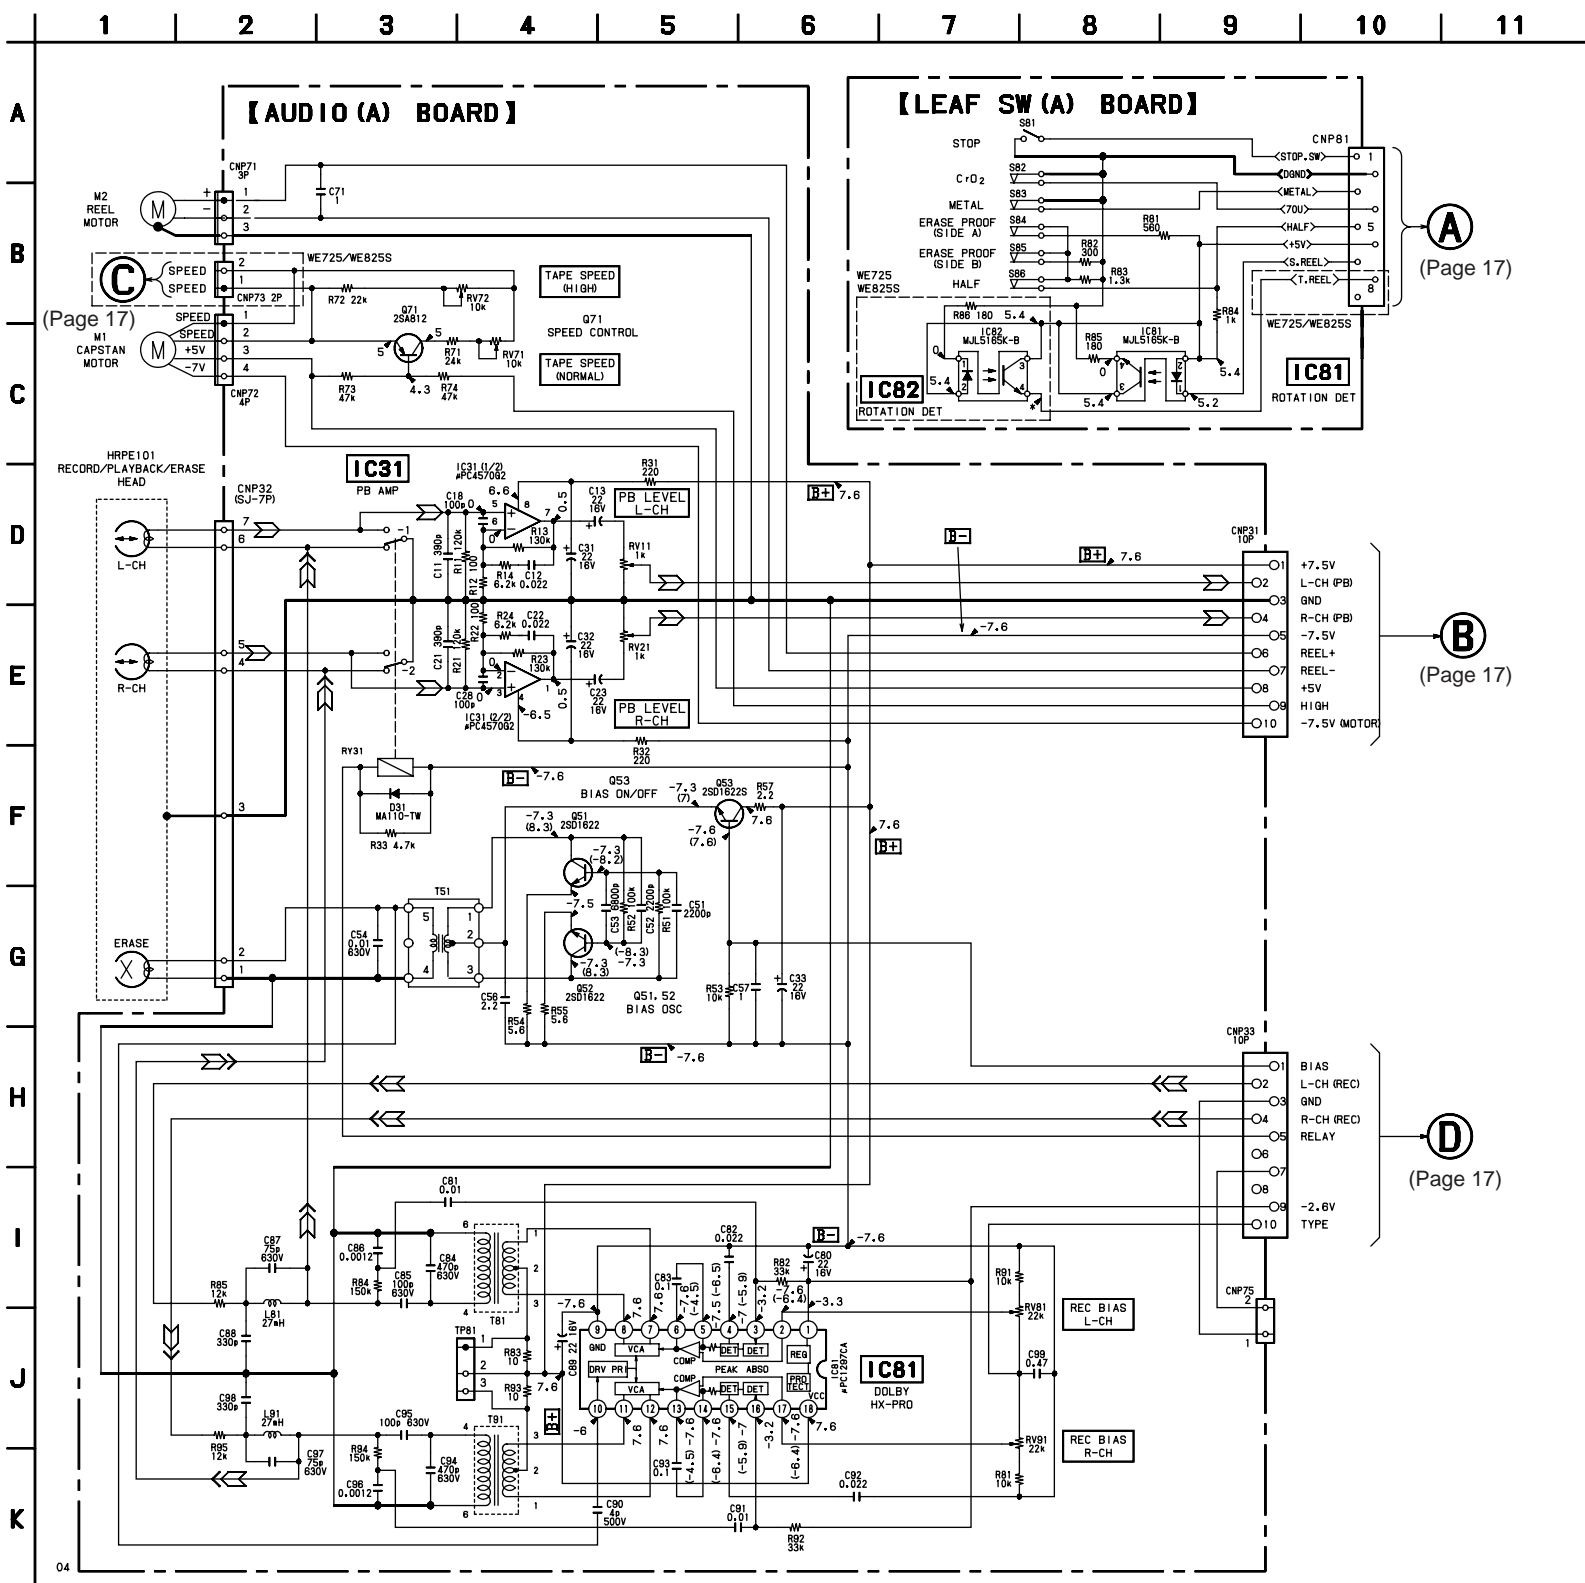


5-14. PRINTED WIRING BOARDS — DECK B SECTION —

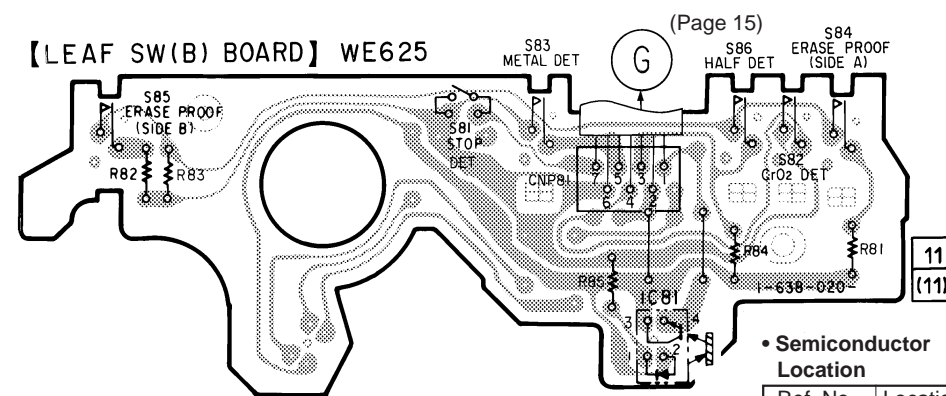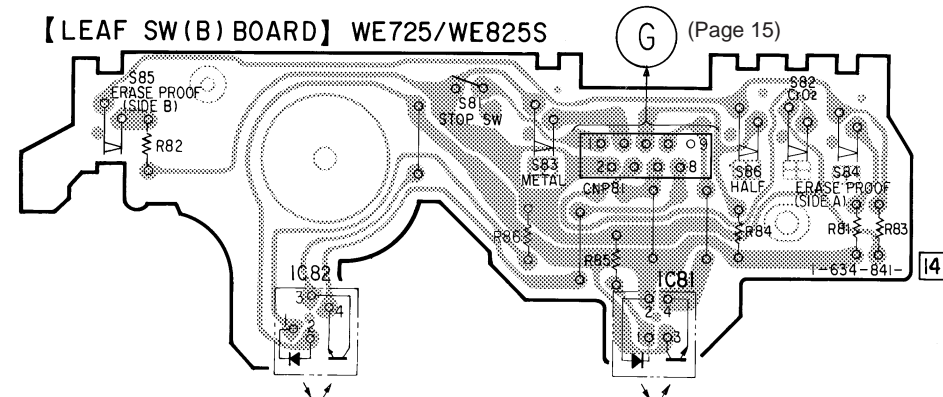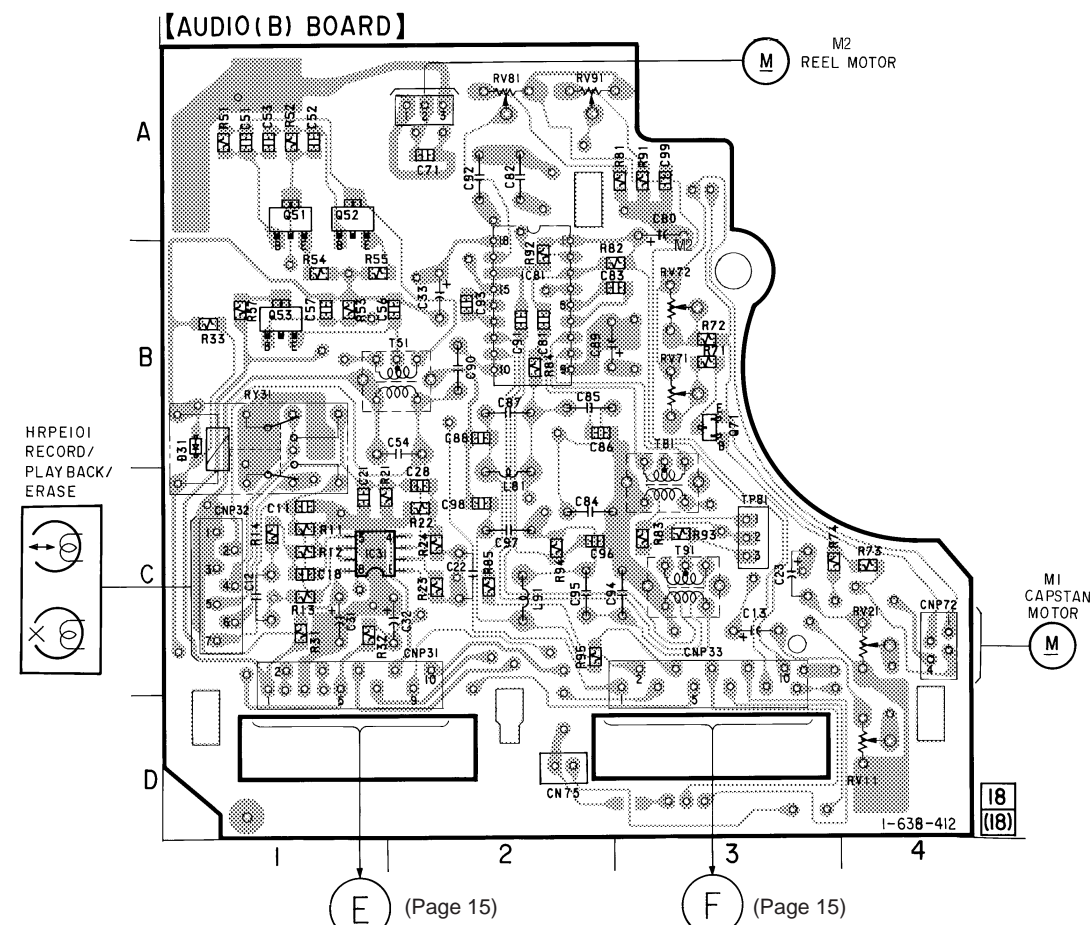


Ref. No.	Location
D31	B-1
IC31	C-1
IC81	B-2
Q51	A-1
Q52	A-1
Q53	B-1
Q71	B-3

5-15. SCHEMATIC DIAGRAM — DECK B SECTION —

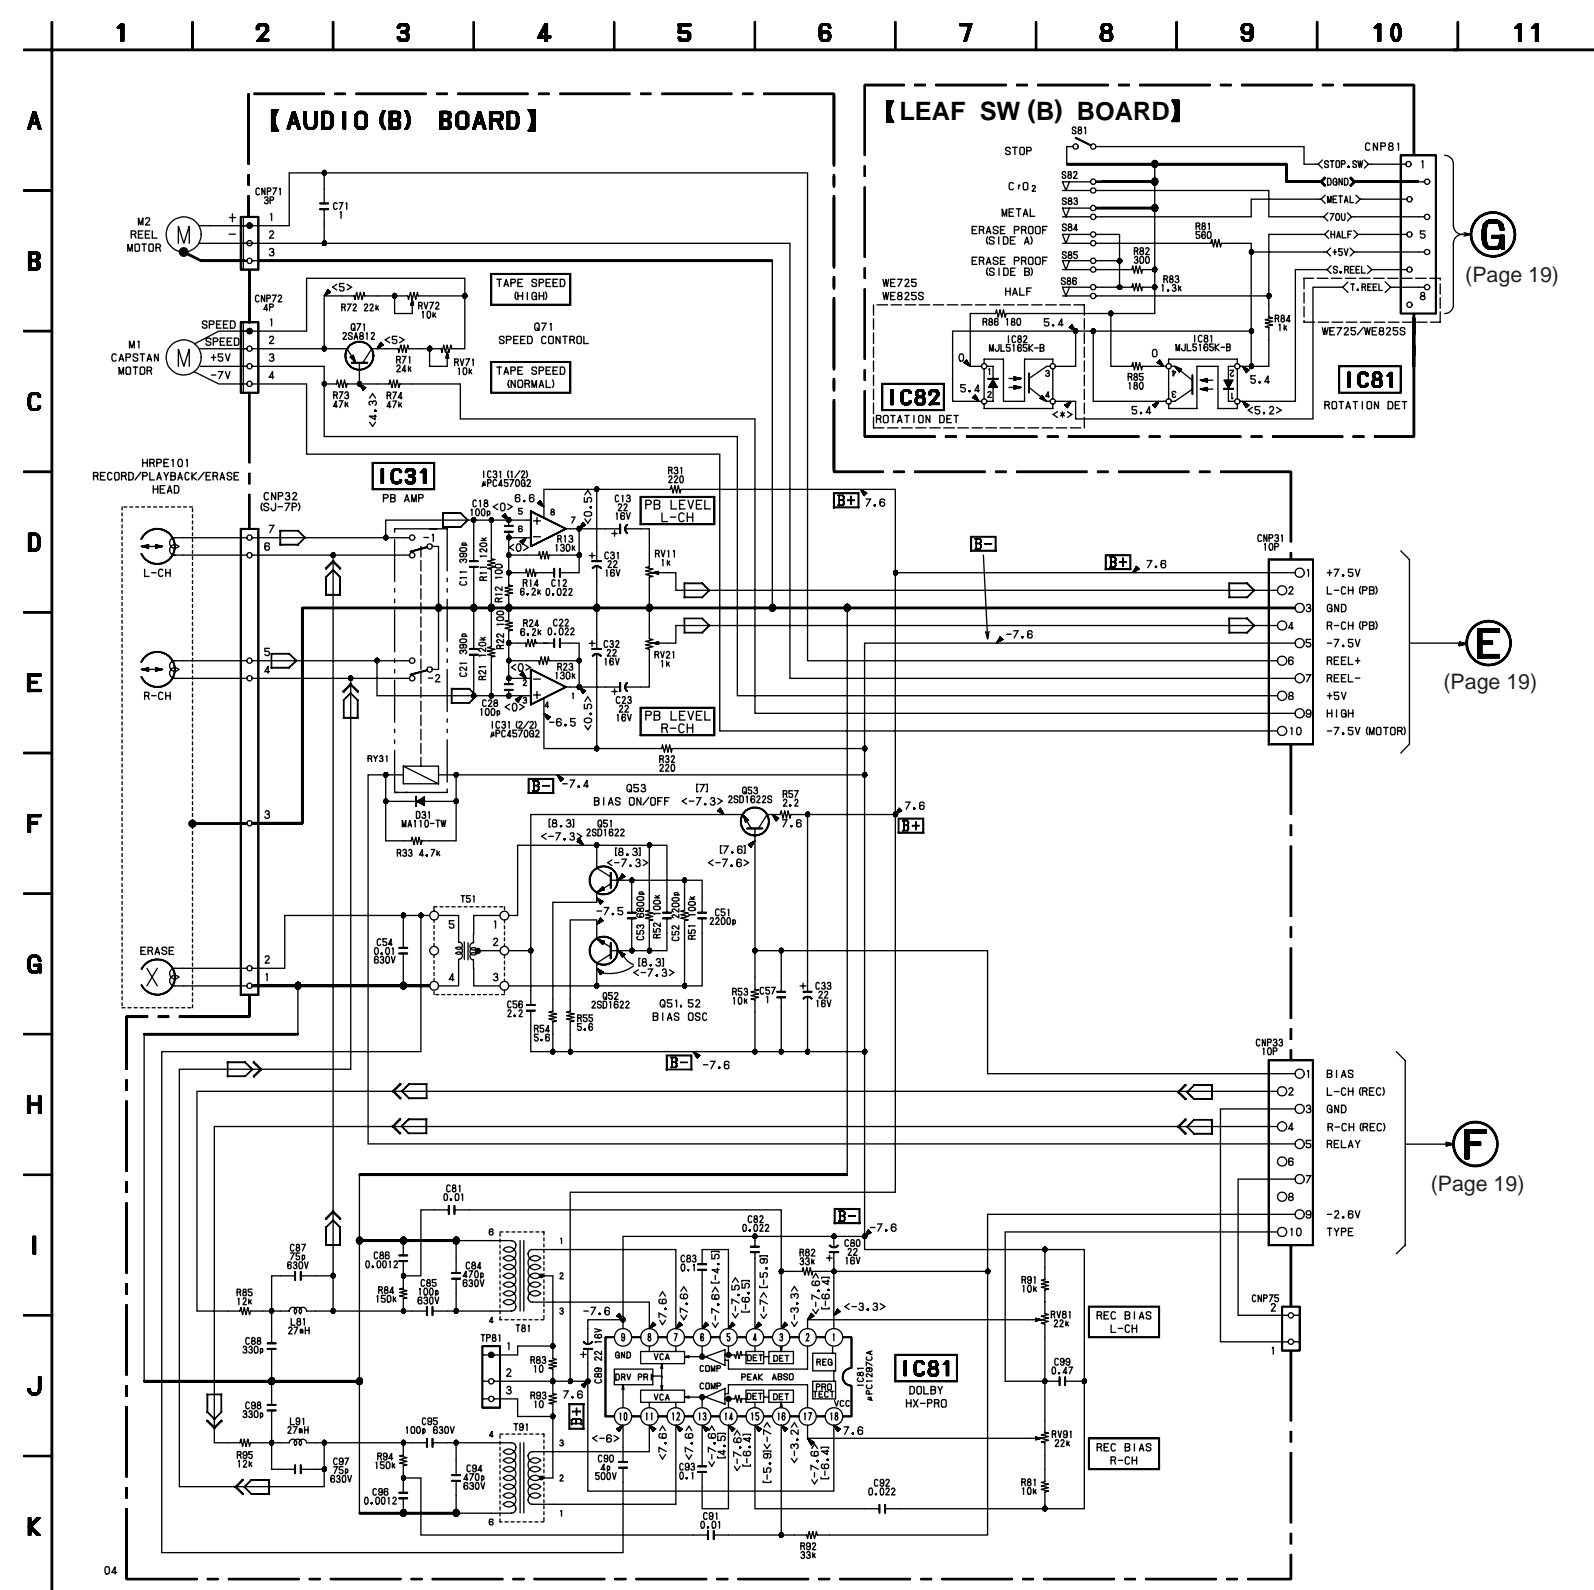


5-16. PRINTED WIRING BOARD — DOLBY-S SECTION
(TC-WE825S only) —

【DOLBY-S BOARD】 WE825S

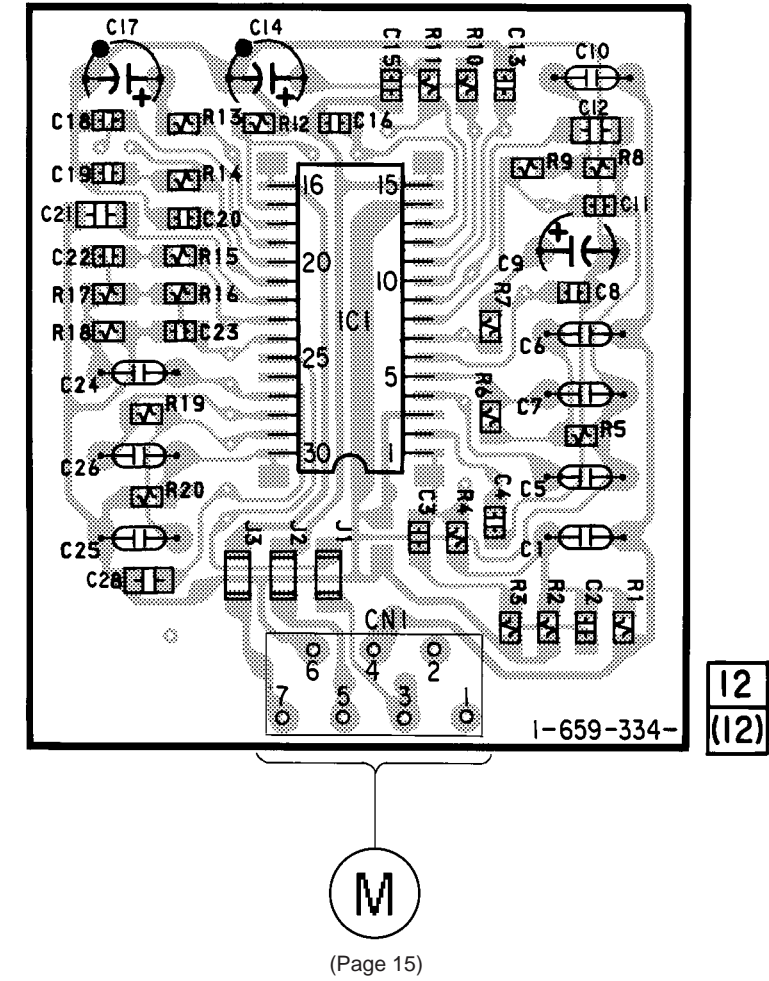


5-17. SCHEMATIC DIAGRAM — DOLBY-S SECTION (TC-WE825S only) —

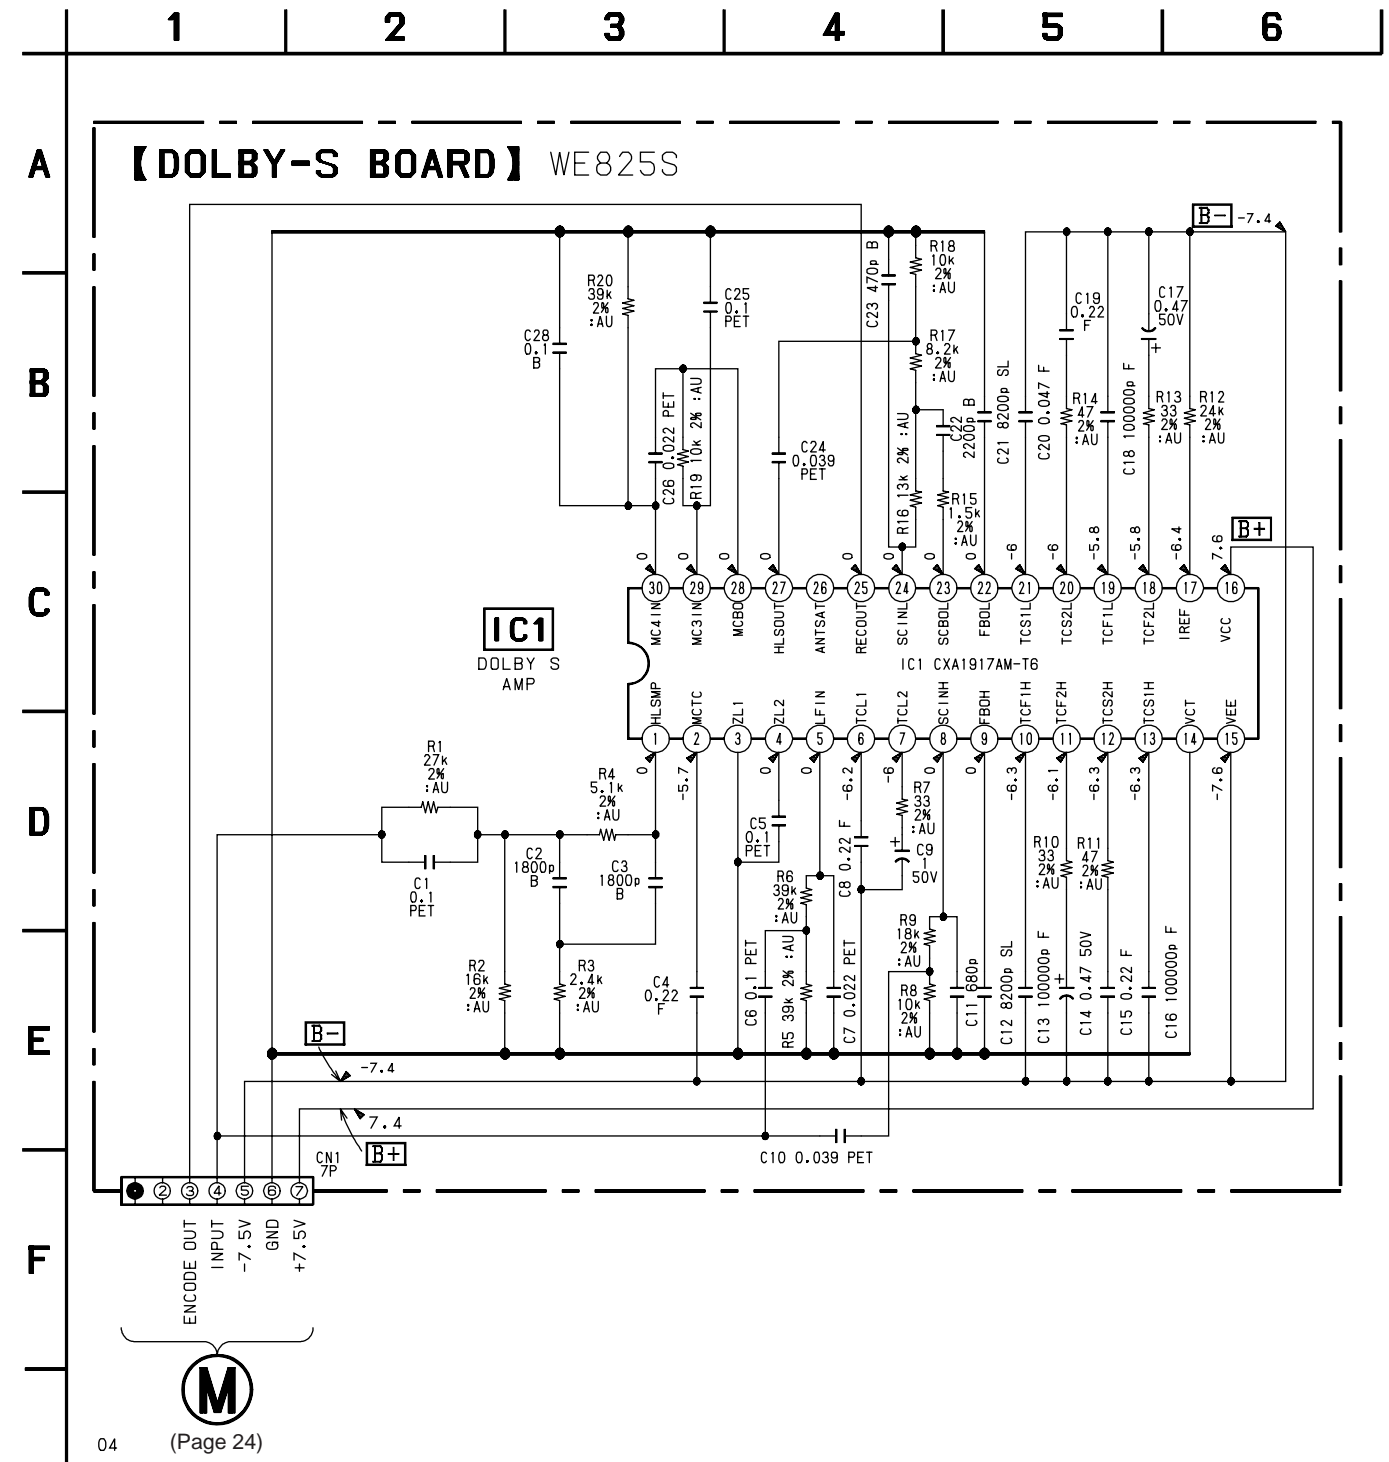


• IC Block Diagrams


IC1 CXA1917AM-T6 (TC-WE825S on)

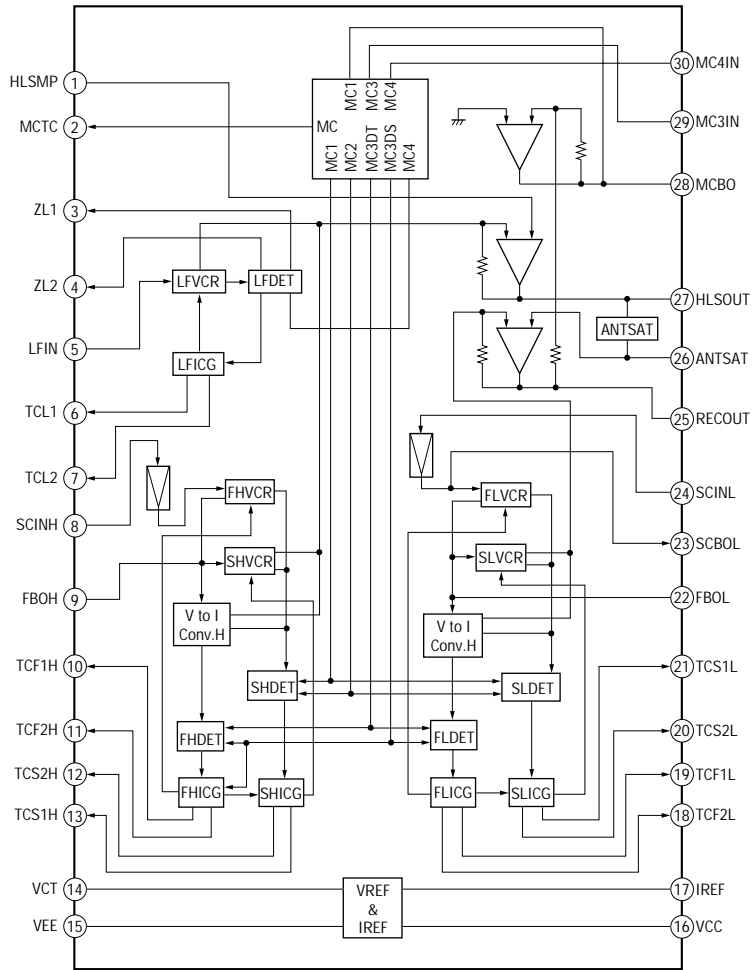

IC504 CXA1597P

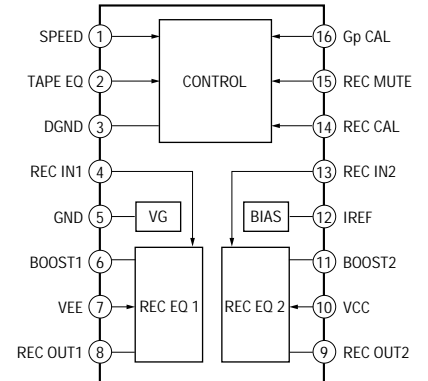

IC803, 804, 806, 808 MC14052BF-T1

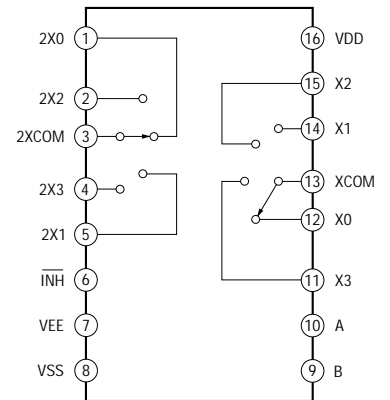

SECTION 6

EXPLODED VIEWS

NOTE:



- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Abbreviation
CND : Canadian model
AUS : Australian model
SP : Singapore model
MY : Malaysia model
CH : Chinese model

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
Example :

KNOB, BALANCE (WHITE) ... (RED)


↑ ↑

Parts Color Cabinet's Color
- Accessories and packing materials and hardware (# mark) list are given in the last of this parts list.

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.


Les composants identifiés par une
marque Δ sont critiques pour
la sécurité.
Ne les remplacer que par une pièce
portant le numéro spécifié.

6-1. CASE SECTION

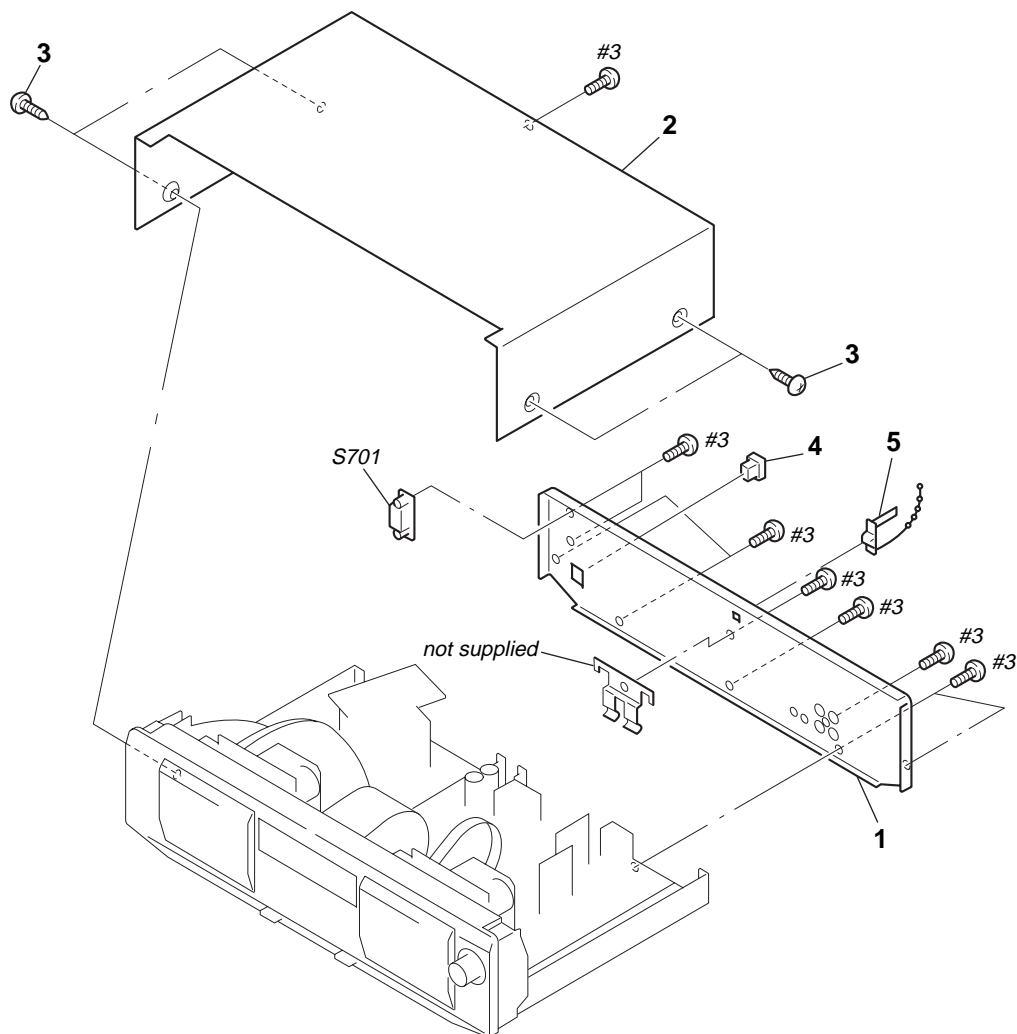

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 1	3-021-228-01	PANEL, BACK (WE625:US)		* 2	3-935-634-01	CASE (410726)	
* 1	3-021-228-11	PANEL, BACK (WE625:CND)		3	3-363-099-01	SCREW (CASE 3 TP2)	
* 1	3-021-228-21	PANEL, BACK (WE625:AUS)		4	3-703-244-00	BUSHING (2104), CORD (EXCEPT US,CND)	
* 1	3-021-228-31	PANEL, BACK (WE625:SP,MY)		* 4	3-703-571-11	BUSHING (S) (4516), CORD (US,CND)	
* 1	3-021-228-41	PANEL, BACK (WE625:CH)		5	4-956-370-12	BAND, PLUG FIXED (UK,AUS)	
* 1	3-021-242-01	PANEL, BACK (WE725:AEP)		△ S701	1-692-155-11	SELECTOR, POWER VOLTAGE (VOLTAGE)	
* 1	3-021-242-11	PANEL, BACK (WE725:UK)					(SP,MY)
* 1	3-021-243-01	PANEL, BACK (WE825S:AEP)					
* 1	3-021-243-11	PANEL, BACK (WE825S:UK)					
* 1	3-021-243-32	PANEL, BACK (WE825S:US)					

6-2. CHASSIS SECTION

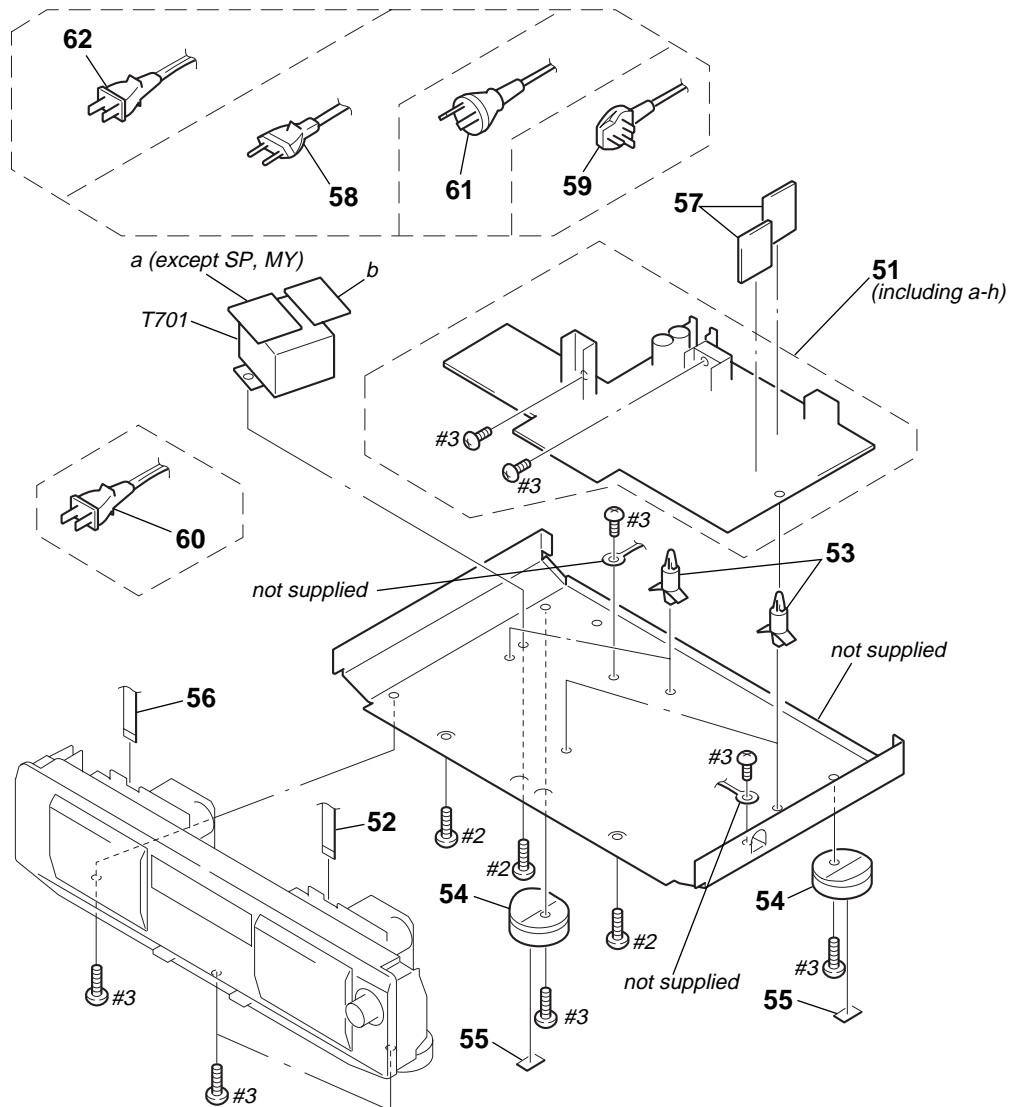


The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 51	A-2007-758-A	MAIN BOARD, COMPLETE (WE725)		* 55	4-978-398-21	CUSHION	
* 51	A-2007-761-A	MAIN BOARD, COMPLETE (WE625:US,CND)		56	1-769-883-11	WIRE (FLAT TYPE) (7 CORE) (WE625)	
* 51	A-2007-762-A	MAIN BOARD, COMPLETE (WE625:AUS)		56	1-769-916-11	WIRE (FLAT TYPE) (9 CORE) (WE725/WE825S)	
* 51	A-2007-763-A	MAIN BOARD, COMPLETE (WE625:SP,MY)		* 57	A-2007-801-A	DOLBY-S BOARD, COMPLETE (WE825S)	
* 51	A-2007-764-A	MAIN BOARD, COMPLETE (WE625:CH)		Δ 58	1-575-651-21	CORD, POWER (AEP,SP,MY)	
* 51	A-2007-765-A	MAIN BOARD, COMPLETE (WE825S:AEP,UK)		Δ 59	1-751-529-11	CORD, POWER (UK)	
* 51	A-2007-802-A	MAIN BOARD, COMPLETE (WE825S:US)		Δ 60	1-590-926-11	CORD, POWER (US,CND)	
52	1-590-486-11	WIRE (FLAT TYPE) (7 CORE) (WE625)		Δ 61	1-696-845-11	CORD, POWER (AUS)	
52	1-769-914-11	WIRE (FLAT TYPE) (9 CORE) (WE725/WE825S)		Δ 62	1-782-510-11	CORD, POWER (CH)	
* 53	3-346-265-31	HOLDER, PC BOARD		Δ T701	1-431-786-11	TRANSFORMER, POWER (AEP,UK,CH,AUS)	
54	4-977-591-01	FOOT (F50150S) (EXCEPT US,CND)		Δ T701	1-431-788-11	TRANSFORMER, POWER (US,CND)	
54	4-977-591-11	FOOT (F50150S) (US,CND)		Δ T701	1-431-789-11	TRANSFORMER, POWER (SP,MY)	

6-3. CASSETTE HOLDER SECTION

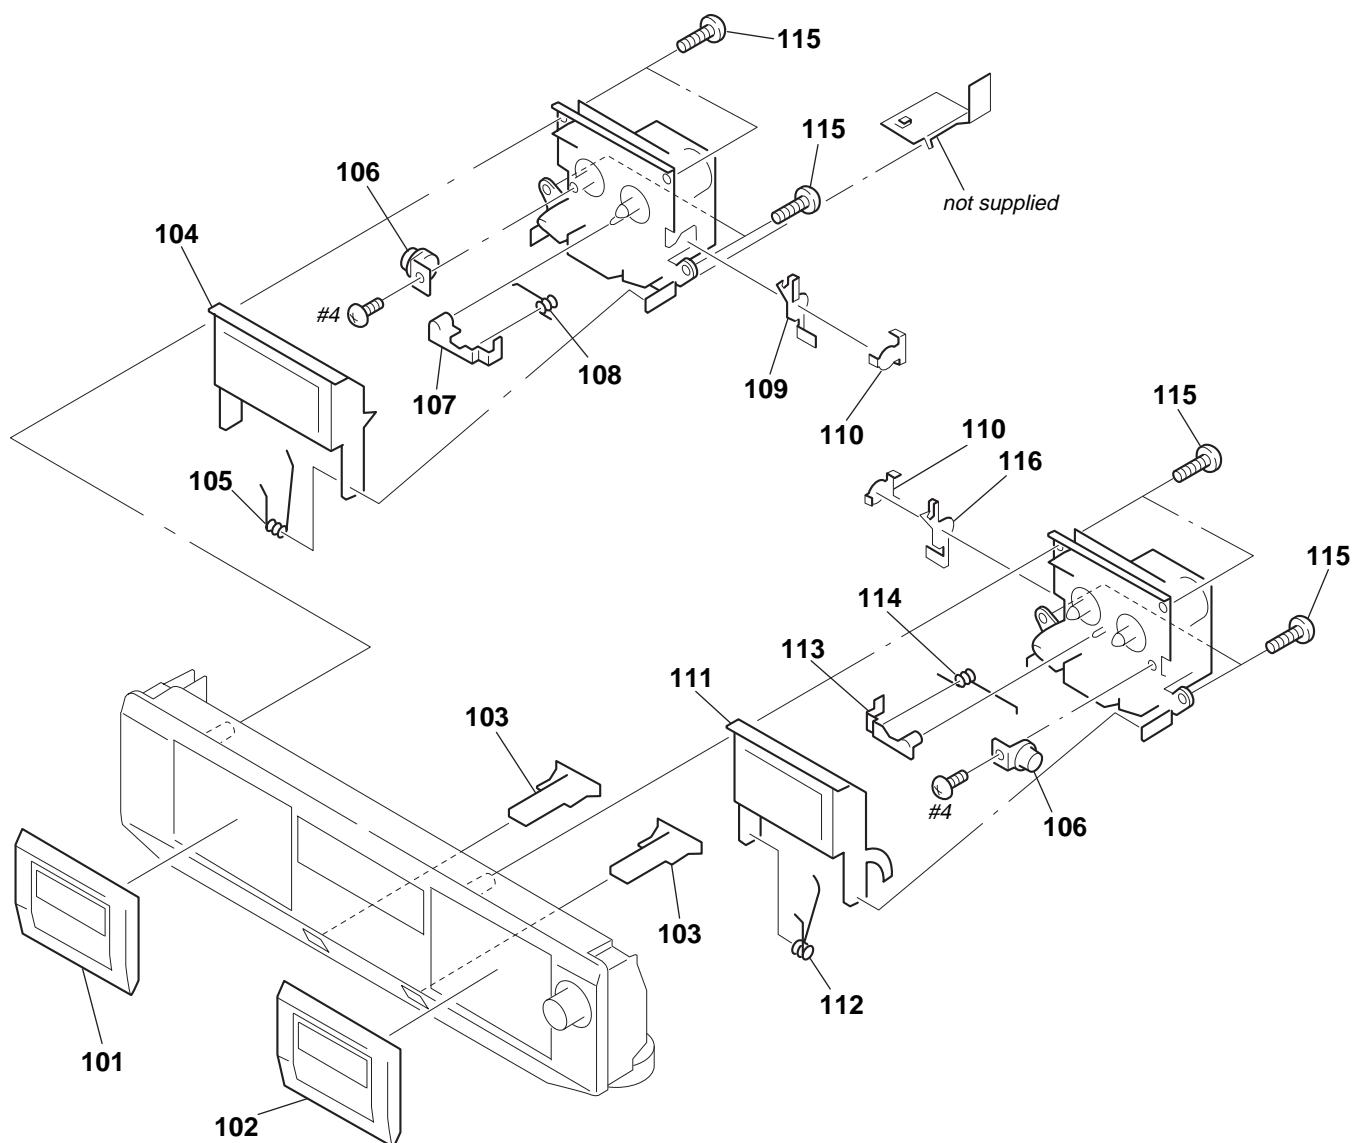

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	X-3374-864-1	LID (A) ASSY, CASSETTE		* 109	3-354-953-01	LEVER (LOCK LEVER L)	
102	X-3374-865-1	LID (B) ASSY, CASSETTE		110	3-354-957-01	JOINT (LOCK LEVER)	
103	3-931-427-31	BUTTON (EJ)		111	X-4945-946-1	HOLDER (R) ASSY, CASSETTE	
104	X-4945-947-1	HOLDER (L) ASSY, CASSETTE		112	4-959-232-21	SPRING (R), TORSION	
105	4-959-231-21	SPRING (L), TORSION		113	3-354-956-01	LEVER (EJ SAFETY LEVER R)	
106	3-354-963-01	DAMPER		114	3-354-962-11	SPRING (EJ SAFETY SPRING R)	
107	3-354-955-01	LEVER (EJ SAFETY LEVER L)		115	4-951-620-01	SCREW (2.6X8), +BVTP	
108	3-354-961-11	SPRING (EJ SAFETY SPRING L)		* 116	3-354-954-01	LEVER (LOCK LEVER R)	


6-4. FRONT PANEL SECTION

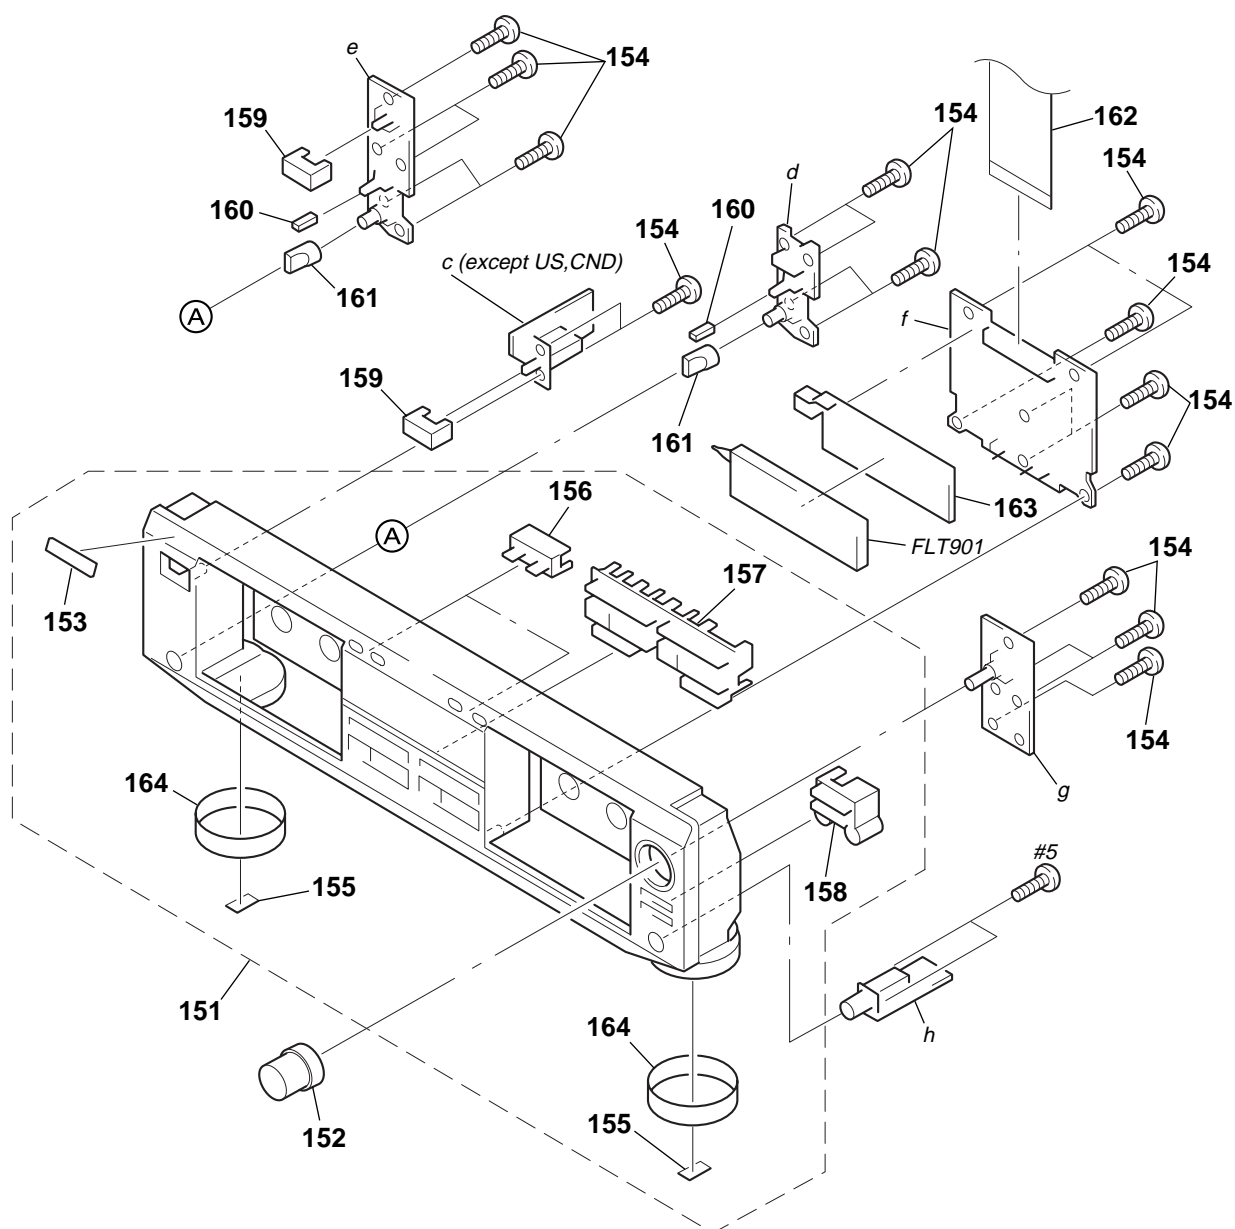

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	X-3374-855-1	PANEL ASSY, FRONT (WE625:US,CND)		158	X-3371-370-1	BUTTON (SYNCHRO) ASSY	
151	X-3374-857-1	PANEL ASSY, FRONT (WE725)		159	3-931-429-41	BUTTON (POWER) (EXCEPT US,CND)	
151	X-3374-858-1	PANEL ASSY, FRONT (WE825S:AEP,UK)		159	3-931-429-51	BUTTON (POWER) (US,CND)	
151	X-3374-942-1	PANEL ASSY, FRONT (WE625:CH,SP,MY,AUS)		160	3-380-952-21	BUTTON (WE725/WE825S)	
151	X-3375-510-1	PANEL ASSY, FRONT (WE825S:US)		161	3-931-378-01	KNOB (F10) (WE725/WE825S)	
152	3-021-239-01	KNOB (REC)		162	1-769-598-11	WIRE (FLAT TYPE) (41 CORE)	
153	4-996-698-41	EMBLEM, SONY		* 163	3-377-337-11	HOLDER (FL)	
154	4-951-620-01	SCREW (2.6X8), +BVTP		164	4-977-593-01	RING (DIA. 50), ORNAMENTAL	
* 155	4-978-398-21	CUSHION				(EXCEPT US,CND)	
156	3-021-232-01	BUTTON (COUNTER)		FLT901	1-517-263-11	INDICATOR TUBE, FLUORESCENT	
157	3-021-230-01	BUTTON (FUNCTION)					

6-5. TAPE MECHANISM SECTION 1


	DECK A	DECK B
WE625	TCM-190RB12CL	TCM-190RB12CL
WE725	TCM-190RB13C	TCM-190RB11C
WE825S	TCM-190RB13C	TCM-190RB11C

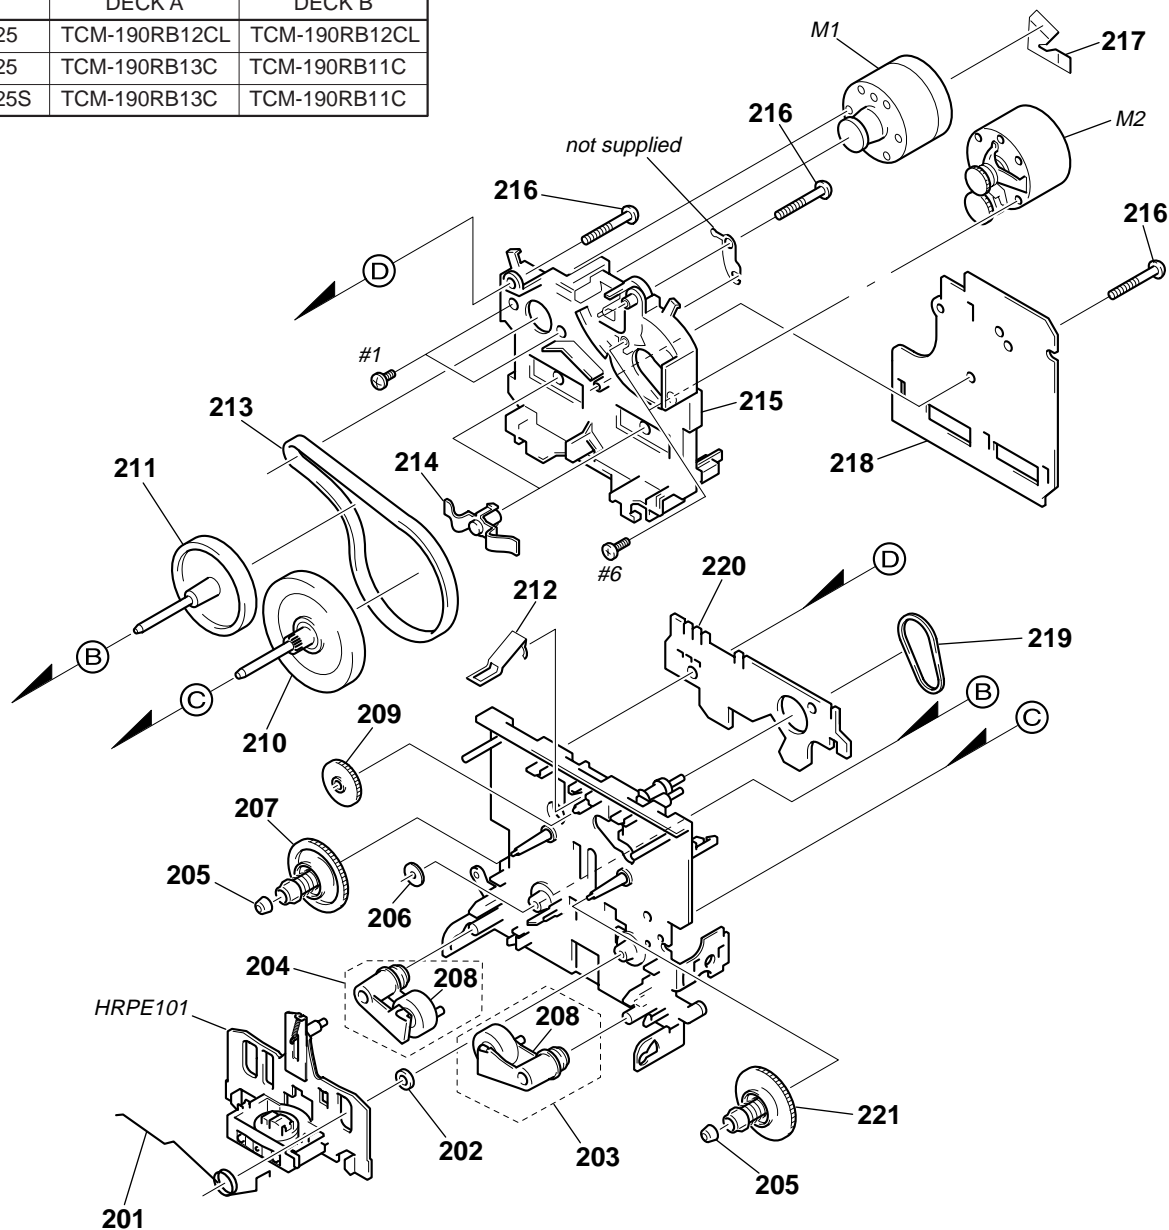

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	3-907-362-01	SPRING, TORSION		216	3-359-414-01	SCREW (+PTPWH 2X23)	
202	3-356-713-01	WASHER		217	1-638-983-11	MOTOR FLEXIBLE BOARD	
203	X-3366-047-1	LEVER (PINCH F) ASSY		* 218	A-2007-040-A	AUDIO (A) BOARD, COMPLETE (WE625)	
204	X-3366-048-1	LEVER (PINCH R) ASSY		* 218	A-2007-509-A	AUDIO (A) BOARD, COMPLETE (WE725/WE825S)	
205	3-362-308-01	CAP (REEL)		* 218	A-2007-040-A	AUDIO (B) BOARD, COMPLETE	
206	3-356-714-01	WASHER		219	3-359-466-01	BELT (FR), SQUARE	
207	X-3366-971-1	TABLE ASSY (B), REEL		* 220	1-634-841-14	LEAF SW (A) BOARD (DECK A) (WE725/WE825S)	
208	3-355-808-02	PINCH ROLLER		* 220	1-638-020-11	LEAF SW (A) BOARD (DECK A) (WE625)	
209	3-359-424-01	GEAR (REV GEAR)		* 220	1-634-841-14	LEAF SW (B) BOARD (DECK B) (WE725/WE825S)	
210	X-3367-629-1	FLYWHEEL (FWD) ASSY		* 220	1-638-020-11	LEAF SW (B) BOARD (DECK B) (WE625)	
211	X-3367-630-1	FLYWHEEL (REV) ASSY		221	X-3366-970-1	TABLE ASSY, REEL (WE625)	
212	3-359-430-01	SPRING (CASSETTE RETAINER), LEAF		221	X-3366-971-1	TABLE ASSY (B), REEL (WE725/WE825S)	
213	3-359-417-01	BELT (FLAT), CAPSTAN		HRPE101	A-2004-527-A	DECK ASSY, HEAD (RECORD/PLAYBACK/ERASE)	
214	3-575-321-00	RETAINER, THRUST, CAPSTAN		M1	X-3365-377-2	MOTOR ASSY (CAPSTAN)	
215	3-359-436-11	BASE (THRUST RETAINER), FITTING		M2	X-3363-501-2	MOTOR ASSY (REEL)	

6-6. TAPE MECHANISM SECTION 2

	DECK A	DECK B
WE625	TCM-190RB12CL	TCM-190RB12CL
WE725	TCM-190RB13C	TCM-190RB11C
WE825S	TCM-190RB13C	TCM-190RB11C

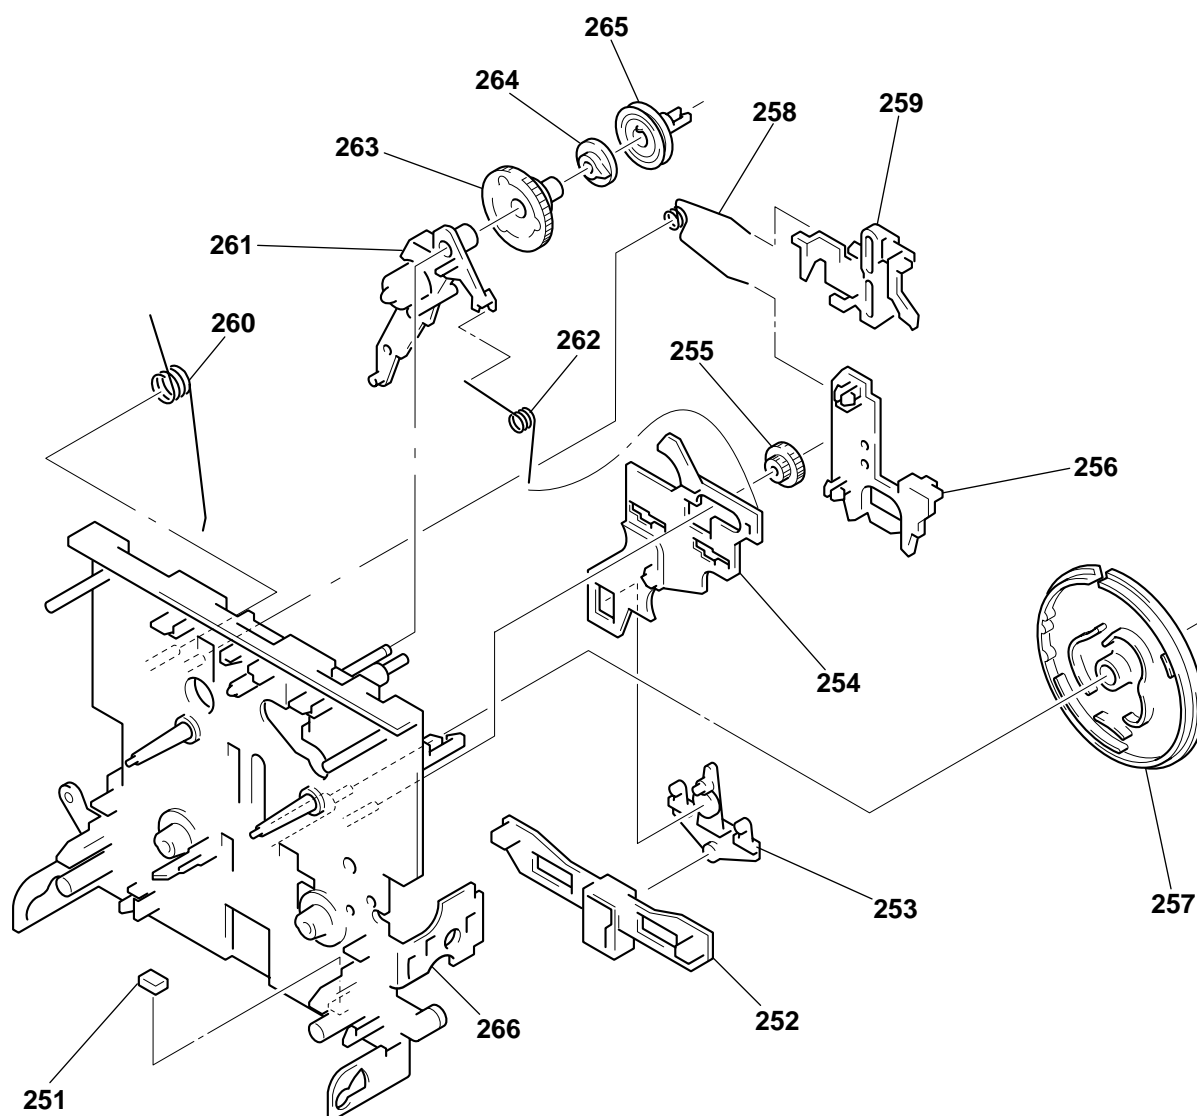

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
251	3-359-469-01	SPACER		259	3-359-429-01	SLIDER (BRAKE PLATE)	
252	3-359-425-01	SLIDER (REVERSE SLIDER)		260	3-359-456-01	SPRING (TRIGGER SPRING), TORSION	
253	3-359-426-01	LEVER (REVERSE LEVER)		261	X-3366-569-1	ARM ASSY, FR	
* 254	3-359-415-01	SLIDER (TRIGGER SLIDER)		262	3-924-185-11	SPRING (FR ARM), TORSION	
255	3-359-448-01	GEAR (TRIGGER)		263	3-359-419-11	GEAR (FR GEAR)	
256	3-359-427-01	SLIDER (REVERSE SLIDER)		264	3-359-421-01	CLUTCH (REEL DISC)	
257	3-936-483-01	GEAR (CAM GEAR)		265	3-359-418-01	PULLEY (FR PULLEY)	
258	3-359-454-01	SPRING, TORSION		266	X-3359-415-1	CHASSIS ASSY, MECHANICAL	

AUDIO (A)

SECTION 7 ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
- Abbreviation
CND : Canadian model MY : Malaysia model
AUS : Australian model CH : Chinese model
SP : Singapore model

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u : μ , for example:
uA.. : μ A.. uPA.. : μ PA..
uPB.. : μ PB.. uPC.. : μ PC.. uPD.. : μ PD..
• CAPACITORS
uF : μ F
• COILS
uH : μ H

The components identified by mark Δ or dotted line with mark. Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
*	A-2007-040-A	AUDIO (A) BOARD, COMPLETE (WE625)				< CONNECTOR >	
*	A-2007-509-A	AUDIO (A) BOARD, COMPLETE (WE725/WE825S)					

		< CAPACITOR >					
C11	1-163-131-00	CERAMIC CHIP	390PF 5% 50V	* CNP31	1-580-782-11	CONNECTOR, BOARD TO BOARD 10P	
C12	1-136-157-00	FILM	0.022uF 5% 50V	* CNP32	1-580-781-11	PIN, CONNECTOR (PC BOARD) 7P	
C13	1-124-234-00	ELECT	22uF 20% 16V	* CNP33	1-580-782-11	CONNECTOR, BOARD TO BOARD 10P	
C18	1-163-251-11	CERAMIC CHIP	100PF 5% 50V	* CNP71	1-564-719-11	PIN, CONNECTOR (SMALL TYPE) 3P	
C21	1-163-131-00	CERAMIC CHIP	390PF 5% 50V	CNP72	1-764-902-11	CONNECTOR, FFC/FPC 4P	
C22	1-136-157-00	FILM	0.022uF 5% 50V				
C23	1-124-234-00	ELECT	22uF 20% 16V	CNP73	1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P	
C28	1-163-251-11	CERAMIC CHIP	100PF 5% 50V				
C31	1-124-234-00	ELECT	22uF 20% 16V	CNP75	1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P	
C32	1-124-234-00	ELECT	22uF 20% 16V				
C33	1-124-234-00	ELECT	22uF 20% 16V			< DIODE >	
C51	1-164-161-11	CERAMIC CHIP	0.0022uF 10% 100V	D31	8-719-404-46	DIODE MA110	
C52	1-164-161-11	CERAMIC CHIP	0.0022uF 10% 100V				
C53	1-163-019-00	CERAMIC CHIP	0.0068uF 10% 50V			< IC >	
C54	1-136-601-11	FILM	0.01uF 5% 630V	IC31	8-759-711-85	IC NJM4580E-D	
C56	1-164-505-11	CERAMIC CHIP	2.2uF 16V	IC81	8-759-106-56	IC uPC1297CA	
C57	1-164-346-11	CERAMIC CHIP	1uF 16V				
C71	1-164-346-11	CERAMIC CHIP	1uF 16V			< COIL >	
C80	1-124-234-00	ELECT	22uF 20% 16V	L81	1-410-780-11	INDUCTOR 27mH	
C81	1-164-232-11	CERAMIC CHIP	0.01uF 50V	L91	1-410-780-11	INDUCTOR 27mH	
C82	1-136-157-00	FILM	0.022uF 5% 50V				
C83	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V			< TRANSISTOR >	
C84	1-136-478-11	FILM	470PF 5% 630V	Q51	8-729-822-05	TRANSISTOR 2SD1622-ST-TD	
C85	1-136-433-11	FILM	100PF 5% 630V	Q52	8-729-822-05	TRANSISTOR 2SD1622-ST-TD	
C86	1-163-143-00	CERAMIC CHIP	0.0012uF 5% 50V	Q53	8-729-822-05	TRANSISTOR 2SD1622-ST-TD	
C87	1-136-273-00	FILM	75PF 5% 630V	Q71	8-729-216-22	TRANSISTOR 2SA1162-G	
C88	1-163-003-11	CERAMIC CHIP	330PF 10% 50V				
C89	1-124-234-00	ELECT	22uF 20% 16V			< RESISTOR >	
C90	1-107-584-11	CERAMIC	4PF 0.25PF 500V	R11	1-216-099-00	METAL CHIP 120K 5% 1/10W	
C91	1-164-232-11	CERAMIC CHIP	0.01uF 50V	R12	1-216-025-00	RES,CHIP 100 5% 1/10W	
C92	1-136-157-00	FILM	0.022uF 5% 50V	R13	1-216-100-00	RES,CHIP 130K 5% 1/10W	
C93	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	R14	1-216-068-00	METAL CHIP 6.2K 5% 1/10W	
C94	1-136-478-11	FILM	470PF 5% 630V	R21	1-216-099-00	METAL CHIP 120K 5% 1/10W	
C95	1-136-433-11	FILM	100PF 5% 630V				
C96	1-163-143-00	CERAMIC CHIP	0.0012uF 5% 50V	R22	1-216-025-00	RES,CHIP 100 5% 1/10W	
C97	1-136-273-00	FILM	75PF 5% 630V	R23	1-216-100-00	RES,CHIP 130K 5% 1/10W	
C98	1-163-003-11	CERAMIC CHIP	330PF 10% 50V	R24	1-216-068-00	METAL CHIP 6.2K 5% 1/10W	
C99	1-164-005-11	CERAMIC CHIP	0.47uF 25V	R31	1-216-033-00	METAL CHIP 220 5% 1/10W	
				R32	1-216-033-00	METAL CHIP 220 5% 1/10W	
				R33	1-216-065-00	RES,CHIP 4.7K 5% 1/10W	
				R51	1-216-097-00	RES,CHIP 100K 5% 1/10W	
				R52	1-216-097-00	RES,CHIP 100K 5% 1/10W	
				R53	1-216-073-00	METAL CHIP 10K 5% 1/10W	
				R54	1-216-309-00	METAL CHIP 5.6 5% 1/10W	

AUDIO (A)

AUDIO (B)

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R55	1-216-309-00	METAL CHIP	5.6	5%	1/10W	C51	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
R57	1-216-298-00	METAL CHIP	2.2	5%	1/10W	C52	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
R71	1-216-082-00	RES,CHIP	24K	5%	1/10W	C53	1-163-019-00	CERAMIC CHIP	0.0068uF	10%	50V
R72	1-216-081-00	METAL CHIP	22K	5%	1/10W	C54	1-136-601-11	FILM	0.01uF	5%	630V
R73	1-216-089-00	RES,CHIP	47K	5%	1/10W	C56	1-164-505-11	CERAMIC CHIP	2.2uF		16V
R74	1-216-089-00	RES,CHIP	47K	5%	1/10W	C57	1-164-346-11	CERAMIC CHIP	1uF		16V
R81	1-216-073-00	METAL CHIP	10K	5%	1/10W	C71	1-164-346-11	CERAMIC CHIP	1uF		16V
R82	1-216-085-00	METAL CHIP	33K	5%	1/10W	C80	1-124-234-00	ELECT	22uF	20%	16V
R83	1-216-001-00	METAL CHIP	10	5%	1/10W	C81	1-164-232-11	CERAMIC CHIP	0.01uF		50V
R84	1-216-101-00	METAL CHIP	150K	5%	1/10W	C82	1-136-157-00	FILM	0.022uF	5%	50V
R85	1-216-075-00	METAL CHIP	12K	5%	1/10W	C83	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
R91	1-216-073-00	METAL CHIP	10K	5%	1/10W	C84	1-136-478-11	FILM	470PF	5%	630V
R92	1-216-085-00	METAL CHIP	33K	5%	1/10W	C85	1-136-433-11	FILM	100PF	5%	630V
R93	1-216-001-00	METAL CHIP	10	5%	1/10W	C86	1-163-143-00	CERAMIC CHIP	0.0012uF	5%	50V
R94	1-216-101-00	METAL CHIP	150K	5%	1/10W	C87	1-136-273-00	FILM	75PF	5%	630V
R95	1-216-075-00	METAL CHIP	12K	5%	1/10W	C88	1-163-003-11	CERAMIC CHIP	330PF	10%	50V
		< VARIABLE RESISTOR >				C89	1-124-234-00	ELECT	22uF	20%	16V
RV11	1-241-761-11	RES, ADJ, CARBON	1K			C90	1-107-584-11	CERAMIC	4PF	0.25PF	500V
RV21	1-241-761-11	RES, ADJ, CARBON	1K			C91	1-164-232-11	CERAMIC CHIP	0.01uF		50V
RV71	1-241-764-11	RES, ADJ, CARBON	10K			C92	1-136-157-00	FILM	0.022uF	5%	50V
RV72	1-241-764-11	RES, ADJ, CARBON	10K			C93	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
RV81	1-241-786-11	RES, ADJ, CARBON	22K			C94	1-136-478-11	FILM	470PF	5%	630V
RV91	1-241-786-11	RES, ADJ, CARBON	22K			C95	1-136-433-11	FILM	100PF	5%	630V
		< RELAY >				C96	1-163-143-00	CERAMIC CHIP	0.0012uF	5%	50V
RY31	1-515-913-11	RELAY				C97	1-136-273-00	FILM	75PF	5%	630V
		< TRANSFORMER >				C98	1-163-003-11	CERAMIC CHIP	330PF	10%	50V
T51	1-406-417-11	COIL, BIAS OSCILLATION				C99	1-164-005-11	CERAMIC CHIP	0.47uF		25V
T81	1-433-381-11	TRANSFORMER, BIAS OSCILLATOR						< CONNECTOR >			
T91	1-433-381-11	TRANSFORMER, BIAS OSCILLATOR				* CNP31	1-580-782-11	CONNECTOR, BOARD TO BOARD	10P		
		< TEST PIN >				* CNP32	1-580-781-11	PIN, CONNECTOR (PC BOARD)	7P		
* TP81	1-568-449-11	HOUSING, CONNECTOR (PC BOARD)	3P			* CNP33	1-580-782-11	CONNECTOR, BOARD TO BOARD	10P		
*****						* CNP71	1-564-719-11	PIN, CONNECTOR (SMALL TYPE)	3P		
		< DIODE >				CNP72	1-764-902-11	CONNECTOR, FFC/FPC	4P		
		< CAPACITOR >				CNP75	1-564-718-11	PIN, CONNECTOR (SMALL TYPE)	2P		
C11	1-163-131-00	CERAMIC CHIP	390PF	5%	50V			< IC >			
C12	1-136-157-00	FILM	0.022uF	5%	50V	D31	8-719-404-46	DIODE	MA110		
C13	1-124-234-00	ELECT	22uF	20%	16V			< COIL >			
C18	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	IC31	8-759-711-85	IC	NJM4580E-D		
C21	1-163-131-00	CERAMIC CHIP	390PF	5%	50V	IC81	8-759-106-56	IC	uPC1297CA		
C22	1-136-157-00	FILM	0.022uF	5%	50V			< TRANSISTOR >			
C23	1-124-234-00	ELECT	22uF	20%	16V	L81	1-410-780-11	INDUCTOR	27mH		
C28	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	L91	1-410-780-11	INDUCTOR	27mH		
C31	1-124-234-00	ELECT	22uF	20%	16V			< TRANSISTOR >			
C32	1-124-234-00	ELECT	22uF	20%	16V	Q51	8-729-822-05	TRANSISTOR	2SD1622-ST-TD		
						Q52	8-729-822-05	TRANSISTOR	2SD1622-ST-TD		
						Q53	8-729-822-05	TRANSISTOR	2SD1622-ST-TD		
C33	1-124-234-00	ELECT	22uF	20%	16V	Q71	8-729-216-22	TRANSISTOR	2SA1162-G		

AUDIO (B)

DOLBY-S

Ref. No.	Part No.	Description	Remark		
< RESISTOR >					
R11	1-216-099-00	METAL CHIP	120K	5%	1/10W
R12	1-216-025-00	RES,CHIP	100	5%	1/10W
R13	1-216-100-00	RES,CHIP	130K	5%	1/10W
R14	1-216-068-00	METAL CHIP	6.2K	5%	1/10W
R21	1-216-099-00	METAL CHIP	120K	5%	1/10W
R22	1-216-025-00	RES,CHIP	100	5%	1/10W
R23	1-216-100-00	RES,CHIP	130K	5%	1/10W
R24	1-216-068-00	METAL CHIP	6.2K	5%	1/10W
R31	1-216-033-00	METAL CHIP	220	5%	1/10W
R32	1-216-033-00	METAL CHIP	220	5%	1/10W
R33	1-216-065-00	RES,CHIP	4.7K	5%	1/10W
R51	1-216-097-00	RES,CHIP	100K	5%	1/10W
R52	1-216-097-00	RES,CHIP	100K	5%	1/10W
R53	1-216-073-00	METAL CHIP	10K	5%	1/10W
R54	1-216-309-00	METAL CHIP	5.6	5%	1/10W
R55	1-216-309-00	METAL CHIP	5.6	5%	1/10W
R57	1-216-298-00	METAL CHIP	2.2	5%	1/10W
R71	1-216-082-00	RES,CHIP	24K	5%	1/10W
R72	1-216-081-00	METAL CHIP	22K	5%	1/10W
R73	1-216-089-00	RES,CHIP	47K	5%	1/10W
R74	1-216-089-00	RES,CHIP	47K	5%	1/10W
R81	1-216-073-00	METAL CHIP	10K	5%	1/10W
R82	1-216-085-00	METAL CHIP	33K	5%	1/10W
R83	1-216-001-00	METAL CHIP	10	5%	1/10W
R84	1-216-101-00	METAL CHIP	150K	5%	1/10W
R85	1-216-075-00	METAL CHIP	12K	5%	1/10W
R91	1-216-073-00	METAL CHIP	10K	5%	1/10W
R92	1-216-085-00	METAL CHIP	33K	5%	1/10W
R93	1-216-001-00	METAL CHIP	10	5%	1/10W
R94	1-216-101-00	METAL CHIP	150K	5%	1/10W
R95	1-216-075-00	METAL CHIP	12K	5%	1/10W
< VARIABLE RESISTOR >					
RV11	1-241-761-11	RES, ADJ, CARBON	1K		
RV21	1-241-761-11	RES, ADJ, CARBON	1K		
RV71	1-241-764-11	RES, ADJ, CARBON	10K		
RV72	1-241-764-11	RES, ADJ, CARBON	10K		
RV81	1-241-786-11	RES, ADJ, CARBON	22K		
RV91	1-241-786-11	RES, ADJ, CARBON	22K		
< RELAY >					
RY31	1-515-913-11	RELAY			
< TRANSFORMER >					
T51	1-406-417-11	COIL, BIAS OSCILLATION			
T81	1-433-381-11	TRANSFORMER, BIAS OSCILLATOR			
T91	1-433-381-11	TRANSFORMER, BIAS OSCILLATOR			
< TEST PIN >					
* TP81	1-568-449-11	HOUSING, CONNECTOR (PC BOARD) 3P			

Ref. No.	Part No.	Description	Remark		
*	A-2007-801-A	DOLBY-S BOARD, COMPLETE (WE825S)			

< CAPACITOR >					
C1	1-136-165-00	FILM	0.1uF	5%	50V
C2	1-163-012-00	CERAMIC CHIP	0.0018uF	10%	50V
C3	1-163-012-00	CERAMIC CHIP	0.0018uF	10%	50V
C4	1-164-222-11	CERAMIC CHIP	0.22uF		25V
C5	1-136-165-00	FILM	0.1uF	5%	50V
C6	1-136-165-00	FILM	0.1uF	5%	50V
C7	1-137-372-11	FILM	0.022uF	5%	50V
C8	1-164-222-11	CERAMIC CHIP	0.22uF		25V
C9	1-126-301-11	ELECT	1uF	20%	50V
C10	1-137-442-11	FILM	0.039uF	5%	50V
C11	1-163-007-11	CERAMIC CHIP	680PF	10%	50V
C12	1-164-717-11	CERAMIC CHIP	0.0082uF	5%	50V
C13	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C14	1-124-465-00	ELECT	0.47uF	20%	50V
C15	1-164-222-11	CERAMIC CHIP	0.22uF		25V
C16	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C17	1-124-465-00	ELECT	0.47uF	20%	50V
C18	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C19	1-164-222-11	CERAMIC CHIP	0.22uF		25V
C20	1-163-035-00	CERAMIC CHIP	0.047uF		50V
C21	1-164-717-11	CERAMIC CHIP	0.0082uF	5%	50V
C22	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C23	1-163-005-11	CERAMIC CHIP	470PF	10%	50V
C24	1-137-442-11	FILM	0.039uF	5%	50V
C25	1-136-165-00	FILM	0.1uF	5%	50V
C26	1-137-372-11	FILM	0.022uF	5%	50V
C28	1-163-038-00	CERAMIC CHIP	0.1uF		25V
< CONNECTOR >					
CN1	1-695-092-11	SOCKET, CONNECTOR 7P			
< IC >					
IC1	8-752-076-30	IC CXA1917AM-T6			
< JUMPER RESISTOR >					
J1	1-216-296-00	SHORT	0		
J2	1-216-296-00	SHORT	0		
J3	1-216-296-00	SHORT	0		
< RESISTOR >					
R1	1-216-685-11	METAL CHIP	27K	0.5%	1/10W
R2	1-208-811-11	RES,CHIP	16K	2%	1/10W
R3	1-208-791-11	RES,CHIP	2.4K	2%	1/10W
R4	1-208-799-11	RES,CHIP	5.1K	2%	1/10W
R5	1-216-689-11	METAL CHIP	39K	0.5%	1/10W
R6	1-216-689-11	METAL CHIP	39K	0.5%	1/10W
R7	1-216-615-11	METAL CHIP	33	0.5%	1/10W
R8	1-208-462-41	RES,CHIP	10K	2%	1/10W

Ref. No.	Part No.	Description			Remark
R9	1-208-812-11	RES,CHIP	18K	2%	1/10W
R10	1-216-615-11	METAL CHIP	33	0.5%	1/10W
R11	1-216-619-11	METAL CHIP	47	0.5%	1/10W
R12	1-216-684-11	METAL CHIP	24K	0.5%	1/10W
R13	1-216-615-11	METAL CHIP	33	0.5%	1/10W
R14	1-216-619-11	METAL CHIP	47	0.5%	1/10W
R15	1-216-655-11	METAL CHIP	1.5K	0.5%	1/10W
R16	1-216-678-11	METAL CHIP	13K	0.5%	1/10W
R17	1-216-673-11	METAL CHIP	8.2K	0.5%	1/10W
R18	1-208-462-41	RES,CHIP	10K	2%	1/10W
R19	1-208-462-41	RES,CHIP	10K	2%	1/10W
R20	1-216-689-11	METAL CHIP	39K	0.5%	1/10W

FL BOARD					
(SUPPLIED WITH MAIN BOARD, COMPLETE)					

*	3-377-337-11	HOLDER (FL)			
		< CAPACITOR >			
C901	1-126-933-11	ELECT	100uF	20%	10V
C902	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
		< CONNECTOR >			
CNS901	1-770-247-11	SOCKET, CONNECTOR 41P			
		< FLUORESCENT INDICATOR >			
FLT901	1-517-263-11	INDICATOR TUBE, FLUORESCENT			
		< IC >			
IC901	8-749-014-66	IC NJL56H400			
		< RESISTOR >			
R904	1-216-025-00	RES,CHIP	100	5%	1/10W
R905	1-216-097-00	RES,CHIP	100K	5%	1/10W
					(WE625)
R906	1-216-025-00	RES,CHIP	100	5%	1/10W
R911	1-216-051-00	METAL CHIP	1.2K	5%	1/10W
R912	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R913	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R914	1-216-063-00	RES,CHIP	3.9K	5%	1/10W
R915	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R916	1-216-077-00	METAL CHIP	15K	5%	1/10W
R917	1-216-089-00	RES,CHIP	47K	5%	1/10W
R921	1-216-051-00	METAL CHIP	1.2K	5%	1/10W
R922	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R923	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R924	1-216-063-00	RES,CHIP	3.9K	5%	1/10W
R925	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R926	1-216-077-00	METAL CHIP	15K	5%	1/10W
R927	1-216-089-00	RES,CHIP	47K	5%	1/10W
R931	1-216-051-00	METAL CHIP	1.2K	5%	1/10W

Ref. No.	Part No.	Description	Remark		
R932	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R935	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R936	1-216-077-00	METAL CHIP	15K	5%	1/10W
R937	1-216-089-00	RES,CHIP	47K	5%	1/10W
(WE825S)					
R941	1-216-051-00	METAL CHIP	1.2K	5%	1/10W
R942	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R943	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R944	1-216-063-00	RES,CHIP	3.9K	5%	1/10W
R945	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R946	1-216-077-00	METAL CHIP	15K	5%	1/10W
R951	1-216-051-00	METAL CHIP	1.2K	5%	1/10W
R952	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R953	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R954	1-216-063-00	RES,CHIP	3.9K	5%	1/10W
< SWITCH >					
S911	1-554-303-21	SWITCH, TACTILE (■ CLEAR) (DECK A)			
S912	1-554-303-21	SWITCH, TACTILE (PAUSE) (DECK A)			
S913	1-554-303-21	SWITCH, TACTILE (▷ FRONT) (DECK A)			
S914	1-554-303-21	SWITCH, TACTILE (◁ BACK) (DECK A)			
S915	1-554-303-21	SWITCH, TACTILE (○ REC MUTING) (DECK A)			
S916	1-554-303-21	SWITCH, TACTILE (◀◀ (AMS)) (DECK B)			
S917	1-554-303-21	SWITCH, TACTILE (▶▶ (AMS)) (DECK B)			
S918	1-554-303-21	SWITCH, TACTILE (● REC) (DECK B)			
S921	1-554-303-21	SWITCH, TACTILE (■) (DECK B)			
S922	1-554-303-21	SWITCH, TACTILE (PAUSE) (DECK B)			
S923	1-554-303-21	SWITCH, TACTILE (▷ FRONT) (DECK B)			
S924	1-554-303-21	SWITCH, TACTILE (◁ BACK) (DECK B)			
S925	1-554-303-21	SWITCH, TACTILE (○ REC MUTING) (DECK B)			
S926	1-554-303-21	SWITCH, TACTILE (◀◀ (AMS)) (DECK A)			
S927	1-554-303-21	SWITCH, TACTILE (▶▶ (AMS)) (DECK A)			
S928	1-554-303-21	SWITCH, TACTILE (● REC) (DECK A)			
S931	1-554-303-21	SWITCH, TACTILE (RESET) (DECK A)			
S932	1-554-303-21	SWITCH, TACTILE (MEMORY) (DECK A)			
S936	1-762-567-11	SWITCH, SLIDE (DOLBY NR ON,OFF,FILTER)			
S937	1-762-608-11	SWITCH, SLIDE (DOLBY NR B,C)			
(WE625/WE725)					
S937	1-762-609-11	SWITCH, SLIDE (DOLBY NR B,C,S) (WE825S)			
S941	1-554-303-21	SWITCH, TACTILE (DISPLAY)			
S942	1-554-303-21	SWITCH, TACTILE (RMS START)			
S943	1-554-303-21	SWITCH, TACTILE (CHECK)			
S944	1-554-303-21	SWITCH, TACTILE (SET)			
S945	1-554-303-21	SWITCH, TACTILE (A+B REC)			
S946	1-554-303-21	SWITCH, TACTILE (HIGH/NORMAL)			
S951	1-554-303-21	SWITCH, TACTILE (RESET) (DECK B)			
S952	1-554-303-21	SWITCH, TACTILE (MEMORY) (DECK B)			
S953	1-554-303-21	SWITCH, TACTILE (DECK A)			
S954	1-554-303-21	SWITCH, TACTILE (DECK B)			

HEADPHONE	LEAF SW (A)	LEAF SW (B)	MAIN
-----------	-------------	-------------	------

Ref. No.	Part No.	Description	Remark
		HEADPHONE BOARD (SUPPLIED WITH MAIN BOARD, COMPLETE)	

		< JACK >	
J502	1-568-519-41	JACK, LARGE TYPE (PHONES)	

*	1-634-841-14	LEAF SW (A) BOARD (WE725/WE825S)	
*	1-638-020-11	LEAF SW (A) BOARD (WE625)	

		< CONNECTOR >	
* CNP81	1-568-850-11	SOCKET, CONNECTOR 7P (WE625)	
* CNP81	1-568-852-11	SOCKET, CONNECTOR 9P (WE725/WE825S)	
		< PHOTO REFLECTOR >	
IC81	8-749-924-10	PHOTO REFLECTOR NJL5165K-B(H1)	
IC82	8-749-924-10	PHOTO REFLECTOR NJL5165K-B(H1)	
		(WE725/WE825S)	
		< RESISTOR >	
R81	1-249-414-11	CARBON 560 5% 1/4W	
R82	1-247-818-11	CARBON 300 5% 1/4W	
R83	1-247-834-11	CARBON 1.3K 5% 1/4W	
R84	1-249-417-11	CARBON 1K 5% 1/4W	
R85	1-249-408-11	CARBON 180 5% 1/4W	
R86	1-249-408-11	CARBON 180 5% 1/4W	
		(WE725/WE825S)	
		< SWITCH >	
S81	1-571-958-11	SWITCH, PUSH (1 KEY) (STOP)	
S82	1-571-281-21	SWITCH, LEAF (CrO2)	
S83	1-571-281-21	SWITCH, LEAF (METAL)	
S84	1-571-281-21	SWITCH, LEAF (ERASE PROOF) (SIDE A)	
S85	1-571-281-21	SWITCH, LEAF (ERASE PROOF) (SIDE B)	
S86	1-571-281-21	SWITCH, LEAF (HALF)	

*	1-634-841-14	LEAF SW (B) BOARD (WE725/WE825S)	
*	1-638-020-11	LEAF SW (B) BOARD (WE625)	

		< CONNECTOR >	
* CNP81	1-568-850-11	SOCKET, CONNECTOR 7P (WE625)	
* CNP81	1-568-852-11	SOCKET, CONNECTOR 9P (WE725/WE825S)	
		< PHOTO REFLECTOR >	
IC81	8-749-924-10	PHOTO REFLECTOR NJL5165K-B(H1)	
IC82	8-749-924-10	PHOTO REFLECTOR NJL5165K-B(H1)	
		(WE725/WE825S)	

Ref. No.	Part No.	Description	Remark
		< RESISTOR >	
R81	1-249-414-11	CARBON 560 5% 1/4W	
R82	1-247-818-11	CARBON 300 5% 1/4W	
R83	1-247-834-11	CARBON 1.3K 5% 1/4W	
R84	1-249-417-11	CARBON 1K 5% 1/4W	
R85	1-249-408-11	CARBON 180 5% 1/4W	
R86	1-249-408-11	CARBON 180 5% 1/4W	
		(WE725/WE825S)	
		< SWITCH >	
S81	1-571-958-11	SWITCH, PUSH (1 KEY) (STOP)	
S82	1-571-281-21	SWITCH, LEAF (CrO2)	
S83	1-571-281-21	SWITCH, LEAF (METAL)	
S84	1-571-281-21	SWITCH, LEAF (ERASE PROOF) (SIDE A)	
S85	1-571-281-21	SWITCH, LEAF (ERASE PROOF) (SIDE B)	
S86	1-571-281-21	SWITCH, LEAF (HALF)	

*	A-2007-758-A	MAIN BOARD, COMPLETE (WE725)	
*	A-2007-761-A	MAIN BOARD, COMPLETE (WE625:US,CND)	
*	A-2007-762-A	MAIN BOARD, COMPLETE (WE625:AUS)	
*	A-2007-763-A	MAIN BOARD, COMPLETE (WE625:SP,MY)	
*	A-2007-764-A	MAIN BOARD, COMPLETE (WE625:CH)	
*	A-2007-765-A	MAIN BOARD, COMPLETE (WE825S:AE,UK)	
*	A-2007-802-A	MAIN BOARD, COMPLETE (WE825S:US)	
		(INCLUDING FL BOARD, HEADPHONE BOARD, REC VOL BOARD, SW (A) BOARD, SW (B) BOARD, SW (C) BOARD, TRANS (A) BOARD, TRANS (B) BOARD)	

		< CAPACITOR >	
C102	1-126-961-11	ELECT 2.2uF 20% 50V	
C103	1-163-017-00	CERAMIC CHIP 0.0047uF 5% 50V	
C104	1-126-963-11	ELECT 4.7uF 20% 50V	
C106	1-126-963-11	ELECT 4.7uF 20% 50V	
C107	1-126-964-11	ELECT 10uF 20% 50V	
C108	1-130-495-00	MYLAR 0.1uF 5% 50V	
C109	1-130-493-00	MYLAR 0.068uF 5% 50V	
C110	1-126-964-11	ELECT 10uF 20% 50V	
C111	1-126-959-11	ELECT 0.47uF 20% 50V	
C112	1-126-963-11	ELECT 4.7uF 20% 50V	
C113	1-126-963-11	ELECT 4.7uF 20% 50V	
C114	1-135-149-21	TANTALUM CHIP 2.2uF 20% 10V	
C115	1-163-016-00	CERAMIC CHIP 0.0039uF 10% 50V	
C116	1-126-959-11	ELECT 0.47uF 20% 50V	
C117	1-126-963-11	ELECT 4.7uF 20% 50V	
C121	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C202	1-126-961-11	ELECT 2.2uF 20% 50V	

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
C203	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V	C710	1-126-935-11	ELECT	470uF	20%	6.3V
C204	1-126-963-11	ELECT	4.7uF	20%	50V	C711	1-126-947-11	ELECT	47uF	20%	35V
C206	1-126-963-11	ELECT	4.7uF	20%	50V	C801	1-126-933-11	ELECT	100uF	20%	10V
C207	1-126-964-11	ELECT	10uF	20%	50V	C803	1-126-959-11	ELECT	0.47uF	20%	50V
C208	1-130-495-00	MYLAR	0.1uF	5%	50V	C810	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C209	1-130-493-00	MYLAR	0.068uF	5%	50V	< CONNECTOR >					
C210	1-126-964-11	ELECT	10uF	20%	50V	CN101	1-695-087-11	PIN, CONNECTOR (PC BOARD) 7P (WE825S)			
C211	1-126-959-11	ELECT	0.47uF	20%	50V	CN201	1-695-087-11	PIN, CONNECTOR (PC BOARD) 7P (WE825S)			
C212	1-126-963-11	ELECT	4.7uF	20%	50V	* CN501	1-691-916-11	CONNECTOR, BOARD TO BOARD 10P			
C213	1-126-963-11	ELECT	4.7uF	20%	50V	* CN502	1-691-916-11	CONNECTOR, BOARD TO BOARD 10P			
C214	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V	* CN503	1-691-916-11	CONNECTOR, BOARD TO BOARD 10P			
C215	1-163-016-00	CERAMIC CHIP	0.0039uF	10%	50V	* CN504	1-691-916-11	CONNECTOR, BOARD TO BOARD 10P			
C216	1-126-959-11	ELECT	0.47uF	20%	50V	* CNA801	1-568-954-11	PIN, CONNECTOR 5P (US,CND)			
C217	1-126-963-11	ELECT	4.7uF	20%	50V	* CNA803	1-568-934-11	PIN, CONNECTOR 7P			
C221	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V	CNA806	1-506-468-11	PIN, CONNECTOR 3P			
C401	1-165-319-11	CERAMIC CHIP	0.1uF		50V	* CNA807	1-568-955-11	PIN, CONNECTOR 6P			
C451	1-126-964-11	ELECT	10uF	20%	50V	CNM701	1-766-269-11	PIN, CONNECTOR (PC BOARD) 7P			
C461	1-126-964-11	ELECT	10uF	20%	50V	CNS802	1-770-246-11	SOCKET, CONNECTOR 41P			
C501	1-126-964-11	ELECT	10uF	20%	50V	* CNS804	1-568-826-11	SOCKET, CONNECTOR 7P (WE625)			
C502	1-126-964-11	ELECT	10uF	20%	50V	* CNS804	1-568-828-11	SOCKET, CONNECTOR 9P (WE725/WE825S)			
C503	1-126-964-11	ELECT	10uF	20%	50V	* CNS805	1-568-826-11	SOCKET, CONNECTOR 7P (WE625)			
C505	1-126-960-11	ELECT	1uF	20%	50V	* CNS805	1-568-828-11	SOCKET, CONNECTOR 9P (WE725/WE825S)			
C506	1-130-491-00	MYLAR	0.047uF	5%	50V	< DIODE >					
C507	1-130-498-00	MYLAR	0.18uF	5%	50V	D101	8-719-978-24	DIODE	DTZ-TT11-5.6A		
C508	1-126-959-11	ELECT	0.47uF	20%	50V	D201	8-719-978-24	DIODE	DTZ-TT11-5.6A		
C509	1-126-965-11	ELECT	22uF	20%	50V	D401	8-719-016-74	DIODE	1SS352		
C510	1-126-960-11	ELECT	1uF	20%	50V	D521	8-719-016-74	DIODE	1SS352		
C511	1-126-916-11	ELECT	1000uF	20%	6.3V	D522	8-719-016-74	DIODE	1SS352		
C512	1-126-925-11	ELECT	470uF	20%	10V	D601	8-719-016-74	DIODE	1SS352		
C514	1-126-767-11	ELECT	1000uF	20%	16V	D602	8-719-016-74	DIODE	1SS352 (WE725/WE825S)		
C515	1-126-767-11	ELECT	1000uF	20%	16V	D701	8-719-200-02	DIODE	10E2		
C516	1-126-959-11	ELECT	0.47uF	20%	50V	D702	8-719-200-02	DIODE	10E2		
C521	1-130-476-00	MYLAR	0.0027uF	5%	50V	D703	8-719-200-02	DIODE	10E2		
C522	1-130-494-11	MYLAR	0.082uF	5%	50V	D704	8-719-200-02	DIODE	10E2		
C523	1-130-491-00	MYLAR	0.047uF	5%	50V	D705	8-719-016-74	DIODE	1SS352		
C524	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V	D706	8-719-016-74	DIODE	1SS352		
C530	1-126-965-11	ELECT	22uF	20%	50V	D707	8-719-200-02	DIODE	10E2		
C561	1-136-168-00	FILM	0.18uF	5%	50V	D708	8-719-016-74	DIODE	1SS352		
C562	1-130-483-00	MYLAR	0.01uF	5%	50V	D709	8-719-978-24	DIODE	DTZ-TT11-5.6A		
C563	1-136-175-00	FILM	0.68uF	5%	50V	D710	8-719-978-24	DIODE	DTZ-TT11-5.6A		
C601	1-165-319-11	CERAMIC CHIP	0.1uF		50V	D711	8-719-978-24	DIODE	DTZ-TT11-5.6A		
C602	1-165-319-11	CERAMIC CHIP	0.1uF		50V	D712	8-719-105-99	DIODE	RD6.2M-B1		
C603	1-163-003-11	CERAMIC CHIP	330PF	10%	50V	D713	8-719-016-74	DIODE	1SS352		
C604	1-163-003-11	CERAMIC CHIP	330PF	10%	50V	D714	8-719-016-74	DIODE	1SS352		
C701	1-128-547-11	ELECT	6800uF	20%	16V	D715	8-719-016-74	DIODE	1SS352		
C702	1-126-937-11	ELECT	4700uF	20%	16V	D716	8-719-977-11	DIODE	DTZ6.8A		
C703	1-126-960-11	ELECT	1uF	20%	50V	D801	8-719-016-74	DIODE	1SS352		
C704	1-126-969-11	ELECT	220uF	20%	50V	D802	8-719-016-74	DIODE	1SS352		
C705	1-126-963-11	ELECT	4.7uF	20%	50V	D803	8-719-016-74	DIODE	1SS352		
C706	1-126-926-11	ELECT	1000uF	20%	10V	D804	8-719-016-74	DIODE	1SS352		
C707	1-126-926-11	ELECT	1000uF	20%	10V						
C708	1-126-963-11	ELECT	4.7uF	20%	50V						
C709	1-126-963-11	ELECT	4.7uF	20%	50V						

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
< IC >							
IC501	8-752-075-27	IC CXA1878Q		Q703	8-729-141-83	TRANSISTOR 2SB1094-LK	
IC502	8-759-636-55	IC M5218AFP		Q704	8-729-010-29	TRANSISTOR MSD601-RST1	
IC504	8-752-070-67	IC CXA1597P		Q705	8-729-421-22	TRANSISTOR UN2211 (US,CND)	
IC561	8-759-100-96	IC uPC4558G2		Q706	8-729-421-22	TRANSISTOR UN2211 (US,CND)	
IC601	8-759-822-38	IC LA6510		Q707	8-729-010-05	TRANSISTOR MSB709-RT1	
IC701	8-759-100-96	IC uPC4558G2		Q708	8-729-140-04	TRANSISTOR 2SB1116A-L	
IC801	8-752-892-34	IC CXP82432A-006Q		Q801	8-729-421-19	TRANSISTOR UN2213	
IC802	8-759-165-82	IC PST600E-T		Q802	8-729-010-29	TRANSISTOR MSD601-RST1	
IC803	8-759-009-06	IC MC14052BF		< RESISTOR >			
IC804	8-759-009-06	IC MC14052BF		R101	1-216-073-00	METAL CHIP 10K 5% 1/10W	
IC805	8-759-009-19	IC MC14081BF		R102	1-216-105-00	RES,CHIP 220K 5% 1/10W	
IC806	8-759-009-06	IC MC14052BF		R103	1-216-097-00	RES,CHIP 100K 5% 1/10W	
IC807	8-759-032-11	IC MC74HC04AF		R104	1-216-055-00	METAL CHIP 1.8K 5% 1/10W	
IC808	8-759-009-06	IC MC14052BF		R105	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	
IC809	8-759-032-11	IC MC74HC04AF		R106	1-216-060-00	RES,CHIP 3K 5% 1/10W	
< JACK >				R107	1-216-049-11	RES,CHIP 1K 5% 1/10W	
* J401	1-764-188-11	JACK (SMALL TYPE) (DIA. 3.5) (S-LINK CONTROL A1)		R108	1-216-063-00	RES,CHIP 3.9K 5% 1/10W	
* J402	1-764-188-11	JACK (SMALL TYPE) (DIA. 3.5) (S-LINK CONTROL A1)		R109	1-216-073-00	METAL CHIP 10K 5% 1/10W	
J501	1-770-614-11	JACK, PIN 4P (LINE IN/OUT)		R110	1-216-065-00	RES,CHIP 4.7K 5% 1/10W	
< LOW PASS FILTER >				R111	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
LPF101	1-233-271-11	FILTER, LOW PASS		R112	1-216-075-00	METAL CHIP 12K 5% 1/10W	
LPF201	1-233-271-11	FILTER, LOW PASS		R113	1-216-049-11	RES,CHIP 1K 5% 1/10W	
< TRANSISTOR >				R114	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
Q101	8-729-900-74	TRANSISTOR DTC143TS		R115	1-216-081-00	METAL CHIP 22K 5% 1/10W	
Q102	8-729-922-37	TRANSISTOR 2SD2144S		R116	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	
Q201	8-729-900-74	TRANSISTOR DTC143TS		R117	1-216-073-00	METAL CHIP 10K 5% 1/10W	
Q202	8-729-922-37	TRANSISTOR 2SD2144S		R118	1-216-033-00	METAL CHIP 220 5% 1/10W	
Q401	8-729-010-29	TRANSISTOR MSD601-RST1		R119	1-216-049-11	RES,CHIP 1K 5% 1/10W	
Q451	8-729-010-05	TRANSISTOR MSB709-RT1		R120	1-216-089-00	RES,CHIP 47K 5% 1/10W	
Q452	8-729-424-08	TRANSISTOR UN2111		R121	1-216-089-00	RES,CHIP 47K 5% 1/10W	
Q453	8-729-421-22	TRANSISTOR UN2211		R122	1-216-073-00	METAL CHIP 10K 5% 1/10W	
Q461	8-729-010-05	TRANSISTOR MSB709-RT1		R123	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	
Q462	8-729-424-08	TRANSISTOR UN2111		R124	1-216-295-00	SHORT 0 (WE625/WE725)	
Q463	8-729-421-22	TRANSISTOR UN2211		R201	1-216-073-00	METAL CHIP 10K 5% 1/10W	
Q501	8-729-010-05	TRANSISTOR MSB709-RT1		R202	1-216-105-00	RES,CHIP 220K 5% 1/10W	
Q502	8-729-010-29	TRANSISTOR MSD601-RST1		R203	1-216-097-00	RES,CHIP 100K 5% 1/10W	
Q503	8-729-010-29	TRANSISTOR MSD601-RST1		R204	1-216-055-00	METAL CHIP 1.8K 5% 1/10W	
Q601	8-729-421-22	TRANSISTOR UN2211		R205	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	
Q602	8-729-421-22	TRANSISTOR UN2211		R206	1-216-060-00	RES,CHIP 3K 5% 1/10W	
Q603	8-729-424-08	TRANSISTOR UN2111 (WE725/WE825S)		R207	1-216-049-11	RES,CHIP 1K 5% 1/10W	
Q604	8-729-801-93	TRANSISTOR 2SD1387		R208	1-216-063-00	RES,CHIP 3.9K 5% 1/10W	
Q605	8-729-801-93	TRANSISTOR 2SD1387		R209	1-216-073-00	METAL CHIP 10K 5% 1/10W	
Q606	8-729-421-22	TRANSISTOR UN2211 (WE725/WE825S)		R210	1-216-065-00	RES,CHIP 4.7K 5% 1/10W	
Q607	8-729-424-08	TRANSISTOR UN2111 (WE725/WE825S)		R211	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
Q621	8-729-010-05	TRANSISTOR MSB709-RT1 (WE725/WE825S)		R212	1-216-075-00	METAL CHIP 12K 5% 1/10W	
Q701	8-729-141-83	TRANSISTOR 2SB1094-LK		R213	1-216-049-11	RES,CHIP 1K 5% 1/10W	
Q702	8-729-209-15	TRANSISTOR 2SD2012		R214	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
				R215	1-216-081-00	METAL CHIP 22K 5% 1/10W	
				R216	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	
				R217	1-216-073-00	METAL CHIP 10K 5% 1/10W	
				R218	1-216-033-00	METAL CHIP 220 5% 1/10W	
				R219	1-216-049-11	RES,CHIP 1K 5% 1/10W	

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R220	1-216-089-00	RES,CHIP	47K	5%	1/10W	R579	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R221	1-216-089-00	RES,CHIP	47K	5%	1/10W	R580	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R222	1-216-073-00	METAL CHIP	10K	5%	1/10W	R581	1-216-065-00	RES,CHIP	4.7K	5%	1/10W
R223	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	R582	1-216-065-00	RES,CHIP	4.7K	5%	1/10W
R224	1-216-295-00	SHORT	0	(WE625/WE725)		R583	1-216-070-00	METAL CHIP	7.5K	5%	1/10W
R401	1-216-073-00	METAL CHIP	10K	5%	1/10W	R584	1-216-075-00	METAL CHIP	12K	5%	1/10W
R402	1-216-049-11	RES,CHIP	1K	5%	1/10W	R585	1-216-071-00	METAL CHIP	8.2K	5%	1/10W
R403	1-216-065-00	RES,CHIP	4.7K	5%	1/10W	R586	1-216-071-00	METAL CHIP	8.2K	5%	1/10W
R404	1-216-073-00	METAL CHIP	10K	5%	1/10W	R587	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R405	1-216-001-00	METAL CHIP	10	5%	1/10W	R588	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R451	1-216-059-00	METAL CHIP	2.7K	5%	1/10W	R601	1-216-025-00	RES,CHIP	100	5%	1/10W
R452	1-216-059-00	METAL CHIP	2.7K	5%	1/10W	R602	1-216-025-00	RES,CHIP	100	5%	1/10W
R453	1-216-059-00	METAL CHIP	2.7K	5%	1/10W	R603	1-216-081-00	METAL CHIP	22K	5%	1/10W
R461	1-216-059-00	METAL CHIP	2.7K	5%	1/10W	R604	1-216-081-00	METAL CHIP	22K	5%	1/10W
R462	1-216-059-00	METAL CHIP	2.7K	5%	1/10W	R605	1-216-075-00	METAL CHIP	12K	5%	1/10W
R463	1-216-059-00	METAL CHIP	2.7K	5%	1/10W	R606	1-216-075-00	METAL CHIP	12K	5%	1/10W
R501	1-208-816-11	RES,CHIP	27K	0.50%	1/10W	R607	1-216-076-00	METAL CHIP	13K	5%	1/10W
R502	1-208-813-11	RES,CHIP	20K	0.50%	1/10W	R608	1-216-076-00	METAL CHIP	13K	5%	1/10W
R503	1-216-049-11	RES,CHIP	1K	5%	1/10W	R609	1-216-076-00	METAL CHIP	13K	5%	1/10W
R504	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	R610	1-216-076-00	METAL CHIP	13K	5%	1/10W
R505	1-216-121-00	RES,CHIP	1M	5%	1/10W	R613	1-216-070-00	METAL CHIP	7.5K	5%	1/10W
R506	1-216-073-00	METAL CHIP	10K	5%	1/10W	R614	1-216-070-00	METAL CHIP	7.5K	5%	1/10W
R507	1-216-073-00	METAL CHIP	10K	5%	1/10W	R615	1-216-072-00	METAL CHIP	9.1K	5%	1/10W
R508	1-216-041-00	METAL CHIP	470	5%	1/10W	R616	1-216-072-00	METAL CHIP	9.1K	5%	1/10W
R509	1-216-049-11	RES,CHIP	1K	5%	1/10W	R617	1-216-073-00	METAL CHIP	10K	5%	1/10W
R510	1-216-089-00	RES,CHIP	47K	5%	1/10W	R618	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R511	1-216-073-00	METAL CHIP	10K	5%	1/10W	R619	1-216-073-00	METAL CHIP	10K	5%	1/10W
R512	1-216-041-00	METAL CHIP	470	5%	1/10W	R620	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R513	1-216-089-00	RES,CHIP	47K	5%	1/10W	R622	1-216-066-00	METAL CHIP	5.1K	5%	1/10W
R514	1-216-025-00	RES,CHIP	100	5%	1/10W	(WE725/WE825S)			5%	1/10W	(WE725/WE825S)
R515	1-208-816-11	RES,CHIP	27K	0.50%	1/10W	R623	1-216-089-00	RES,CHIP	47K	5%	1/10W
R521	1-216-081-00	METAL CHIP	22K	5%	1/10W	(WE725/WE825S)			5%	1/10W	(WE725/WE825S)
R522	1-216-067-00	METAL CHIP	5.6K	5%	1/10W	R624	1-216-089-00	RES,CHIP	47K	5%	1/10W
R523	1-216-689-11	METAL CHIP	39K	0.5%	1/10W	R701	1-249-414-11	CARBON	560	5%	1/4W
R524	1-216-065-00	RES,CHIP	4.7K	5%	1/10W	R702	1-216-073-00	METAL CHIP	10K	5%	1/10W
R525	1-216-065-00	RES,CHIP	4.7K	5%	1/10W	R703	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R526	1-216-097-00	RES,CHIP	100K	5%	1/10W	R704	1-216-065-00	RES,CHIP	4.7K	5%	1/10W
R527	1-216-097-00	RES,CHIP	100K	5%	1/10W	R705	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R528	1-216-063-00	RES,CHIP	3.9K	5%	1/10W	R706	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R529	1-216-041-00	METAL CHIP	470	5%	1/10W	R707	1-216-073-00	METAL CHIP	10K	5%	1/10W
R530	1-216-073-00	METAL CHIP	10K	5%	1/10W	R708	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R561	1-216-089-00	RES,CHIP	47K	5%	1/10W	R709	1-216-065-00	RES,CHIP	4.7K	5%	1/10W
R562	1-216-089-00	RES,CHIP	47K	5%	1/10W	R710	1-216-049-11	RES,CHIP	1K	5%	1/10W
R563	1-216-089-00	RES,CHIP	47K	5%	1/10W	R711	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R564	1-216-081-00	METAL CHIP	22K	5%	1/10W	R712	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R565	1-216-081-00	METAL CHIP	22K	5%	1/10W	R713	1-216-049-11	RES,CHIP	1K	5%	1/10W
R571	1-216-051-00	METAL CHIP	1.2K	5%	1/10W	R714	1-216-073-00	METAL CHIP	10K	5%	1/10W
R572	1-216-067-00	METAL CHIP	5.6K	5%	1/10W	R715	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R573	1-216-069-00	METAL CHIP	6.8K	5%	1/10W	R716	1-216-081-00	METAL CHIP	22K	5%	1/10W
R575	1-216-070-00	METAL CHIP	7.5K	5%	1/10W	R717	1-216-073-00	METAL CHIP	10K	5%	1/10W
R576	1-216-075-00	METAL CHIP	12K	5%	1/10W	R718	1-216-689-11	METAL CHIP	39K	0.5%	1/10W
R577	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	R719	1-216-075-00	METAL CHIP	12K	5%	1/10W
R578	1-216-071-00	METAL CHIP	8.2K	5%	1/10W						

MAIN

REC VOL

Ref. No.	Part No.	Description			Remark
△ R720	1-219-136-11	FUSIBLE	0.22	10%	1/4W F
R721	1-216-073-00	METAL CHIP	10K	5%	1/10W
△ R722	1-219-137-11	FUSIBLE	0.33	10%	1/4W F
△ R723	1-219-137-11	FUSIBLE	0.33	10%	1/4W F
R801	1-216-097-00	RES,CHIP	100K	5%	1/10W
R802	1-216-073-00	METAL CHIP	10K	5%	1/10W
R803	1-216-073-00	METAL CHIP	10K	5%	1/10W
					(WE725/WE825S)
R804	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
					(WE725/WE825S)
R806	1-216-081-00	METAL CHIP	22K	5%	1/10W
R807	1-216-097-00	RES,CHIP	100K	5%	1/10W
R808	1-216-097-00	RES,CHIP	100K	5%	1/10W
R809	1-216-049-11	RES,CHIP	1K	5%	1/10W
R810	1-216-025-00	RES,CHIP	100	5%	1/10W
R811	1-216-073-00	METAL CHIP	10K	5%	1/10W
R812	1-216-073-00	METAL CHIP	10K	5%	1/10W
R813	1-216-073-00	METAL CHIP	10K	5%	1/10W
R814	1-216-073-00	METAL CHIP	10K	5%	1/10W
R815	1-216-073-00	METAL CHIP	10K	5%	1/10W
R816	1-216-025-00	RES,CHIP	100	5%	1/10W
R817	1-216-025-00	RES,CHIP	100	5%	1/10W
R818	1-216-025-00	RES,CHIP	100	5%	1/10W
R819	1-216-025-00	RES,CHIP	100	5%	1/10W
R820	1-216-025-00	RES,CHIP	100	5%	1/10W
R821	1-216-025-00	RES,CHIP	100	5%	1/10W
R822	1-216-025-00	RES,CHIP	100	5%	1/10W
R823	1-216-025-00	RES,CHIP	100	5%	1/10W
R824	1-216-025-00	RES,CHIP	100	5%	1/10W
R825	1-216-025-00	RES,CHIP	100	5%	1/10W
R826	1-216-025-00	RES,CHIP	100	5%	1/10W
R827	1-216-025-00	RES,CHIP	100	5%	1/10W
R828	1-216-025-00	RES,CHIP	100	5%	1/10W
R829	1-216-025-00	RES,CHIP	100	5%	1/10W
R830	1-216-025-00	RES,CHIP	100	5%	1/10W
R831	1-216-097-00	RES,CHIP	100K	5%	1/10W
R832	1-216-097-00	RES,CHIP	100K	5%	1/10W
R833	1-216-097-00	RES,CHIP	100K	5%	1/10W
R834	1-216-097-00	RES,CHIP	100K	5%	1/10W
R841	1-216-073-00	METAL CHIP	10K	5%	1/10W
R842	1-216-080-00	METAL CHIP	20K	5%	1/10W
R843	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R844	1-216-092-00	RES,CHIP	62K	5%	1/10W
R845	1-216-084-00	METAL CHIP	30K	5%	1/10W
R846	1-216-077-00	METAL CHIP	15K	5%	1/10W
R847	1-216-070-00	METAL CHIP	7.5K	5%	1/10W
R848	1-216-073-00	METAL CHIP	10K	5%	1/10W
R849	1-216-073-00	METAL CHIP	10K	5%	1/10W
R850	1-216-073-00	METAL CHIP	10K	5%	1/10W
R851	1-216-073-00	METAL CHIP	10K	5%	1/10W
R852	1-216-083-00	METAL CHIP	27K	5%	1/10W
R853	1-216-083-00	METAL CHIP	27K	5%	1/10W
R854	1-216-083-00	METAL CHIP	27K	5%	1/10W

Ref. No.	Part No.	Description			Remark
R855	1-216-083-00	METAL CHIP	27K	5%	1/10W
R861	1-216-073-00	METAL CHIP	10K	5%	1/10W
R862	1-216-080-00	METAL CHIP	20K	5%	1/10W
R863	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R864	1-216-092-00	RES,CHIP	62K	5%	1/10W
R865	1-216-084-00	METAL CHIP	30K	5%	1/10W
R866	1-216-077-00	METAL CHIP	15K	5%	1/10W
R867	1-216-070-00	METAL CHIP	7.5K	5%	1/10W
R868	1-216-073-00	METAL CHIP	10K	5%	1/10W
R869	1-216-073-00	METAL CHIP	10K	5%	1/10W
R870	1-216-073-00	METAL CHIP	10K	5%	1/10W
R871	1-216-073-00	METAL CHIP	10K	5%	1/10W
R872	1-216-083-00	METAL CHIP	27K	5%	1/10W
R873	1-216-083-00	METAL CHIP	27K	5%	1/10W
R874	1-216-083-00	METAL CHIP	27K	5%	1/10W
R875	1-216-083-00	METAL CHIP	27K	5%	1/10W
R877	1-216-081-00	METAL CHIP	22K	5%	1/10W
R878	1-216-081-00	METAL CHIP	22K	5%	1/10W
R881	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R882	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R883	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R884	1-216-083-00	METAL CHIP	27K	5%	1/10W
R885	1-216-083-00	METAL CHIP	27K	5%	1/10W
					(WE725/WE825S)
R885	1-216-295-00	SHORT	0		(WE625)
R886	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R891	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R892	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R893	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R894	1-216-083-00	METAL CHIP	27K	5%	1/10W
R895	1-216-083-00	METAL CHIP	27K	5%	1/10W
					(WE725/WE825S)
R895	1-216-295-00	SHORT	0		(WE625)
R896	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
< VARIABLE RESISTOR >					
RV101	1-241-764-11	RES, ADJ, CARBON	10K		
RV102	1-241-764-11	RES, ADJ, CARBON	10K		
RV201	1-241-764-11	RES, ADJ, CARBON	10K		
RV202	1-241-764-11	RES, ADJ, CARBON	10K		
RV601	1-241-765-11	RES, ADJ, CARBON	22K		(WE725/WE825S)
< VIBRATOR >					
X801	1-579-175-11	VIBRATOR, CERAMIC (10MHz)			

REC VOL BOARD					
(SUPPLIED WITH MAIN BOARD, COMPLETE)					

< DIODE >					
D901	8-719-313-43	LED SEL6210S-TH10 (CD SYNCHRO)			
D902	8-719-313-43	LED SEL6210S-TH10 (AUTO)			

The components identified by
mark △ or dotted line with mark.
△ are critical for safety.
Replace only with part number
specified.

Les composants identifiés par une
marque △ sont critiques pour la
sécurité.
Ne les remplacer que par une pièce
portant le numéro spécifié.

REC VOL	SW (A)	SW (B)	SW (C)	TRANS (A)	TRANS (B)
---------	--------	--------	--------	-----------	-----------

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
< TRANSISTOR >				< SWITCH >			
Q901	8-729-424-08	TRANSISTOR UN2111		S947A	1-762-609-11	SWITCH, SLIDE (DIRECTION MODE)	
Q902	8-729-424-08	TRANSISTOR UN2111		S960A	1-554-118-00	SWITCH, PUSH (1 KEY) (PITCH CONTROL)	(AEP,UK)
< RESISTOR >				*****			
R901	1-216-041-00	METAL CHIP 470 5% 1/10W		SW (C) BOARD (EXCEPT US,CND)			
R902	1-216-041-00	METAL CHIP 470 5% 1/10W		(SUPPLIED WITH MAIN BOARD, COMPLETE)			
R933	1-216-059-00	METAL CHIP 2.7K 5% 1/10W		*****			
R934	1-216-063-00	RES,CHIP 3.9K 5% 1/10W		< CAPACITOR >			
< VARIABLE RESISTOR >				△ C001 1-113-925-11 CERAMIC 0.01uF 20% 250V			
RV901	1-225-616-11	RES, VAR, CARBON 20K (REC LEVEL)		< CONNECTOR >			
< SWITCH >				CN002 1-568-226-11 PIN, CONNECTOR 2P (AEP,UK,CH,AUS)			
S933	1-554-303-21	SWITCH, TACTILE (FADER)		* CN002	1-580-230-31	PIN, CONNECTOR (PC BOARD) 2P (SP,MY)	
S934	1-554-303-21	SWITCH, TACTILE (ARL)		< SWITCH >			
S935	1-554-303-21	SWITCH, TACTILE (CD SYNCHRO)		△ S850 1-762-581-11 SWITCH, AC POWER PUSH (1 KEY) (㊦)			
*****				*****			
SW (A) BOARD (US,CND)				TRANS (A) BOARD (EXCEPT SP,MY)			
(SUPPLIED WITH MAIN BOARD, COMPLETE)				(SUPPLIED WITH MAIN BOARD, COMPLETE)			
*****				*****			
< RESISTOR >				< CONNECTOR >			
R903	1-216-097-00	RES,CHIP 100K 5% 1/10W		* CN001 1-573-047-11 PIN, CONNECTOR (PC BOARD) 2P			
		(WE825S:US)		*****			
R947	1-216-089-00	RES,CHIP 47K 5% 1/10W		TRANS (B) BOARD			
< VARIABLE RESISTOR >				(SUPPLIED WITH MAIN BOARD, COMPLETE)			
RV902	1-225-173-21	RES, VAR, CARBON 50K (PITCH CONTROL)		*****			
		(WE825S:US)		< CAPACITOR >			
< SWITCH >				C751 1-165-319-11 CERAMIC CHIP 0.1uF 50V			
S801	1-554-118-00	SWITCH, PUSH (1 KEY) (I/⏏)		C752	1-137-374-11	FILM 0.047uF 5% 50V	
S947	1-762-609-11	SWITCH, SLIDE (DIRECTION MODE)		C753	1-137-374-11	FILM 0.047uF 5% 50V	
S960	1-554-118-00	SWITCH, PUSH (1 KEY) (PITCH CONTROL)		< TRANSFORMER >			
(WE825S:US)				△ T701 1-431-786-11 TRANSFORMER, POWER (AEP,UK,CH,AUS)			
*****				△ T701 1-431-788-11 TRANSFORMER, POWER (US,CND)			
SW (B) BOARD (EXCEPT US,CND)				△ T701 1-431-789-11 TRANSFORMER, POWER (SP,MY)			
(SUPPLIED WITH MAIN BOARD, COMPLETE)				*****			
*****				< RESISTOR >			
R903A	1-216-097-00	RES,CHIP 100K 5% 1/10W		R903A 1-216-097-00 RES,CHIP 100K 5% 1/10W			
		(AEP,UK)		(AEP,UK)			
R947A	1-216-089-00	RES,CHIP 47K 5% 1/10W		< VARIABLE RESISTOR >			
< VARIABLE RESISTOR >				RV902A 1-225-173-21 RES, VAR, CARBON 50K (PITCH CONTROL)			
RV902A	1-225-173-21	RES, VAR, CARBON 50K (PITCH CONTROL)		(AEP,UK)			
		(AEP,UK)					

The components identified by mark △ or dotted line with mark. △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
---	--

TC-WE625/WE725/WE825S

Ref. No.	Part No.	Description	Remark
		MISCELLANEOUS *****	
52	1-590-486-11	WIRE (FLAT TYPE) (7 CORE) (WE625)	
52	1-769-914-11	WIRE (FLAT TYPE) (9 CORE) (WE725/WE825S)	
56	1-769-883-11	WIRE (FLAT TYPE) (7 CORE) (WE625)	
56	1-769-916-11	WIRE (FLAT TYPE) (9 CORE) (WE725/WE825S)	
△ 58	1-575-651-21	CORD, POWER (AEP,SP,MY)	
△ 59	1-751-529-11	CORD, POWER (UK)	
△ 60	1-590-926-11	CORD, POWER (US,CND)	
△ 61	1-696-845-11	CORD, POWER (AUS)	
△ 62	1-782-510-11	CORD, POWER (CH)	
162	1-769-598-11	WIRE (FLAT TYPE) (41 CORE)	
217	1-638-983-11	MOTOR FLEXIBLE BOARD	
HRPE101	A-2004-527-A	DECK ASSY, HEAD (RECORD/PLAYBACK/ERASE)	
M1	X-3365-377-2	MOTOR ASSY (CAPSTAN)	
M2	X-3363-501-2	MOTOR ASSY (REEL)	
△ S701	1-692-155-11	SELECTOR, POWER VOLTAGE (VOLTAGE) (SP,MY)	
△ T701	1-431-786-11	TRANSFORMER, POWER (AEP,UK,CH,AUS)	
△ T701	1-431-788-11	TRANSFORMER, POWER (US,CND)	
△ T701	1-431-789-11	TRANSFORMER, POWER (SP,MY)	

		ACCESSORIES & PACKING MATERIALS *****	
	1-559-713-31	CORD, CONNECTION (AUDIO)	
	1-777-172-11	CORD, CONNECTION (CONTROL A1) (CND)	
*	3-023-344-01	INDIVIDUAL CARTON (WE725)	
*	3-023-369-01	INDIVIDUAL CARTON (WE625:US,CND,AUS)	
*	3-023-370-01	INDIVIDUAL CARTON (WE625:CH,SP,MY)	
*	3-023-373-01	CUSHION	
*	3-023-374-01	INDIVIDUAL CARTON (WE825S:AEP,UK)	
*	3-025-278-01	INDIVIDUAL CARTON (WE825S:US)	
	3-862-713-11	MANUAL, INSTRUCTION (ENGLISH) (US,CND,UK,CH,AUS)	
	3-862-713-21	MANUAL, INSTRUCTION (FRENCH) (CND)	
	3-862-713-31	MANUAL, INSTRUCTION (ENGLISH,FRENCH, SPANISH,PORTUGUESE) (AEP,SP,MY)	
	3-862-713-41	MANUAL, INSTRUCTION (GERMAN,DUTCH, SWEDISH,ITALIAN) (AEP)	
	3-862-713-51	MANUAL, INSTRUCTION (CHINESE) (CH,SP,MY)	

		***** HARDWARE LIST *****	
#1	7-621-775-00	SCREW +B 2.6X3	
#2	7-685-871-01	SCREW +BVTT 3X6 (S)	
#3	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S	
#4	7-685-862-09	SCREW +BVTT 2.6X6 (S)	
#5	7-685-134-19	SCREW +PTPWH 2.6X8 (TYPE2)	
#6	7-627-556-08	SCREW +P 2.6X2.8	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--